

**COMMERCIAL ELECTRIC WATER HEATERS**

**Surface-Mounted/Electronic Controls 52/80/120 Gallon Models**  
**INSTALLATION CONSIDERATIONS - PRE SERVICE CHECKS**  
**- WATER HEATER CONSTRUCTION - OPERATION & SERVICE**  
**- TROUBLESHOOTING**



Printed on 6/17/2020 12:05 PM CT

**SERVICING SHOULD ONLY BE PERFORMED BY A QUALIFIED SERVICE TECHNICIAN**

# TABLE OF CONTENTS

INTRODUCTION .....	3	Contactors .....	30
Qualifications - Qualified Service Agent .....	3	Contactor Construction - How They Work .....	30
Service Warning .....	3	Contactor Configurations .....	31
Important Service Reminder .....	3	Contactor Inspection .....	32
Instruction Manual .....	4	Contactor Coil Voltage Test - At Contactor .....	33
Tools Required .....	4	Contactor Coil Voltage Test - At CCB .....	34
INSTALLATION CONSIDERATIONS .....	5	Transformers .....	35
Closed Water Systems .....	5	120 VAC Control Circuit Transformer Wiring .....	35
Thermal Expansion .....	5	120 VAC Control Circuit Transformer Test .....	36
Electrical Requirements .....	6	24 VAC Transformer Test .....	37
Grounding .....	6	Immersion Temperature Probe .....	38
Power Supply .....	6	ECO High Temperature Limit Switch .....	38
PRE SERVICE CHECKS .....	7	Temperature Sensor .....	38
Wiring Connections .....	7	Temperature Sensor Resistance Test .....	39
Service Precautions .....	7	Temperature Sensor DC Voltage Test .....	40
WATER HEATER CONSTRUCTION .....	8	ECO Continuity Test .....	40
Surface Mount Control Models .....	8	ECO Voltage Test .....	41
Electronic Control Models .....	8	ELECTRONIC CONTROLS .....	42
Heating Element Configurations .....	8	Central Control Board (CCB) .....	43
Heating Element Voltage and kW Conversion Kits .....	8	CCB Socket & Wiring Terminal Identification .....	44
OPERATION & SERVICE .....	11	CCB Enable/Disable Circuit(s) Test .....	46
Principles of Electricity .....	11	Checking Power and Ground to the CCB .....	47
Voltage .....	11	Electronic Control System .....	49
Amperage .....	11	Control System Features .....	49
Ohms .....	11	Control System Navigation .....	49
Wattage .....	11	The Desktop Screen .....	50
Ohm's Law .....	12	Temperatures Menu .....	53
Single- and Three-Phase Power .....	13	Temperature Settings .....	54
Checking Single Phase (1Ø) Power .....	14	Heater Status Menu .....	55
Checking Three Phase (3Ø) Power .....	15	Economy Mode Setup Menu .....	56
Phase Conversions - Surface Mount Control Models .....	16	Alarm Output Setup Menu .....	61
Phase Conversions - Electronic Control Models .....	17	Display Settings Menu .....	62
Fuses .....	18	Heater Information Menu .....	63
Ohmmeter Method .....	18	Current Fault / Alert Menu .....	64
Volt Meter Method .....	18	Restore Factory Defaults Menu .....	65
Surface Mount Thermostats .....	19	TROUBLESHOOTING .....	66
Thermostat & ECO Test .....	20	Common Service Problems .....	66
Heating Elements .....	21	No Hot Water .....	66
Heating Element Construction .....	21	Not Enough Hot Water .....	66
Heating Element Ratings .....	22	Water Heater Trips Breaker .....	67
Heating Element Configurations .....	22	Contactor Chatter .....	67
Heating Element Amperage .....	23	Surface-Mount Control Models .....	67
Replacing Heating Elements .....	27	Electronic control Models .....	67
Element Sensors .....	28	Fault Conditions .....	67
Element Sensor Construction .....	28	Alert Conditions .....	67
Element Sensor Functions .....	28	Resetting Control System .....	67
Element Sensor Operation .....	29	Fault And Alert Messages .....	69

---

## INTRODUCTION

This service manual is designed to be an aid in servicing and troubleshooting the commercial electric water heater models listed on the cover. The instructions, illustrations, and procedures contained in this manual are used to verify proper operation and to diagnose and repair common service problems.

This service handbook does not replace or supersede the instruction manual that came with the water heater. Always refer to the instruction manual that came with the water heater for complete installation instructions. If the instruction manual is not available, copies can be obtained from the manufacturer's web site or by calling the technical support phone number shown on the back cover of this manual.

Review the *Common Service Problems (page 66)* prior to performing any service procedures.

### QUALIFICATIONS - QUALIFIED SERVICE AGENT

---

Servicing the products referenced in this manual requires ability equivalent to that of a Qualified Agency (as defined by ANSI below) in the field involved. Installation skills such as plumbing, electrical supply are required in addition to diagnostic and electrical testing skills when performing service. Call the toll free phone number listed on the back cover of this manual for technical assistance.

**ANSI Z223.1 2006 Sec. 3.3.83:** "Qualified Agency" - "Any individual, firm, corporation or company that either in person or through a representative is engaged in and is responsible for (a) the installation, testing or replacement of gas piping or (b) the connection, installation, testing, repair or servicing of appliances and equipment; that is experienced in such work; that is familiar with all precautions required; and that has complied with all the requirements of the authority having jurisdiction."

### SERVICE WARNING

If you are not qualified (as defined by ANSI above) and licensed or certified as required by the authority having jurisdiction to perform a given task do not attempt to perform any of the service, diagnostic or troubleshooting procedures described in this manual. If you do not understand the instructions given in this manual or do not feel confident in your abilities to perform a given task do not attempt to perform any procedures outlined in this manual. Call the toll free phone number listed on the back cover of this manual for technical assistance.

### IMPORTANT SERVICE REMINDER

---

When performing any troubleshooting step outlined in this manual, always consider the wiring and connectors between components. Perform a close visual inspection of all wiring and connectors to and from a given component before replacement. Ensure wires were stripped before being crimped in a wire connector. Ensure wires are crimped tightly in their connectors. Ensure connection pins in sockets and plugs are not damaged or worn. Also ensure plugs and sockets are mating properly and providing good contact.

Failure to perform this critical step or failing to perform this step thoroughly often results in needless down time, unnecessary parts replacement, and customer dissatisfaction.

## INSTRUCTION MANUAL

---

Have a copy of the instruction manual that came with the water heater on hand for the correct model water heater you are working with before servicing.

Installation information given in this service manual **IS NOT** a complete installation instruction. Installation information covered in this service manual has a limited focus as it applies to servicing. This service manual does not replace or supersede the instruction manual that came with the water heater. Always refer to the instruction manual that came with the water heater for complete installation instructions.

If the instruction manual is not on hand, copies can be obtained from the manufacturer's web site or by calling the technical support phone number shown on the water heater labeling and the back cover of this service manual.

## TOOLS REQUIRED

---

- The instruction manual that came with the water heater.
- All tools common to installation and service of commercial water heaters, such as hand tools, torch, pipe wrenches, etc.
- Electrical switch lock out device - used to secure disconnect switches/breaker panels while servicing.
- Insulated fuse puller(s).
- Adhesive numbered/colored wire markers - 3M Scotch Code SDR0-9 Numbered Wire Markers; 3M Scotch Code STD-C Colored Wire Markers or equivalent.
- Volt-Ohm Multi Meter - recommend Fieldpiece HS36, Fluke 187, UEI model DL289 or equivalent capable of measuring:
  - AC Voltage up to 600 VAC
  - DC Voltage up to 24 VDC
  - Ohms up to 2,000,000 ohms
- AC amp meter - recommend UEI model DL289 or equivalent capable of measuring:
  - AC amperage up to 400 amps

---

## INSTALLATION CONSIDERATIONS

Installation information given in this service manual **IS NOT** a complete installation instruction. Installation information covered in this service manual has a limited focus as it applies to servicing. This service manual does not replace or supersede the instruction manual that came with the water heater. Always refer to the instruction manual that came with the water heater for complete installation instructions.

If the instruction manual that came with the water heater is not on hand, copies can be obtained from the manufacturer's web site or by calling the technical support phone number shown on the water heater labeling and the back cover of this service manual.

### CLOSED WATER SYSTEMS

---

Water supply systems may, because of code requirements or such conditions as high line pressure among others, have installed devices such as pressure reducing valves, check valves, and back-flow preventers. Devices such as these cause the water system to be a **closed system**.

Virtually all commercial and most residential water supply systems are closed systems today. Closed water systems will experience thermal expansion which, if not controlled with a properly installed and sized thermal expansion tank, can cause premature failure (leakage) of the water heater. Water heater failure (leakage) on closed systems where there is not a thermal expansion tank installed is not covered under the limited warranty.

### THERMAL EXPANSION

---

As water is heated, it expands (thermal expansion). In a closed system the volume of water will grow when it is heated. As the volume of water grows there will be a corresponding increase in water pressure due to thermal expansion. Thermal expansion can cause premature tank failure (leakage). ***This type of failure is not covered under the limited warranty.*** Thermal expansion can also cause intermittent temperature-pressure relief valve operation: water discharged from the valve due to excessive pressure build up. ***This condition is not covered under the limited warranty.*** The temperature-pressure relief valve is not intended for the constant relief of thermal expansion.

A properly sized thermal expansion tank should be installed on all closed systems to control the harmful effects of thermal expansion.

## ELECTRICAL REQUIREMENTS

---

### GROUNDING

Review the electrical ground requirements given in the instruction manual that came with the water heater and ensure that the water heater has been properly grounded.

The water heater must be grounded in accordance with the National Electric Code and/or local codes. These codes must be followed in all cases.

The water heater must be connected to a grounded metal, permanent wiring system; or an equipment grounding conductor must be run with the circuit conductors and connected to the equipment grounding terminal or lead on the water heater.

**Service Note:** The water heaters covered in this manual are equipped with electronic controls that may experience erratic operation if the water heater is not properly grounded.

### POWER SUPPLY

Review the electrical requirements listed on the water heater's rating label and in the instruction manual that came with the water heater. Ensure the branch circuit supplying power to the water heater is within these requirements and properly connected.

Ensure the power supply phase (single or three phase / 1Ø, 3Ø) and power supply voltage match the water heater's rating label. See *Single- and Three-Phase Power* (page 13). The electric water heater models covered by this service manual are phase convertible. See *Phase Conversions - Surface Mount Control Models* (page 16) and *Phase Conversions - Electronic Control Models* (page 17).

---

## PRE SERVICE CHECKS

### WIRING CONNECTIONS

---

With the power supply to the water heater turned off, ensure that the wiring connections are properly tightened to all components including: high-voltage terminal blocks, fuse blocks, contactors, transformers, and heating elements.

Loose connections at any connection point will cause increased amperage and excessive heat, which can damage wiring and components. Whenever worn or damaged wiring and components must be replaced, ensure all wiring connections are properly tightened before putting the water heater back in service.

### SERVICE PRECAUTIONS

---

1. **DO NOT** energize the branch circuit supplying power to the water heater or test the water heater electrical system before the water heater is completely filled with water. Read the start-up procedures in the instruction manual that came with the water heater.
2. Be sure to turn off the power and use a lock-out device at the branch circuit power supply disconnect switch or breaker when servicing the electrical system of the water heater. Never touch electrical components with wet hands or when standing in water.
3. When replacing heating elements, ensure they are rated at the correct voltage and kW for the water heater being serviced. See *Heating Element Ratings* (page 22), *Heating Element Configurations* (page 22) and *Replacing Heating Elements* (page 27).
4. When replacing fuses, use an insulated fuse puller to remove and install fuses. Always use the correct size for the circuit. See the instruction manual that came with the water heater for fuse size requirements. See *Fuses* (page 18).
5. Using an AC volt meter, measure the branch circuit power supply voltage to the water heater. Ensure the measured voltage of the branch circuit supplying power to the water heater matches the water heater's rating label. See *Single- and Three-Phase Power* (page 13).
6. Ensure the internal power phase configuration matches the power supply to the water heater. The water heaters covered by this manual are phase convertible. See *Phase Conversions - Surface Mount Control Models* (page 16) and *Phase Conversions - Electronic Control Models* (page 17).
7. The electronic control models covered by this manual are equipped with contactors and a multi-tap control circuit transformer. This is a step-down transformer that outputs 120 VAC (secondary winding), which is used to power the electronic control system and energize the contactor coils. The transformer can accommodate different power supply voltages and has multiple input voltage connections or "taps." Ensure the input supply voltage (primary winding) wiring to the transformer is connected properly. See *Transformers* (page 35).

**Service Note: Contactor Chatter:** Incorrect supply voltage wiring to the multiple tap 120 VAC control-circuit transformer will cause low/high output voltage from the transformer. This can cause contactors to open and close their contacts rapidly (contactor chatter) and result in permanent damage to the contactors. Ensure that the primary winding of the multiple tap 120 VAC control circuit transformer is wired to match the power supply voltage. See *Transformers* (page 35).

---

## WATER HEATER CONSTRUCTION

There are two types of commercial electric water heaters covered in this manual. See *Figure 1* (page 9) and *Figure 2* (page 10).

---

### SURFACE MOUNT CONTROL MODELS

The first type of water heater covered in this manual is equipped with surface mount thermostat/ECO controls. There will be separate thermostat/ECO (energy cut out) combination controls mounted to the surface of the storage tank directly above the heating elements they control. For example, a water heater equipped with 9 heating elements will have 9 combination thermostat/ECO controls. These combination thermostat/ECO controls sense temperature directly from the surface of the storage tank. Each combination control will have a temperature setting adjustment screw. As the tank (water) temperature rises and falls, each individual thermostat will de-energize and energize one heating element according to its temperature setting.

---

### ELECTRONIC CONTROL MODELS

The second type of water heater covered in this manual is equipped with an electronic control system. These are the *electronic control models*. The control system senses temperature electrically from an *immersion temperature probe*. The probe is installed in a threaded opening in the storage tank (wet well) and senses water temperature directly. As the stored water temperature rises and falls, the control system de-energizes and energizes banks of three heating elements indirectly using electromagnetic contactors. The control system energizes the electromagnetic contactor's (120 VAC) coil, causing the switch contacts of the contactor to close, which in turn supplies power to the heating elements.

---

### HEATING ELEMENT CONFIGURATIONS

Both types of water heaters covered in this manual are factory equipped with either 3, 6 or 9 heating elements, depending on how they were ordered from the factory. See *Table 1* (page 22). Each group of 3 heating elements (physically installed in diagonal rows of 3) is referred to as a "Bank" of heating elements. Bank 1 is the lowest group of 3 heating elements, Bank 2 is the middle group of 3 heating elements, and Bank 3 is the upper group of 3 heating elements. See *Figure 1* (page 9) and *Figure 2* (page 10).

---

### HEATING ELEMENT VOLTAGE AND KW CONVERSION KITS

Voltage and heating element kW conversion kits are available for the water heaters covered in this manual. Voltage and kW conversions are not covered in this manual. Voltage and kW conversion kits with instructions are available from local distributors and can be ordered from the manufacturer's parts department by calling the toll free number listed on the back cover of this manual. Have the complete model and serial number along with the listed voltage and input kW from the rating label of the water heater on hand before calling.

**Service Note:** There are field conversion kits to increase/decrease kW input and change voltage. However, conversion kits do not allow adding heating elements to a water heater. Water heaters must remain as they were configured with 3, 6 or 9 heating elements from the factory. **HEATING ELEMENTS CANNOT BE ADDED TO A WATER HEATER.**




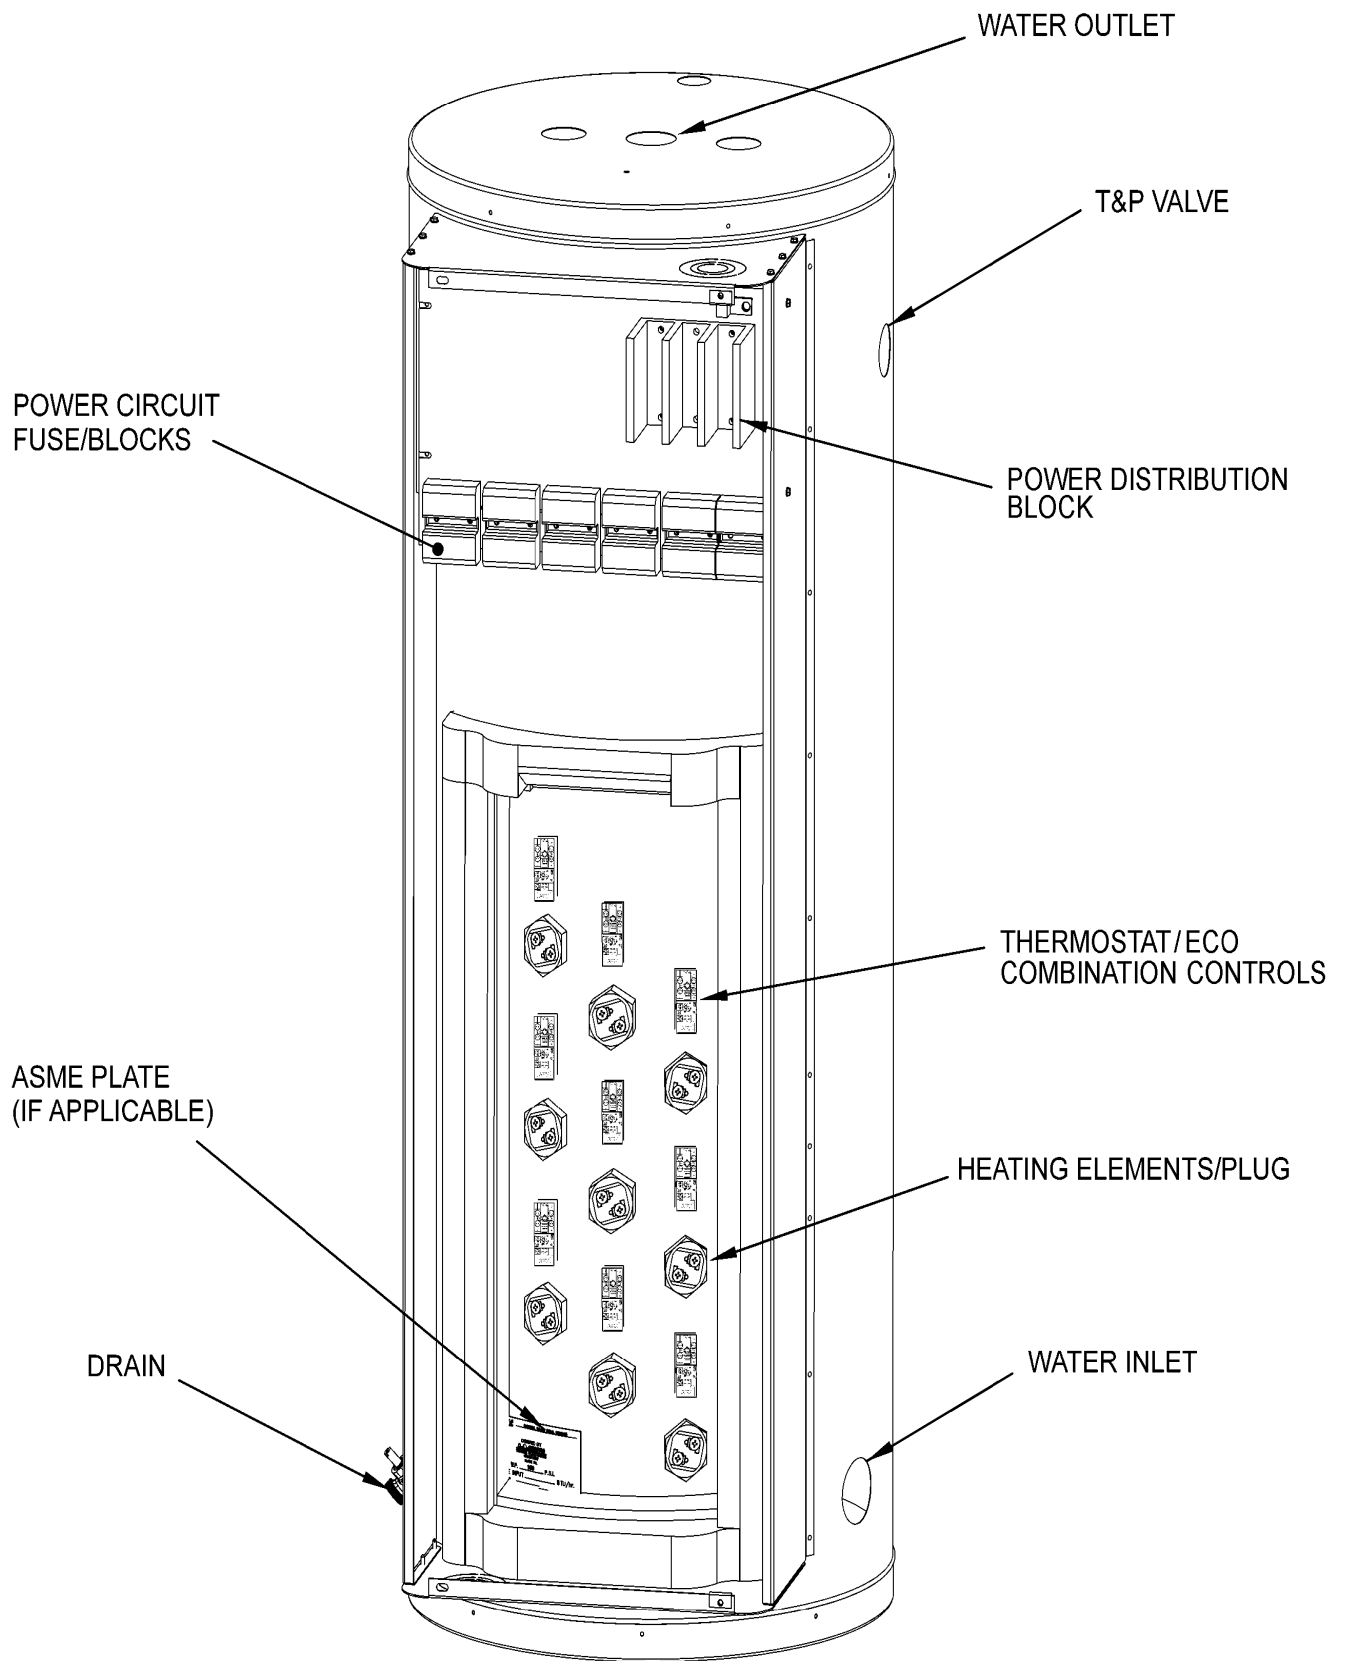


Figure 1. Surface-Mounted Control Models

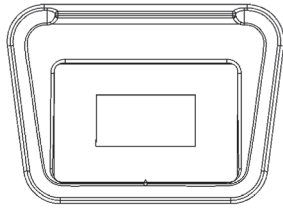

UIM - USER INTERFACE MODULE  
ON FRONT CABINET

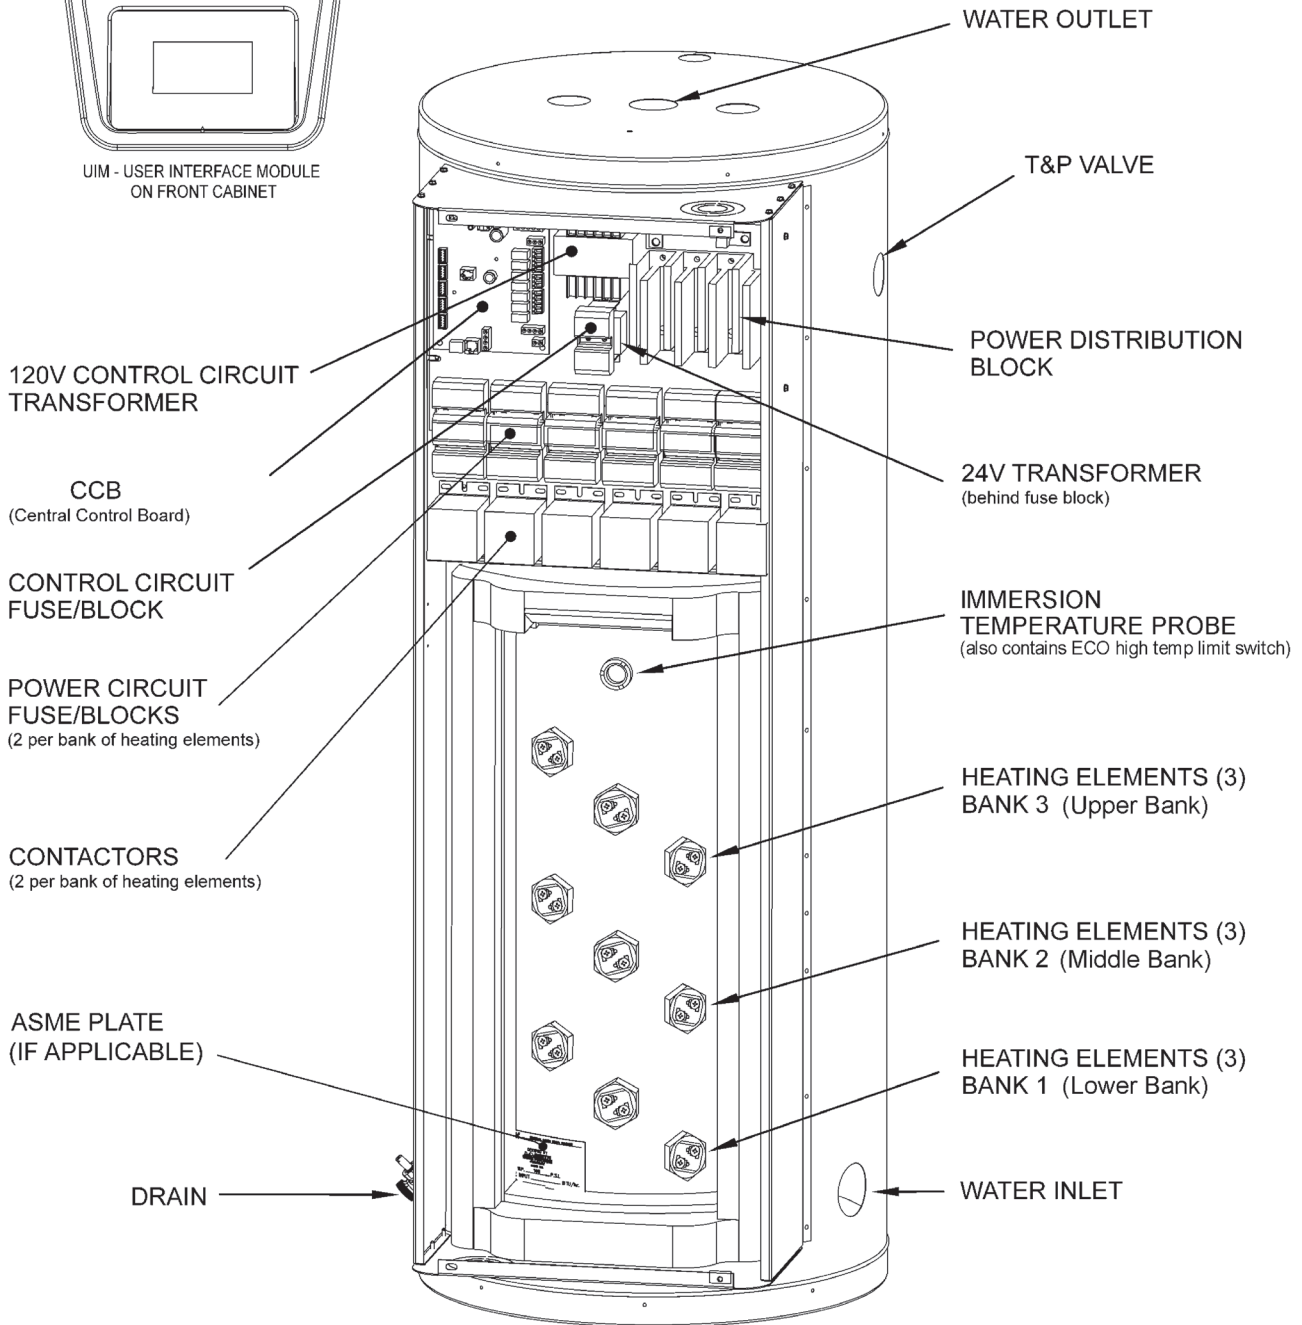


Figure 2. Electronic Control Models

---

## OPERATION & SERVICE

This section of the manual will cover the principles of electricity, single- and three-phase power, fuses, heating element construction & operation, heating element sensors, contactors, common service procedures, and more. Information and service procedures presented in this section will be referenced in the troubleshooting sections at the end of this manual.

### PRINCIPLES OF ELECTRICITY

---

#### VOLTAGE

The unit of measurement used to quantify electrical pressure or the force that causes electrical energy to flow is the volt or voltage. Volt meters are used to determine if there is an adequate supply of electricity or voltage to a heating element.

#### AMPERAGE

The unit of measurement used to quantify the rate at which electrical current is flowing is the ampere or amp. Amp meters are used to determine if a heating element is working - if there is adequate current flowing through the heating element.

#### OHMS

The unit of measurement used to quantify the opposition or “resistance” to the flow of electricity is the ohm. As resistance (ohms) in an electrical circuit increases current (amperage) will decrease and as resistance decreases current will increase. Ohmmeters are used for measuring the resistance of heating elements, for open circuit continuity tests on heating elements and for shorted to ground continuity tests on heating elements.

**Service Note:** Volt, ohm and amp meter test instruments are necessary to perform the service and diagnostic procedures outlined in this manual. See *Tools Required (page 4)*.

#### WATTAGE

The unit of measurement used to quantify the rate or amount of electrical energy being used is the watt. One thousand watts is referred to as one kilowatt. Heating elements are rated in kilowatts expressed as kW. The higher the kilowatt rating of a heating element the more power it will use and the more heat it will generate. One kilowatt generates 3412 Btu of heat.

## OHM'S LAW

A law that explains the relationship between voltage, current and resistance. The law states that the electric current flowing through a conductor is equal to the voltage divided by the resistance. The following equations further explain Ohms Law.

V = volts (electrical pressure)

A = amps (electrical flow/current)

O = ohms (resistance to electrical flow/current)

W = watts (rate or amount of electricity used)

Ohm's Law applied to single phase power - each loop of a six wire element:

$V \div A = O$	$W \div V = A$	$V \div O = A$	$V \times A = W$	$A \times O = V$	$W \div A = V$
----------------	----------------	----------------	------------------	------------------	----------------

**Service Note:** Heating elements used on the water heaters covered by this manual are "two wire" single phase elements. Though the power supply to the water heater may be three phase, calculations to determine amperage and resistance for individual heating elements is based on Ohm's Law applied to single phase power. The kW rating of individual heating elements is marked on the end of each element. See **Figure 17** (page 22). Approximate current (amps) and resistance (ohms) for individual heating elements are provided in tables in **Heating Element Amperage** (page 23).

See the water heater's rating label for the listed voltage/phase power supply requirements, total input kW, and total/full load amp draw of the water heater being serviced.

### Calculating Amps/Ohms/Volts/Watts

Using a 240 volt electric water heater equipped with a 4500 watt heating element as an example, Ohm's Law can be used to determine:

1. What the resistance of each heating element should be:
  - 240 volts  $\div$  18.75 amps = 12.8 ohms
2. What the correct amp reading should be:
  - 4500 watts  $\div$  240 volts = 18.75 amps
  - 240 volts  $\div$  12.8 ohms = 18.75 amps
3. How many watts are being used (how much heat is being generated):
  - 240 volts  $\times$  18.75 amps = 4500 watts (4.5 KW)
4. What the voltage is:
  - 18.75 amps  $\times$  12.8 ohms = 240 volts
  - 4500 watts  $\div$  18.75 amps = 240 volts

## SINGLE- AND THREE-PHASE POWER

The water heaters covered in this manual can be field converted for a single- or three-phase power supply. See *Phase Conversions - Surface Mount Control Models* (page 16) and *Phase Conversions - Electronic Control Models* (page 17). These water heaters can be factory ordered for standard North American power supplies; 277/208/240/480 volt models. 277-volt models are single phase only. Voltage conversion kits with instructions are available from the manufacturer. Voltage conversions are not covered in this manual. Verifying that the power supply is adequate is a typical first step during most service diagnostic procedures. The illustrations and instructions that follow outline how this is done using a standard AC volt meter. See *Tools Required* (page 4).

**Service Warning:** *Never touch any wiring inside the water heater until the main power supply to the water heater has been secured. Secure power to the water heater by turning off the power supply breaker and/or disconnect switch AND verify with a volt meter that all wiring has no voltage present before touching any wiring inside the water heater's control panel.*

**Service Warning:** *Zero or low voltage readings between internal wiring and/or Power Distribution Block terminals and ground can be due to an inadequate earth ground. TREAT ALL WIRES AS BEING HOT until it has been determined there is no voltage present.*

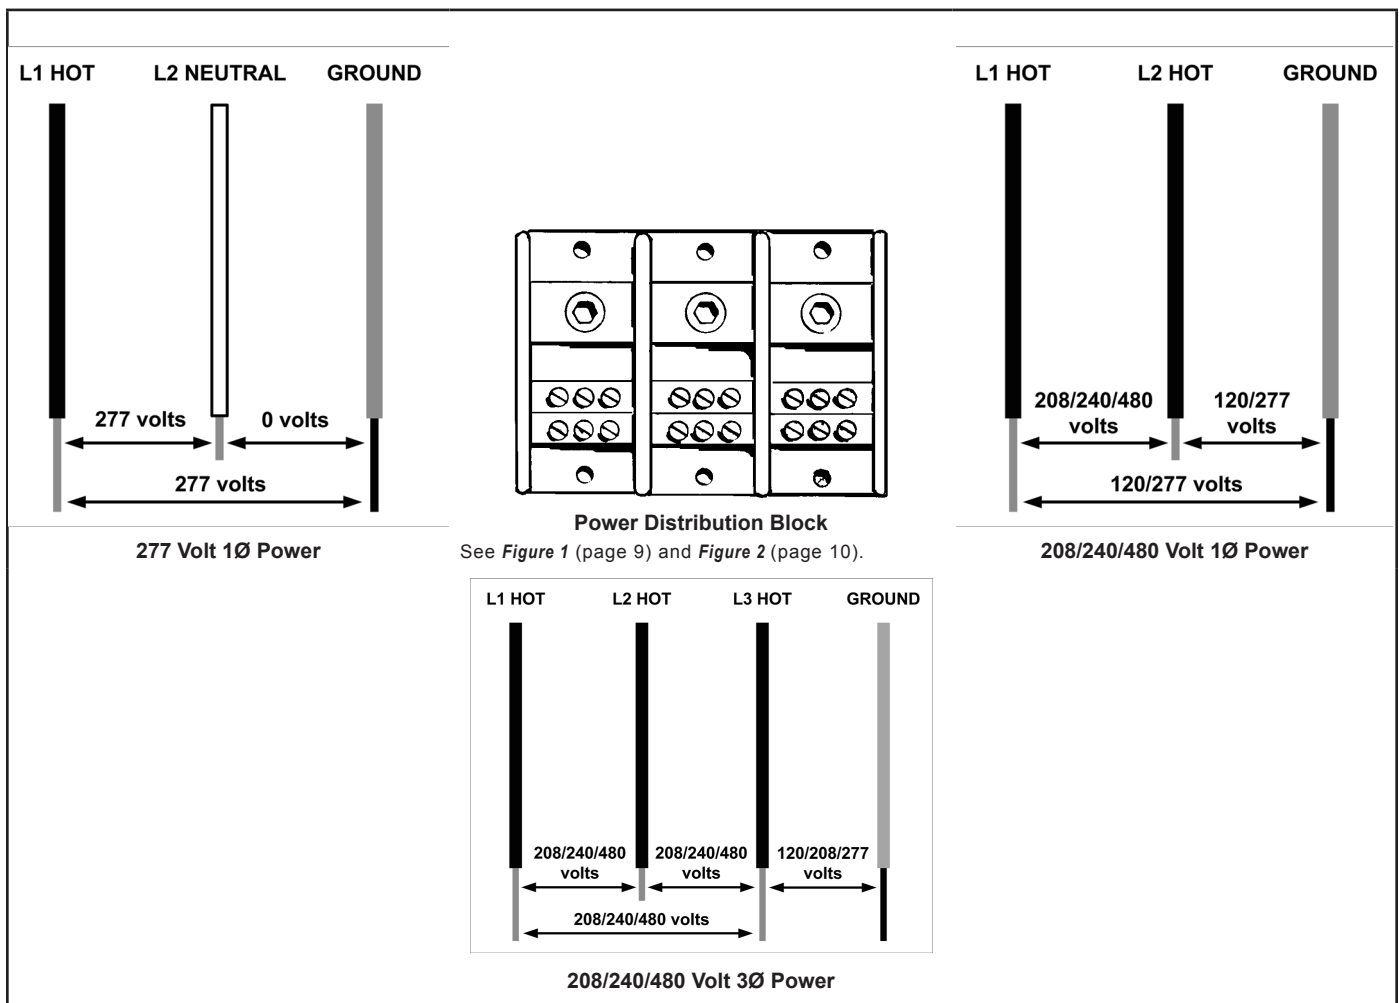


Figure 3. Wire Identification for Verification of Power Supply

## CHECKING SINGLE PHASE (1Ø) POWER

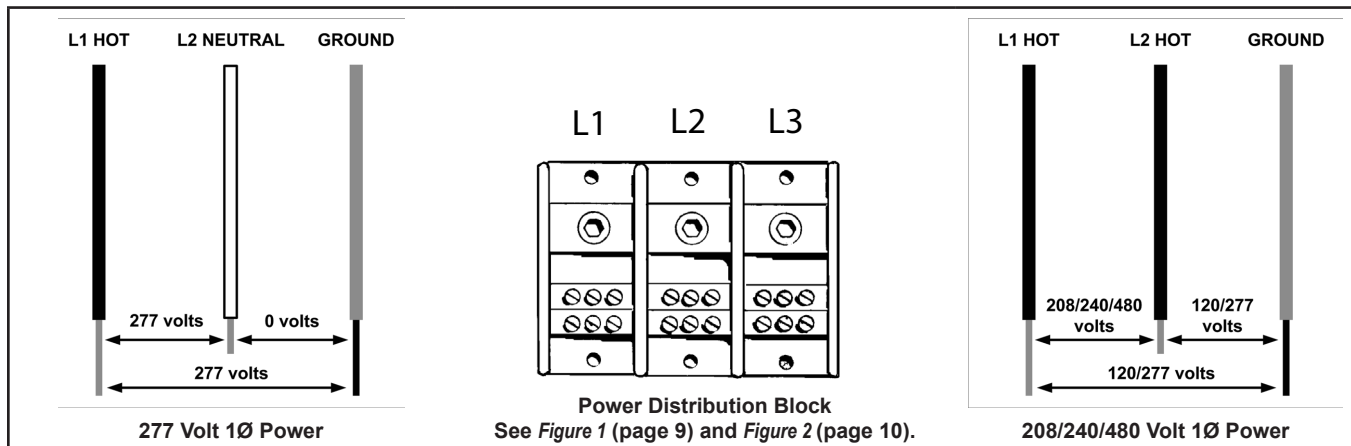
A single phase power supply consists of two wires connected to the L1 and L2 terminals of the Power Distribution Block, the L3 terminal is not used. On a single phase (1Ø) 277 volt power supply one of the two wires is a “neutral” wire and does have voltage present. On a single phase (1Ø) 277 volt power supply the “hot” wire should be connected to the L1 terminal and the “neutral” wire should be connected to the L2 terminal. On 208, 240 and 480 volt power supplies both wires connected to L1 and L2 are “hot” with voltage present.

**Voltage Between Terminals:** With the power supply to the water heater turned on set the volt meter to an AC voltage range above the expected voltage (600 VAC or higher range initially) and carefully touch the two test probes to the L1 and L2 terminals of the water heater’s Power Distribution Block. The voltage readings should match the voltage listed on the water heater’s rating label by  $\pm 5\%$ .

**Voltage to Ground:** With the power supply to the water heater turned on check between the L1 terminal and the ground wire connection inside the water heater’s control panel. Check between L2 and ground in the same way. On a 277 volt power supply only one of the two terminals should read 277 volts, the neutral will read approximately zero volts. On 208/240 volt power supplies each reading should be approximately 120 volts to ground. On 480 volt power supplies each reading to ground should be approximately 277 volts.

**Service Warning:** *Zero or low voltage readings between internal wiring and/or Power Distribution Block terminals and ground can be due to an inadequate earth ground. TREAT ALL WIRES AS BEING HOT until it has been determined there is no voltage present.*

If the voltage readings taken between L1 and L2 are more than  $\pm 5\%$  of the listed voltage on the water heater’s rating label or if the readings to ground were far less (at or near zero volts) than expected: check the fuses and the breaker and/or disconnect switch supplying power to the water heater. Contact a Qualified/Licensed electrician to restore power. If the voltage readings taken are a standard voltage (277/208/240/480) but do not match the listed voltage on the water heater’s rating label, secure power to the water heater. **DO NOT** place it back in service. Contact the distributor and/or manufacturer to determine if the water heater can be field converted and/or replaced to match the power supply at the location.



## CHECKING THREE PHASE (3Ø) POWER

A three phase power supply consists of three wires connected to the L1, L2 and L3 terminals of the Power Distribution Block. All three wires are “hot” with voltage present.

**Voltage Between Terminals:** Set the volt meter to an AC voltage range above the expected voltage (600 VAC or higher range initially). Checking three phase (3Ø) power requires that three voltage readings be taken between all possible pairings of the terminals on the Power Distribution Block. Carefully touch the two test probes between:

1. L1 and L2 terminals of the water heater’s Power Distribution Block
2. L2 and L3 terminals of the water heater’s Power Distribution Block
3. L1 and L3 terminals of the water heater’s Power Distribution Block

All three voltage readings should match the voltage listed on the water heater’s rating label by  $\pm 5\%$ .

**Voltage to Ground:** Check between each of the three terminals (L1, L2 and L3) of the Power Distribution Block and the ground wire connection inside the water heater’s control panel. On some 208 volt power supplies each reading will be approximately 120 volts to ground. Some 208 volt models will have a “stinger leg” with one of the three readings to ground measuring 208 volts - 208 volt stinger legs should be connected to L2. On 240 volt power supplies each reading should be approximately 120 volts to ground. On 480 power supplies each reading to ground should be approximately 277 volts.

**Service Warning:** *Zero or low voltage readings between internal wiring and/or Power Distribution Block terminals and ground can be due to an inadequate earth ground. **TREAT ALL WIRES AS BEING HOT** until it has been determined there is no voltage present.*

If the voltage readings taken between L1, L2 and L3 are more than  $\pm 5\%$  of the listed voltage on the water heater’s rating label or if the readings to ground were far less (at or near zero volts) than expected: check the fuses and the breaker and/or disconnect switch supplying power to the water heater. Contact a Qualified/ Licensed electrician to restore power. If the voltage readings taken are a standard voltage (277/208/240/480) but do not match the listed voltage on the water heater’s rating label secure power to the water heater. DO NOT place it back in service. Contact the distributor and/or manufacturer to determine if the water heater can be field converted and/or replaced to match the power supply at the location.

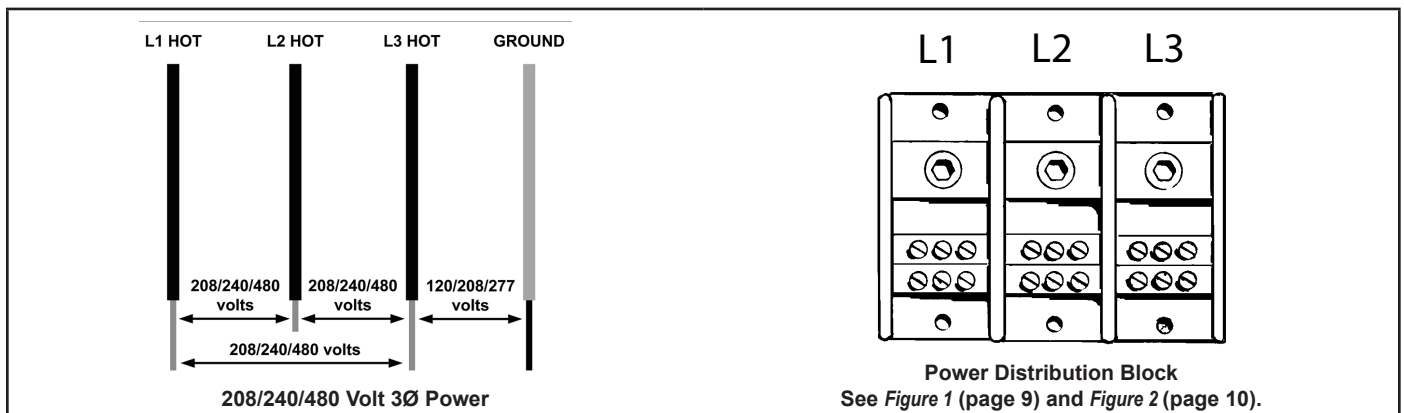


Figure 5. Measuring Power Supply Voltage to the Water Heater (3Ø Power)

## PHASE CONVERSIONS - SURFACE MOUNT CONTROL MODELS

Internal wiring connections between the Power Distribution Block and the heating elements are different on Surface Mount Control (see *Figure 1* (page 9)) and Electronic Control (see *Figure 2* (page 10)) model water heaters. Because of these differences there are two methods for field converting these models to work with single and three phase power supplies.

**Service Note:** 208 volt 54 kW models are 3 phase only and **CAN NOT** be converted to single phase. All other models can be phase converted.

### **SECURE MAIN POWER SUPPLY TO THE WATER HEATER AT THE MAIN BREAKER OR DISCONNECT SWITCH FIRST.**

**Service Warning:** *Never touch any wiring inside the water heater until the main power supply to the water heater has been turned off. Verify with a volt meter that all wiring has no voltage present before touching any wiring inside the water heater's control panel.*

#### Surface-Mount Controls - Three Phase to Single Phase

1. Disconnect blue wires from terminal L-2.
2. Connect all blue wires to terminal L-1 (with black wires).
3. Disconnect all red wires from terminal I-3.
4. Connect all red wires to terminal L-2 (with yellow wires).
5. Incoming power will be connected to terminals L-1 and L-2.

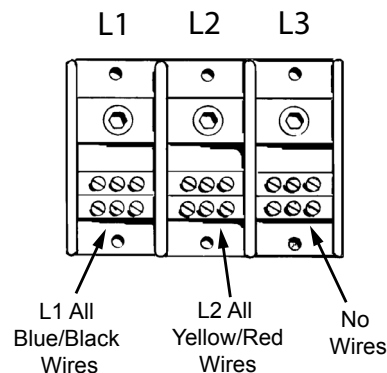


Figure 6. Single-Phase Power Distribution Block Wiring.  
See Figure 1 (page 9)

**Service Note:** 208 volt 54 kW models are three-phase only. These models **CAN NOT** be converted to single phase. Keep in mind when converting other models from three phase power to single phase power the current/ampereage will increase significantly. Ensure breakers, fuses and wiring are properly sized to allow for the increased ampereage before placing the water heater back in service. Contact a Qualified/Licensed electrician to make necessary changes.

#### Surface-Mount Controls - Single Phase to Three Phase

Do the following to convert single-phase power to three-phase power for water heaters with **surface-mount controls**:

1. Disconnect blue wires from terminal L-1.
2. Disconnect red wires from terminal L-2.
3. Connect all blue wires to terminal L2 (with yellow wires).
4. Connect red wires to terminal L3.
5. Incoming power will be connected to terminals L-1, L-2, and L3.

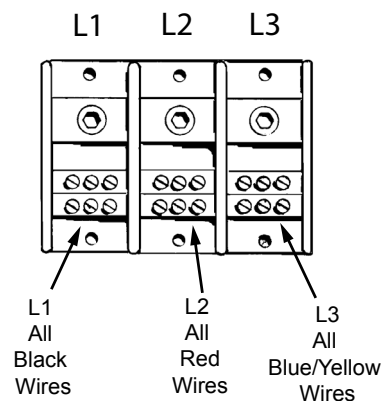


Figure 7. Three-Phase Power Distribution Block.  
See Figure 1 (page 9).

**Service Note:** Keep in mind when converting from single phase power to three phase power, the current/ampereage will decrease significantly. Ensure breakers and fuses are not oversized before placing the water heater back in service. Contact a Qualified/Licensed electrician to make necessary changes.



## PHASE CONVERSIONS - ELECTRONIC CONTROL MODELS

Internal wiring connections between the Power Distribution Block and the heating elements is different on Surface Mount Control (see *Figure 1* (page 9)) and Electronic Control (see *Figure 2* (page 10)) model water heaters. Because of these differences there are two methods for field converting these models to work with single and three phase power supplies.

**Service Note:** 208 volt 54 kW models are three-phase only and **CAN NOT** be converted to single phase. All other models can be phase converted.

**SECURE MAIN POWER SUPPLY TO THE WATER HEATER AT THE MAIN BREAKER OR DISCONNECT SWITCH FIRST.**

**Service Warning:** *Never touch any wiring inside the water heater until the main power supply to the water heater has been turned off. Verify with a volt meter that all wiring has no voltage present before touching any wiring inside the water heater's control panel.*

### Electronic Control Models - Three Phase to Single Phase

1. Disconnect blue wires and yellow wires from terminal L-3.
2. Connect all blue wires to terminal L-1 (with black wires).
3. Connect all yellow wires to terminal L-2 (with red wires).
4. Incoming power will be connected to terminals L-1 and L-2.

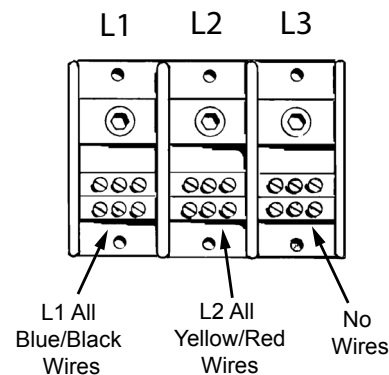


Figure 8. Single-Phase Power Distribution Block Wiring

**Service Note:** 208 volt 54 kW models are three-phase only. These models **CAN NOT** be converted to single phase. Keep in mind when converting other models from three phase power to single phase power the current/amperage will increase significantly. Ensure breakers, fuses, and wiring are properly sized to allow for the increased amperage before placing the water heater back in service. Contact a Qualified/Licensed electrician to make necessary changes.

### Electronic Control Models - Single Phase to Three Phase

1. Disconnect blue wires from terminal L-1.
2. Disconnect yellow wires from terminal L-2.
3. Connect all blue wires and yellow wires to terminal L3.
4. Incoming power will be connected to terminals L-1, L-2, and L3.

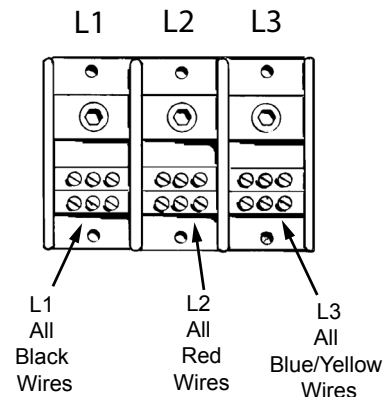


Figure 9. Three-Phase Power Distribution Block Wiring

**Service Note:** Keep in mind when converting from single phase power to three phase power the current/amperage will decrease significantly. Ensure breakers and fuses are not oversized before placing the water heater back in service. Contact a Qualified/Licensed electrician to make necessary changes.

## FUSES

The water heaters covered in this manual have power circuit fuses to protect the heating element circuits. Electronic Control models will have two additional fuses to protect the primary winding of the 120 Volt Control Circuit Transformer. See *Figure 1* (page 9) and *Figure 2* (page 10) for location. Testing fuses requires an ohmmeter, an AC volt meter, and an insulated fuse puller. See *Tools Required* (page 4).

**Service Note: Replacement Fuses:** Replacement fuses **MUST BE** of the same value and type as the factory installed fuses - Class G/SC-30 Amp/Time Delay. Replacement 120 Volt Control Circuit Transformer fuses **MUST BE** of the same value and type as the factory installed fuses - Class G/SC-3 Amp. Call the toll free technical support or parts department phone number on the back cover of this manual for further assistance.

### OHMMETER METHOD

1. Secure power to the water heater at the main breaker or disconnect switch.
2. Remove each fuse to be tested with an insulated fuse puller.
3. Set the ohmmeter to it's lowest resistance range (< 200) or to an audible beep continuity test setting if so equipped.
4. Touch the meter probes to both ends of each fuse simultaneously.
5. If the fuse being tested shows a low resistance (< 1 ohms) or the continuity test feature sounds an audible beep the fuse being tested is good and can be re-installed.
6. If the fuse being tested shows infinite resistance (open circuit) or the continuity test feature does not sound an audible beep the fuse being tested is blown and must be replaced.

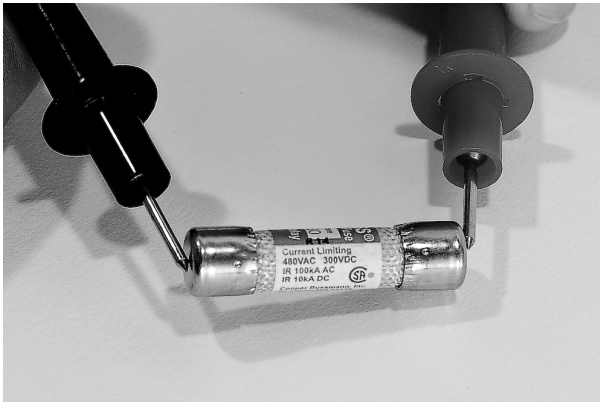


Figure 10. Fuse Test - Ohmmeter Method



Figure 11. Fuse Test - Volt Meter Method

### VOLT METER METHOD

Fuses can also be checked using an AC volt meter. The power supply must be turned on and a call for heat must be active (all thermostats/contactors must be closed) during this test. Touch the two test probes to both ends of each fuse while still in its fuse blocks.

- A high voltage (at or above 120 VAC) reading indicates the fuse is blown.
- A zero volt reading generally indicates the fuse is good. Next check for voltage between each end of the fuse and ground to ensure voltage is present at both ends of the fuse. If no voltage is present between either end of the fuse and ground, the test has not been conclusive. Secure power to the water heater and perform the ohmmeter test method described above.

The voltage test method is a good way to quickly identify fuses that are blown but it is not always conclusive due to the dependence on power being present at both ends of the fuse, the switch contacts in thermostats/contactors being closed, and correct wiring. Keep this in mind as there may be times when a fuse that is blown tests good due to one of these dependencies not being met. The ohmmeter method described above is 100% conclusive.

## SURFACE MOUNT THERMOSTATS

The Surface Mount Control Model water heaters covered in this manual have “separate” thermostat/ECO (energy cut out) combination controls mounted to the surface of the storage tank directly above the heating elements they control. IE: a water heater equipped with 9 heating elements will have 9 thermostat/ECO controls. These controls contain two bimetal thermal switches that react to heat sensed from the surface of the water heater’s storage tank.

**Thermostat:** The thermostat portion of these controls is an automatic SPST (single pole single throw) switch - see the Internal Wiring illustration below. As the tank (water) temperature rises and falls each individual thermostat will de-energize (contact opens) and energize (contact closes) one heating element according to it’s temperature setting. The temperate setting is adjustable using the dial on the lower portion of the control. The adjustable range is 120°F/49°C to 180°F/82°C. The factory default setting is 140°F/60°C.

**ECO:** The ECO portion of these controls is a manual reset DPDT (double pole double throw) switch - see the Internal Wiring illustration below. The ECO is a high temperature limit switch designed to protect against excessively high water temperatures that can be caused by defective thermostats and grounded heating elements. The ECO temperature setting is non adjustable and fixed at 200°F/93°C. If the ECO activates (contacts open) in response to abnormally high temperatures the contacts will not close automatically, the ECO must be manually reset by pressing the red button on the top of the control. The tank temperature must cool to approximately 120°F/49°C before the ECO can be reset. When activated (contacts open) the ECO will interrupt all power supplied to the thermostat portion of the control and the heating element.

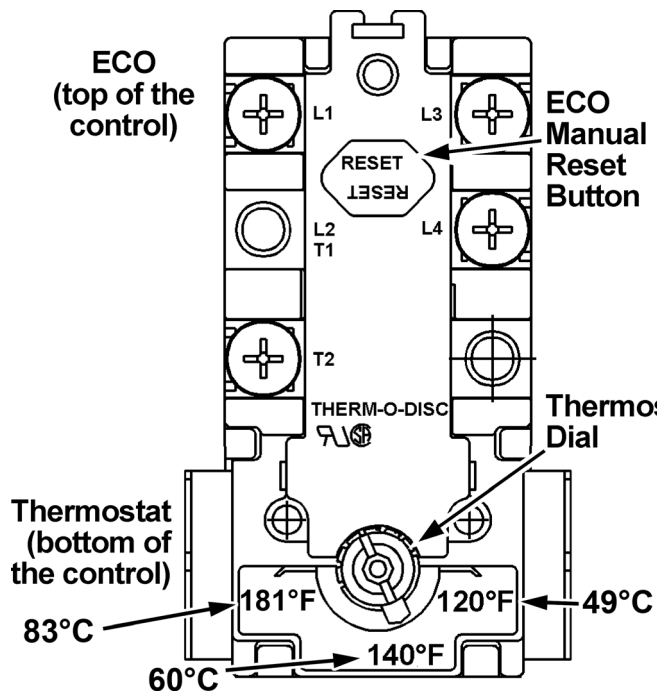


Figure 12. Thermostat/Eco Front View

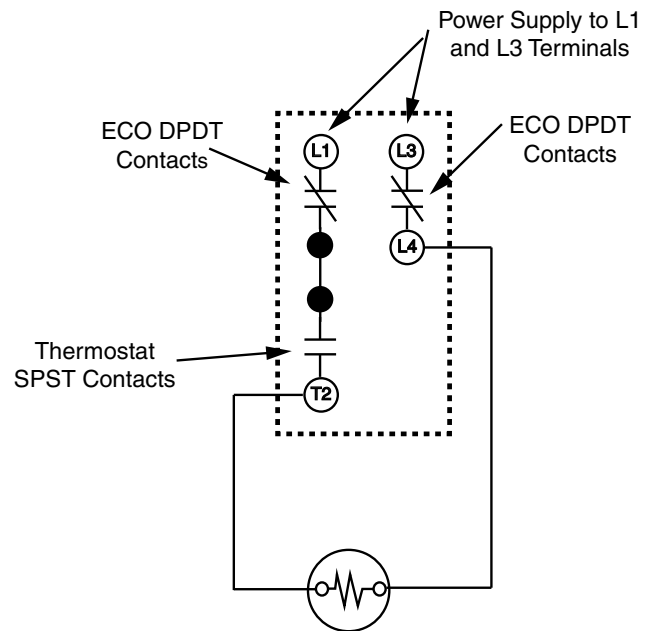


Figure 13. Thermostat/Eco Internal Wiring

Printed on 6/17/2020 12:05 PM CT

## THERMOSTAT & ECO TEST

1. Secure power to the water heater at the main breaker or disconnect switch.
2. Ensure tank temperature is less than 100°F/38°C - dump water to lower tank temperature if necessary.
3. Press the red reset button firmly on all thermostat/ECO controls.
4. Raise the temperature setting on all thermostat/ECO controls to 140°F or higher.
5. Restore power to the water heater.
6. With an AC volt meter check for voltage between the L1 and L3 terminals on the control - see illustrations below. Measured voltage should match the power supply to the water heater.

**Service Note:** If the measured voltage is zero volts or not the correct voltage ensure heating element power circuit wiring is correct (see wiring diagram on water heater) check fuses (page 17) and/or restore power to the water heater - see pages 12 - 14.

7. With an AC volt meter check for voltage between the L4 and T2 terminals on the control - see illustrations below - if the measured voltage matches the power supply to the water heater the ECO is resetting properly. If the measured voltage between L4 and T2 is low or not present the control is defective - replace the control.

**Service Note:** Grounded heating elements, defective thermostats and/or a defective ECOs can all cause frequent ECO activation. If an ECO is being frequently reset on any of the thermostat/ECO controls check all heating elements to ensure they are not grounded (see page 26) first. Replace any grounded elements. If no elements are grounded replace the thermostat/ECO control(s) that require frequent resetting.

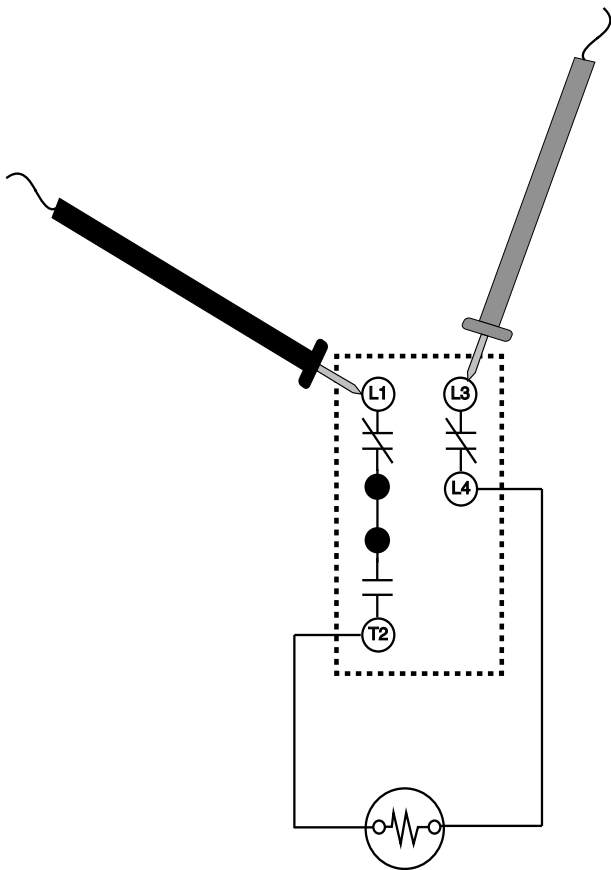


Figure 14. Step 6: Checking Power to the Control

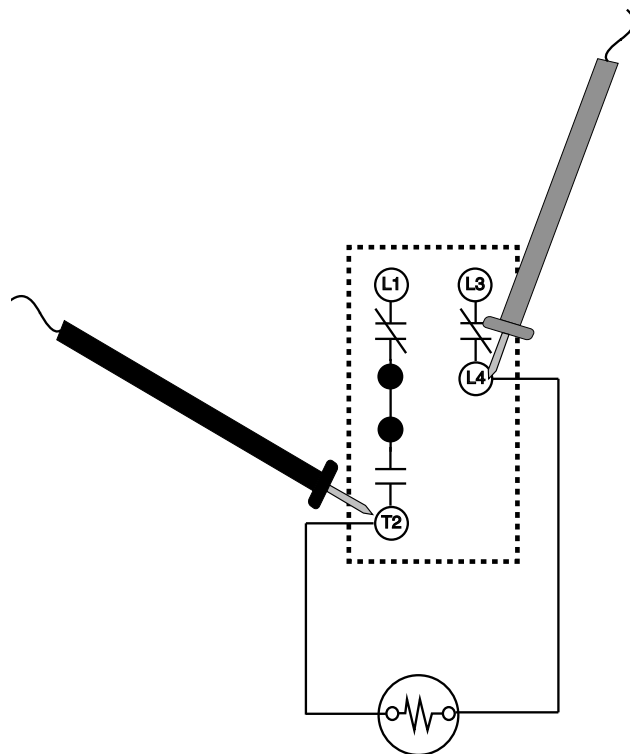


Figure 15. Step 7: Checking Power to the Heating Element

## HEATING ELEMENTS

This section of the manual provides information on how to determine the actual voltage and wattage rating of a heating element along with tables showing heating element configurations, heating element amperage and heating element resistance/ohms.

This section also contains heating element test procedures to measure; amperage, voltage, resistance and check for grounded elements. These procedures are used to determine if a heating element is defective or working properly. An AC amp meter, AC volt meter and ohmmeter are required. See *Tools Required* (page 4).

### HEATING ELEMENT CONSTRUCTION

The water heater(s) covered in this manual use electric heating elements to heat water. Heating elements convert electrical energy into heat energy.

Heating elements are constructed with metal tubing. Inside the tube is a wire conductor surrounded by an insulating material. The wire conductor inside the heating element has a relatively high resistance to the flow of electricity. Heat is generated when the electricity (voltage) applied to the heating element begins to flow (amperage) and encounters the resistance (ohms) of the wire conductor inside.

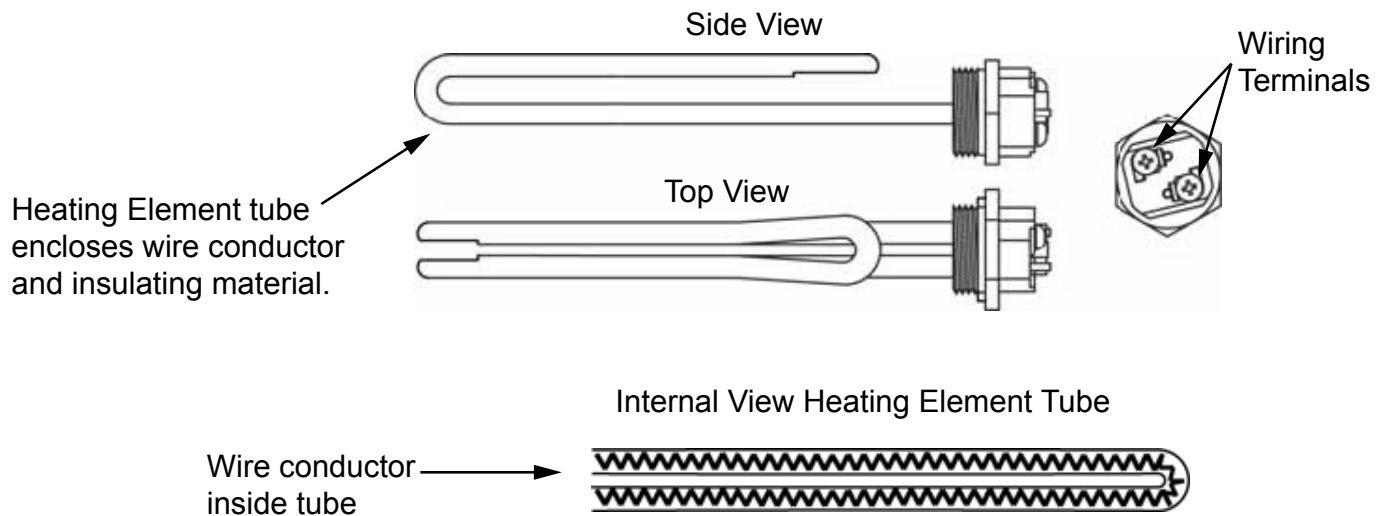


Figure 16. Heating Element Construction

## HEATING ELEMENT RATINGS

Heating elements are labeled with their voltage and kW rating. See *Figure 17*. The element shown here is a 6000 watt (6 kW) 240 volt element.

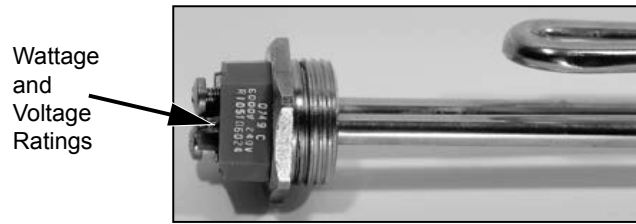


Figure 17. Heating Element Rating Label

**Note:** Some heating elements are dual rated elements. For example, 208/240 volts.

## HEATING ELEMENT CONFIGURATIONS

*Table 1* shows how many heating elements are installed at the factory and the wattage of each heating element according to the rated voltage of the water heater. The table below represents all available tank sizes; 50, 80 and 120 gallon models.

**Service Note:** 208-volt 18-kW models are only available with six 3000 watt elements and 208-volt 36-kW models are only available with nine 4000 watt heating elements.

Table 1. Standard Heating Element Configurations			
Total Water Heater Input (kW)	Heating Element Wattage	Number of Factory Installed Heating Elements	
		208 VAC	240/277/480 VAC
6	2000	3	3
9	3000	3	3
12	4000	3	3
13.5	4500	3	3
15	5000	3	3
18	6000	N/A	3
18	3000	6	6
24	4000	6	6
27	4500	6	6
30	5000	6	6
36	6000	N/A	6
36	4000	9	9
40.5	4500	9	9
45	5000	9	9
54	6000	9	9

## HEATING ELEMENT AMPERAGE

This table shows the approximate amp draw for the various heating elements used. First determine the actual rated wattage and voltage of the element being tested. See *Heating Element Ratings* (page 22). Then follow the *Heating Element Amperage Test* (page 24) to measure amperage at each heating element. Compare the measured value to the values in the table below. Keep in mind there may be some variance between measured values and the values in this table due to fluctuations in voltage, temperature and the calibration of test instruments being used.

Table 2. Approximate Current - Amps				
Element Wattage	Approximate Current Amps			
	208 VAC	240 VAC	277 VAC	480 VAC
2000	9.62	8.33	7.22	4.17
3,000	14.42	12.50	10.83	6.25
4000	19.23	16.67	14.44	8.33
45000	21.63	18.75	16.25	9.38
5000	24.04	20.83	18.05	10.42
6,000	28.85	25.00	21.66	12.50

**Service Note: Correct Elements:** If the measured amp draw on any element is considerably less or more than the values given in the table above, check the element rating to ensure it matches the water heater's factory configuration. See *Heating Element Ratings* and *Heating Element Configurations* (page 22). All heating elements should have the same voltage and kW rating in a water heater. If an element does not have the correct rating for the water heater being serviced, it must be replaced with a properly rated heating element.

**Service Note: Grounded Elements:** Grounded elements on surface mount control models, *Figure 1* (page 9), can draw low amps because power is continuously present at one terminal on each element. See *Figure 13* (page 19). Power from the thermostat's L4 terminal is always present at each element and can flow from a grounded element through the water to the storage tank. If the measured amps are considerably less than the values in the table above, test those elements for grounding. See *Heating Element Resistance & Ground Tests* (page 26).

## Heating Element Resistance

This table shows the approximate resistance (in ohms) for the various heating elements used. First determine the actual rated wattage and voltage of the element being tested - see Heating Element Ratings on page 21. Then follow the *Heating Element Resistance Test* procedure (page 26) to measure the resistance of each heating element. Compare the measured value to the values in the table below. Keep in mind there will be some variance between measured values and the values in this table due to fluctuations in temperature and the calibration of test instruments being used.

Table 3. Element Resistance				
Total Element Wattage	Approximate Resistance - Ohms			
	208 VAC	240 VAC	277 VAC	480 VAC
2000	21.63	28.80	38.36	115.20
3,000	14.42	19.20	25.58	76.80
4000	10.82	14.40	19.18	57.60
4500	9.61	12.80	17.05	51.20
5000	8.65	11.52	15.35	46.08
6,000	7.21	9.60	12.79	38.40

## Heating Element Amperage Test

This test should be considered as a first diagnostic procedure for the common service complaints of no hot water or not enough hot water. The heating element amperage test shown on this page is the best procedure to quickly determine which (if any) heating elements are not working properly.

1. Secure power to the water heater at the main breaker or disconnect switch.
2. Ensure tank temperature is less than 100°F/38°C - dump water to lower tank temperature if necessary.
3. **Surface Mount Control Models:** Raise the temperature settings to ensure a call heat is active for all heating elements. Press the red reset button firmly on all thermostat/ECO controls. Raise the temperature setting on all thermostat/ECO controls to 140°F or higher. See *Surface Mount Thermostats* (page 19).
4. Restore power to the water heater.
5. **Electronic Control Models:** Adjust the temperature settings to ensure a call for heat is active for all heating elements. Raise the Operating Set Point in the Temperatures menu to 140°F or higher. Set all Heating Element Bank Differentials in the Temperatures menu to 2°F. See *Temperatures Menu* (page 53).
6. Using a clamp style AC amp meter: set the amp meter to an AC amperage range just above the expected amperage (100 AC amp range initially). Measure and record the amperage at all heating elements by clamping the jaws of the meter around **ONLY** one of the wires to each heating element. See the image below. Heating element amp readings should be approximately the same for all heating elements. The normal operating amps for all heating elements is provided in in *Table 4* and *Table 5* (page 35) or it can be calculated using Ohm's Law. See *Ohm's Law* (page 12).

**Service Note:** Check all power circuit wiring to the heating element(s) on any element drawing zero or low amps - see the wiring diagram on the water heater. On electronic control models, check the contactors on any heating element(s) drawing zero or low amps. See *Contactors* (page 30). Perform the *Heating Element Voltage Test* (page 25) and *Heating Element Resistance & Ground Tests* (page 26) on any heating elements that are drawing zero amps or any heating element drawing less than normal operating amps.

If the measured amp draw on any element is considerably less or more than the normal operating amps ensure the voltage and kW rating of those heating elements is the correct value for the water heater being serviced. See *Heating Element Ratings* and *Heating Element Configurations* (page 22).

Measuring amperage on an electric heating element. Make sure the jaws of the AC amp meter are clamped around **ONLY ONE WIRE** to each heating element at a time. Clamping around more than one wire often gives a false zero amp reading.

**DO NOT TOUCH THE ENDS OF ANY HEATING ELEMENTS WHILE PERFORMING THIS TEST**

Be extremely careful as there will be high voltage present at the wiring terminals on all heating elements during this test.



Figure 18. Heating Element Amperage Test



## Heating Element Voltage Test

This test is typically performed after an amperage test has determined one or more heating elements (or heating element loops) is not drawing the correct amperage. See *Heating Element Amperage Test (page 24)*.

1. Secure power to the water heater at the main breaker or disconnect switch.
2. Ensure tank temperature is less than 100°F/38°C - dump water to lower tank temperature if necessary.
3. **Surface Mount Control Models:** Raise the temperature settings to ensure a call heat is active for all heating elements. Press the red reset button firmly on all thermostat/ECO controls. Raise the temperature setting on all thermostat/ECO controls to 140°F or higher. See *Surface Mount Thermostats (page 19)*.
4. Restore power to the water heater.
5. **Electronic Control Models:** Adjust the temperature settings to ensure a call heat is active for all heating elements. Raise the Operating Set Point in the Temperatures Menu to 140°F or higher. Set all Heating Element Bank Differentials in the Temperatures Menu to 2°F. See *Temperatures Menu (page 53)*.
6. Using an AC volt meter; set the volt meter to an AC voltage range above the expected voltage (600 VAC or higher range initially).
7. Check voltage between the two terminals on the heating element. See *Figure 19*. Record the voltage at all heating elements. Voltage should match the listed voltage on the water heater's rating label.
8. If the measured voltage is zero volts or is not the correct voltage, check power to the water heater. See *Checking Three Phase (3Ø) Power (page 15)*. Check fuses; see *Fuses (page 18)*. Ensure heating element power circuit wiring is correct. (See the wiring diagram on water heater.) Check thermostat/ECO control(s) supplying power to the heating element on *surface mount control models*. See *Thermostat & ECO Test (page 20)*. Check contactors on electronic control models. See *Contactors (page 30)*.

Check all wiring and connections between the heating elements, contactors, fuses and the power distribution block. Ensure all wiring and connections are tight and making good contact. Replace any wiring, fuses and/or contactors that are not working properly, damaged, or show signs of excessive wear.

Measuring voltage on an electric heating element. Touch the two volt meter probes to the two terminals on the end of each heating element.

### **DO NOT TOUCH THE ENDS OF ANY HEATING ELEMENTS WHILE PERFORMING THIS TEST**

Be extremely careful as there will be high voltage present at the wiring terminals on all heating elements during this test.



Figure 19. Element Voltage Test

## Heating Element Resistance & Ground Tests

This is a two part test. In the first part of this test, the actual resistance (ohms) of each heating element is measured. In the second part of this test, each heating element is tested for any continuity to ground to ensure that the heating element is not shorted to ground. These tests should be considered as third and fourth diagnostic procedures to be performed whenever the results from the *Heating Element Amperage Test* showed a heating element was not drawing the correct amps **AND** the results from the *Heating Element Voltage Test* showed the element had the proper voltage applied.

### Heating Element Resistance Test

1. Determine what the actual voltage and kW rating is for the heating elements in the water heater being serviced. See *Heating Element Ratings* and *Heating Element Configurations* (page 22). Replace any elements that are not the proper rating for the water heater being serviced before proceeding.
2. Secure power to the water heater at the main breaker or disconnect switch.
3. Verify with an AC volt meter that there is not any voltage present at the power distribution block. See *Figure 1* (page 9) or *Figure 2* (page 10). Verify also that there is not any voltage present at the two wiring terminals on the ends of all heating elements.
4. Disconnect both power wires from the contactor(s) to all elements being tested.
5. Using an ohmmeter: set the ohmmeter to a range just above the expected ohms (200 ohm range initially).
6. Touch the ohmmeter probes between the two terminals on each heating element - see the image below. Measure and record the resistance (ohms) at all heating elements being tested.
7. Compare the resistance value (ohms) measured to the values given in *Table 3* (page 23).
8. If the measured resistance (ohms) matches the values in the *Table 3* (page 23), the heating element resistance is correct.
9. If the resistance reading is infinite--no continuity at all between the two terminals--the heating element is defective and must be replaced. During heating element replacement, be sure to do the following:
  - Check fuses; see *Fuses* (page 18).
  - Inspect contactors on electronic control models. See *Contactors* (page 30).
  - Check all wiring and connections between the heating elements, contactors, fuses and the power distribution block. Ensure all wiring and connections are tight and making good contact. Replace any wiring, fuses, contactors that are damaged or show signs of excessive wear.

Measuring resistance (ohms) on an electric heating element. Touch the two ohmmeter probes to the two terminals on the end of each heating element.



Figure 20. Element Resistance (ohms) Test

### Heating Element Ground Test

1. Secure power to the water heater at the main breaker or disconnect switch.
2. Verify with an AC volt meter that there is not any voltage present at the power distribution block and at the two wiring terminals on the ends of all heating elements. See *Figure 1* (page 9) and *Figure 2* (page 10).
3. Disconnect both power wires from the contactor(s) to all elements being tested.
4. Using an ohmmeter: set the ohmmeter to one of it's lowest resistance ranges - 200 ohms or less initially. An audible beep continuity test setting can also be used on ohmmeters so equipped.
5. Touch one of the ohmmeter probes to one of the two heating element wiring terminals and the other probe to a grounded surface on the water heater such as the water heater's storage tank (use sand cloth if necessary to remove any coating that may prevent metal to metal contact) or the water heater ground wire connection. Check between the other heating element terminal and ground also - see the image below.
6. If there is infinite resistance - no continuity - between both heating element wiring terminals and ground the heating element(s) is not grounded.
7. If there is any resistance measured - there is continuity - between either heating element wiring terminal and ground the heating element is defective and must be replaced. Ensure the voltage and KW rating of the replacement heating element is the correct rating for the water heater being serviced. See *Heating Element Ratings* and *Heating Element Configurations* (page 22).

Checking an electric heating for any resistance or continuity to ground. Touch one of the ohmmeter probes to one terminal on the end of a heating element and the other probe to a grounded surface on the water heater.



Figure 21. Element Resistance (ohms) Test

### REPLACING HEATING ELEMENTS

1. Secure power to the water heater at the main breaker or disconnect switch.
2. Verify with an AC volt meter that there is not any voltage present at the power distribution block. See *Figure 1* (page 9) and *Figure 2* (page 10). Verify also that there is not any voltage present at the two wiring terminals on the ends of all heating elements.
3. Disconnect both power wires from the terminals on the top all heating elements being replaced.
4. Drain the water heater - follow the draining instructions in the Maintenance section of the instruction manual that came with the water heater. If the instruction manual is not available, copies can be obtained from the manufacturers web site or by calling the toll free phone number on the back cover of this manual.
5. Remove/install heating elements using a 1 1/2" six point socket. Install a new heating element gasket with the new element. Replacement elements and gaskets can be obtained from local distributors or by calling the toll free phone number on the back cover of this manual.

## ELEMENT SENSORS

The electronic control models covered in this manual monitor all heating elements using element sensors. Each element sensor monitors three heating elements. There is one element sensor for each bank of heating elements. See *Figure 2* (page 10) and *Contactors Configurations* (page 31). Water heaters equipped with three heating elements will have one element sensor, water heaters equipped with six elements will have two element sensors, and water heaters equipped with nine elements will have three element sensors.

### ELEMENT SENSOR CONSTRUCTION

Element Sensors consists of three individual current sensors, a ten-conductor plug, and nine wires that connect between the individual current sensors and the plug. Each current sensor monitors one heating element. Current sensors are enclosed in a black plastic housing that has a hole in the middle. One power wire to each heating element is routed through the hole in one of the current sensors. See the images below.

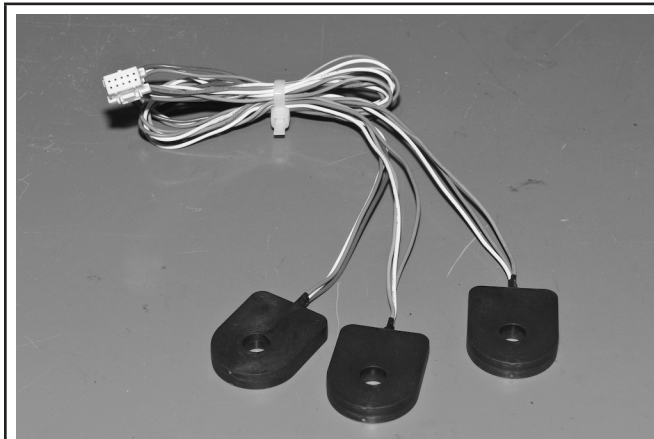


Figure 22. Element Sensor

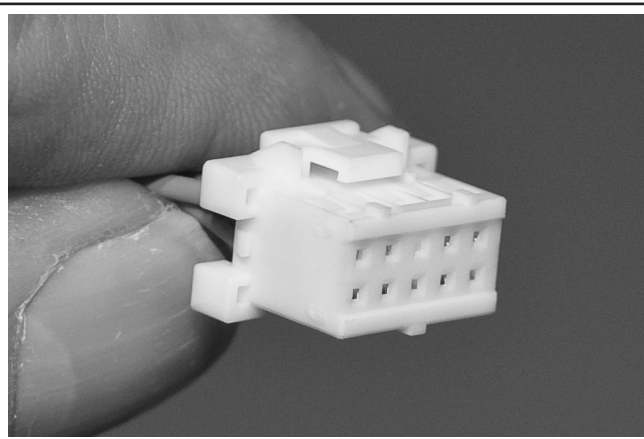


Figure 23. Ten-Conductor Plug

### ELEMENT SENSOR FUNCTIONS

Working with the element sensors, the electronic control system provides valuable operational and diagnostic information to aid in servicing:

- The electronic control system displays animated Status Icons on the user interface module (UIM) to indicate which heating elements are being energized and which heating elements are not being energized. The Status Icons are also capable of indicating when a heating element that should be energized is not drawing current/amps. See the status icons in *Table 12* (page 51).
- The electronic control system displays a “No Current Detected” alert message on the UIM if the control system does not sense current (amperage) from a heating element when expected. See *User Interface Module (UIM)* (page 48). For example, a call for heat is active, all contactor coils have been energized, and the control system is not sensing current from one or more heating element. See *Electronic Controls* (page 42) and *Fault And Alert Messages* (page 69).
- During alert conditions, the control system allows the water heater to continue heating (other elements may still be working), but prompts the user to have the water heater serviced.

## ELEMENT SENSOR OPERATION

When current (amperage) flows through a wire in an electrical circuit a magnetic field is developed that radiates out from the wire. The individual current sensors detect this magnetic field. When current flows in a wire routed through the hole in one of the individual current sensors, the sensor is activated and sends a signal back to the CCB confirming the presence of current.

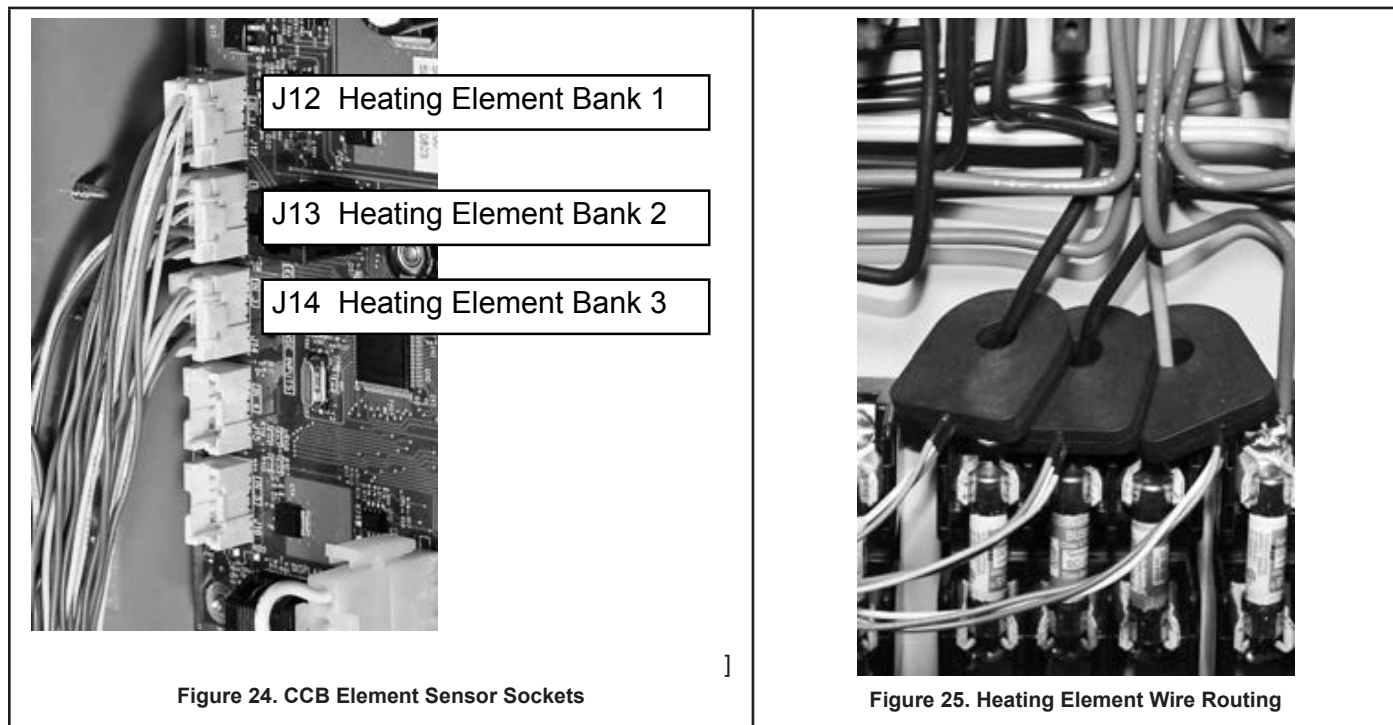
The current sensors require approximately 3 AC amps minimum to activate. An active signal from a current sensor indicates only the current has been sensed; it **DOES NOT** indicate the amount or level of current is correct for a given heating element.

As explained on the previous page, element sensors contain three individual current sensors. The three current sensors are installed just above the power circuit fuse blocks. One heating element power wire is routed through the hole in one sensor.

The plug from each element sensor plugs into one of three sockets on the CCB. The J12, J13, and J14 sockets are for heating element Banks 1, 2, and 3 respectively, depending on how many elements are installed in the water heater. See *Figure 24* and *Figure 25*.

**Service Note:** The element sensors cannot be serviced in the field. If it is determined one of the three individual current sensors in an element sensor assembly is defective, the entire assembly must be replaced. If the correct amperage through a heating element has been verified with an AC amp meter *Heating Element Amperage Test* (page 24) and the current sensor for that element does not activate and send a signal to the CCB, do the following:

- Ensure the element sensor plug and socket connection is making good contact.
- On models equipped with two or three banks of heating elements, secure power to the water heater and try switching Element Sensor plugs between the J12, J13, and J14 sockets to verify that the element sensor is defective. A “No Current Detected” Alert message and Status Icon indication should “follow” the defective element sensor and report that a different heating element is not drawing current when current is expected.



## CONTACTORS

This section of the manual provides information on how contactors used on electronic control models are constructed, how they work, and how to test contactor operation. See **Figure 2** (page 10) for the location of the contactors on these models. Surface-mount control models are not equipped with contactors.

### CONTACTOR CONSTRUCTION - HOW THEY WORK

Magnetic contactors are used on Electronic Control Models to energize and de-energize the heating elements. Power from the fuse blocks is supplied to the heating elements through three switches (3 poles) inside the contactor. Springs located inside the contactor hold the switch contacts open; the springs are compressed and the spring tension forces or holds the switch contacts in their normally open state.

The contactor's switches are closed by an electromagnetic coil inside the base of the contactor. When a call for heat is activated the electronic control system sends 120 volts to the contactor's electromagnetic coil. As current runs through the coil it becomes "magnetized" and overcomes the spring tension holding the switch contacts open. The switch contacts then close which in turn sends power to the heating elements. When the call for heat is satisfied the control system de-energizes the contactor coil and spring tension returns the contacts to their open position.

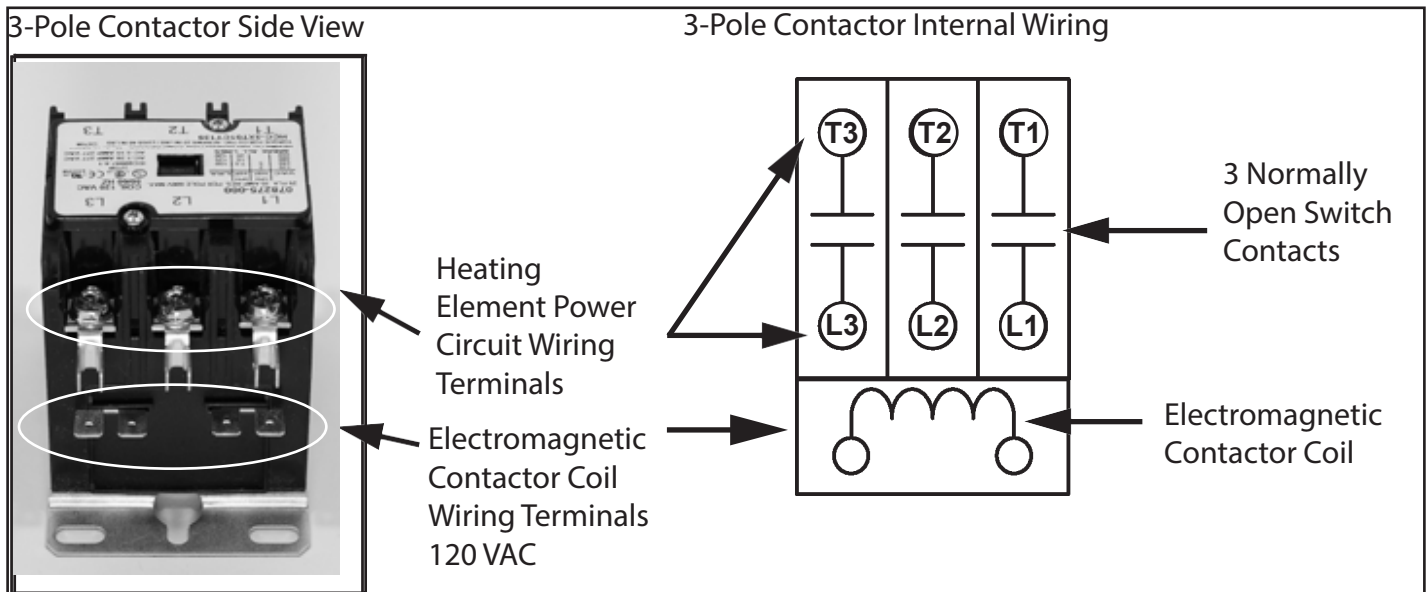


Figure 26. Three-Pole Contactor Wiring Side and Internal Views

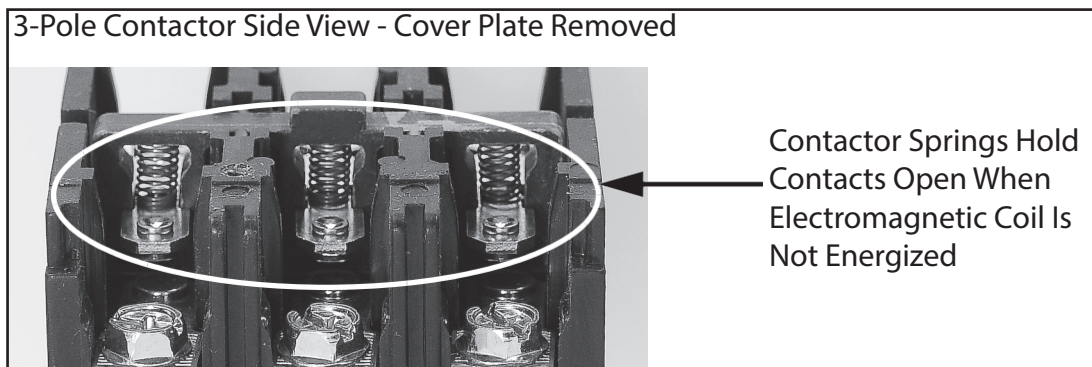


Figure 27. Three-Pole Contactor Side View - Cover Plate Removed

## CONTACTOR CONFIGURATIONS

This illustration shows how contactors are configured and how they provide power to the heating elements on Electronic Control Model water heaters. This is a redundant contactor configuration - two contactors must close their contacts to energize any heating element. Elements and Banks are numbered according to how the control system monitors them. See *Element Sensors* (page 28). There are two contactors installed for each Bank. For example, the illustration shows a nine-element configuration, a water heater factory equipped with six heating elements would have four contactors and a water heater with three elements would have two contactors. For simplicity, wiring is shown for the first two heating elements in Bank 1 only.

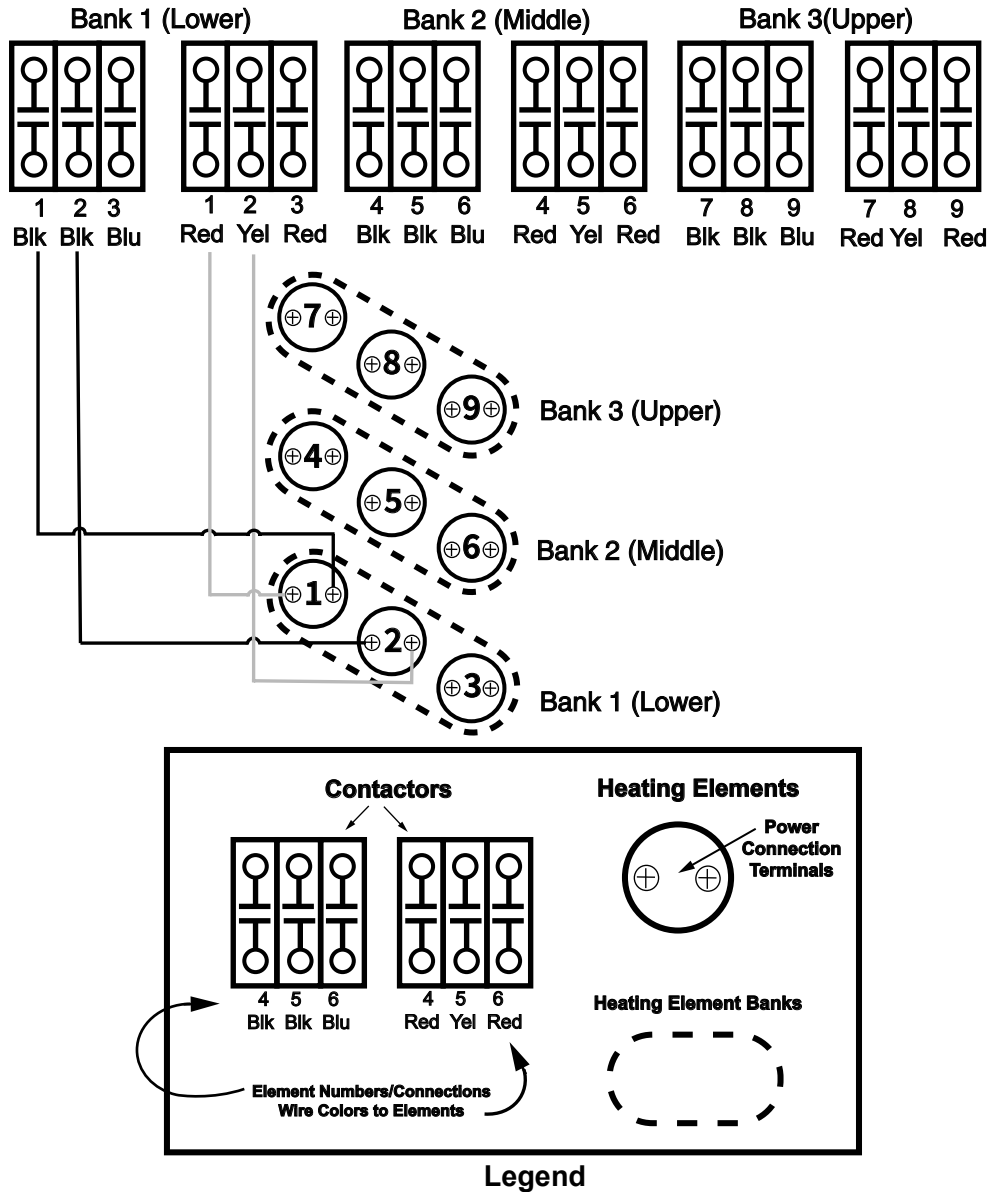


Figure 28. Contactor Configurations

## CONTACTOR INSPECTION

A thorough visual inspection of the contactors used on electronic control models should be performed as part of any regular maintenance program and whenever the water heater is being serviced. Refer to the listed steps and **Figure 29** for this procedure.

1. Secure power to the water heater at the main breaker or disconnect switch.
2. Verify with an AC volt meter that there is not any voltage present at the power distribution block, power circuit fuse block and all wiring terminals on the contactors. See **Figure 2** (page 10) for the location of these components.
3. Remove the top cover (two small screws) from the contactor.
4. Check for and remove any debris from the area surrounding the switch contacts. For example, ants will occasionally infest the switch contacts and eventually cause the contactor to malfunction.
5. Physically test the mechanical spring action of the contactor by depressing the contactor mechanism. If the action is not smooth and/or sticks, replace the contactor.
6. Perform a close visual inspection of the switch contacts. The contacts are silver plated and should be smooth. Contactor chatter (page 7), voltage spikes, arcing, and excessive current, along with normal wear and tear, can cause the normally smooth surface of the contacts to become burnt, pitted and damaged. In extreme cases, the contacts can “weld” closed. The switch contacts are not replaceable. If the contacts show signs of excessive wear or damage, replace the contactor.
7. Replace the top cover on all contactors when inspection is complete.

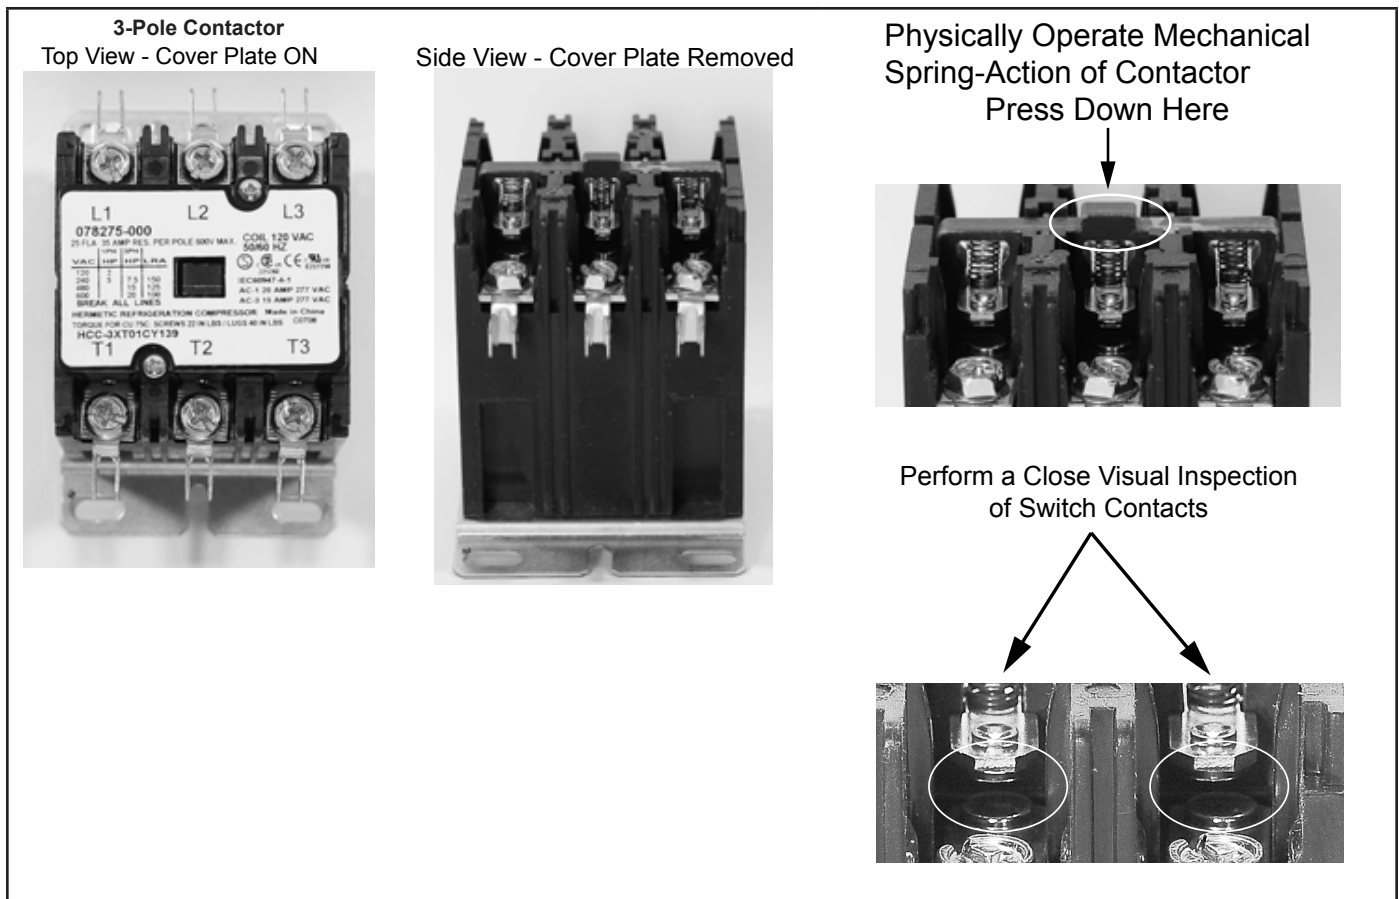


Figure 29. Perform Close Visual Inspection Of Switch Contacts



## CONTACTOR COIL VOLTAGE TEST - AT CONTACTOR

This test procedure will measure contactor coil voltage at the contactor.

1. Ensure tank temperature is less than 100°F/38°C. Dump water to lower tank temperature if necessary.
2. Adjust the temperature settings to ensure a call for heat is active for all heating elements. Raise the Operating Set Point in the Temperatures menu to 140°F or higher. Set all Heating Element Bank Differentials in the Temperatures Menu to 2°F. See *Temperatures Menu* (page 53).
3. Using an AC volt meter, set the volt meter to an AC voltage range just above 120 VAC.
4. Touch the two volt-meter probes to the contactor coil wiring terminals on the contactor. Repeat this procedure at each contactor being tested. There should be approximately 120 volts present between the two terminals. If there is no voltage, proceed to *Contactor Coil Voltage Test - At CCB* (page 34).

**Service Warning:** *Be extremely careful when performing this test procedure; volt meter probes are routed between wires in tight proximity. There will be high voltage present at all terminals and wiring to the contactors.*

5. If the measured voltage is considerably less than 120 volts and/or the contactors chatter (open and close rapidly), ensure the Control Circuit Transformer is wired correctly. See *Transformers* (page 35).
6. If the measured voltage is approximately 120 volts, the contactor should close it's switch contacts. If the contacts are closed, the contactor coil is operating properly.
7. If the measured voltage is approximately 120 volts and the contactor's switch contacts do not close, the contactor is defective and must be replaced. When replacing a contactor that has failed in this way, check all wiring between the contactor coil and the J4 wiring terminals on the *Central Control Board (CCB)* (page 43) for pinched or shorted wires. Repair or replace damaged wiring as necessary.

**Service Note:** A continuity test can also be performed on contactor coils to determine if the failure is due to an open coil winding. Secure power to the water heater at the main breaker or disconnect switch, disconnect both wires to the contactor coil, and check for continuity between the two terminals using an ohmmeter. If a contactor has an open coil, the contactor must be replaced. Check all wiring between the contactor coil and the J4 wiring terminals on the *Central Control Board (CCB)* (page 43) for pinched or shorted wires. Repair or replace damaged wiring as necessary.

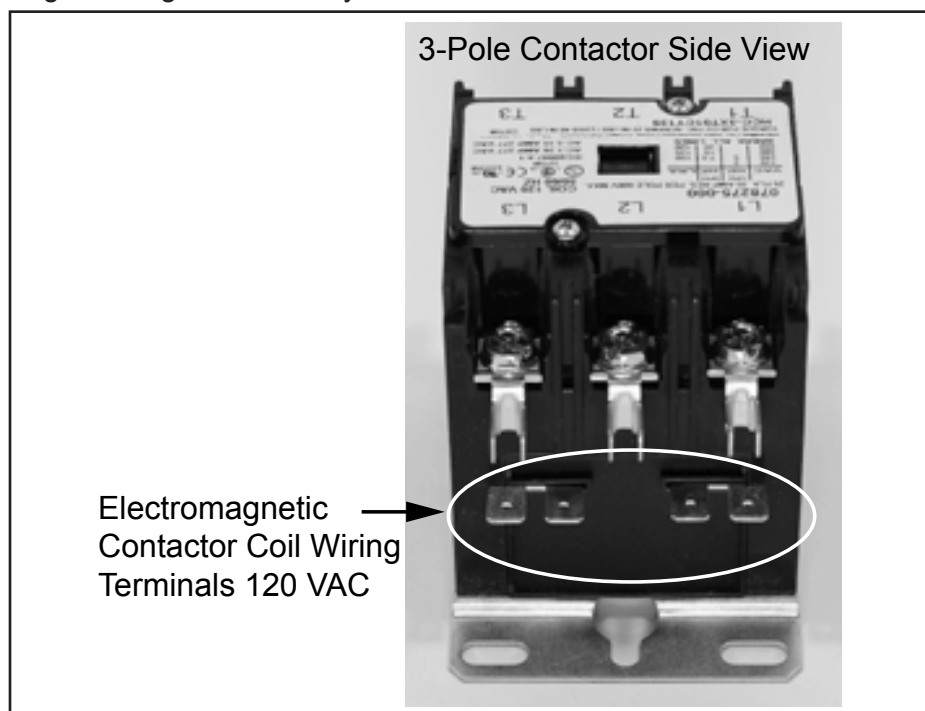


Figure 30. Contactor Coil Wiring Terminals

## CONTACTOR COIL VOLTAGE TEST - AT CCB

This test procedure will measure contactor coil voltage where it originates at the J4 & J17 wiring terminals on the CCB. See *Central Control Board (CCB)* (page 43) for the CCB's J4 wiring terminal location.

1. Ensure tank temperature is less than 100°F/38°C. Dump water to lower tank temperature if necessary.
2. Adjust the temperature settings to ensure a call for heat is active for all heating elements. Raise the Operating Set Point in the Temperatures menu to 140°F or higher. Set all Heating Element Bank Differentials in the Temperatures menu to 2°F. See *Temperatures Menu* (page 53).
3. Using an AC volt meter, set the volt meter to an AC voltage range just above 120 VAC.
4. Touch one of the two volt meter probes to the ground wire connection on the water heater. Touch the other volt meter probe to the CCB's J4 OUT 1 wiring terminal. See the images in **Figure 31**. On water heaters equipped with more heating elements, also check between the ground connection and the CCB: J4 OUT 2 wiring terminals and on water heaters equipped with 9 elements also check between ground and the CCB's J4 OUT 3 wiring terminal. Measure and record voltage readings taken in this step.

**Service Warning:** *Be extremely careful when performing this test procedure. There will be high voltage present at many terminals and wiring connections in the surrounding area.*

5. If the measured voltage(s) were approximately 120 volts, the CCB circuit board is operating properly.
6. If the measured voltage(s) were zero or considerably less than 120 volts, call the toll free Technical Support phone number listed on the back cover of this manual for further assistance.

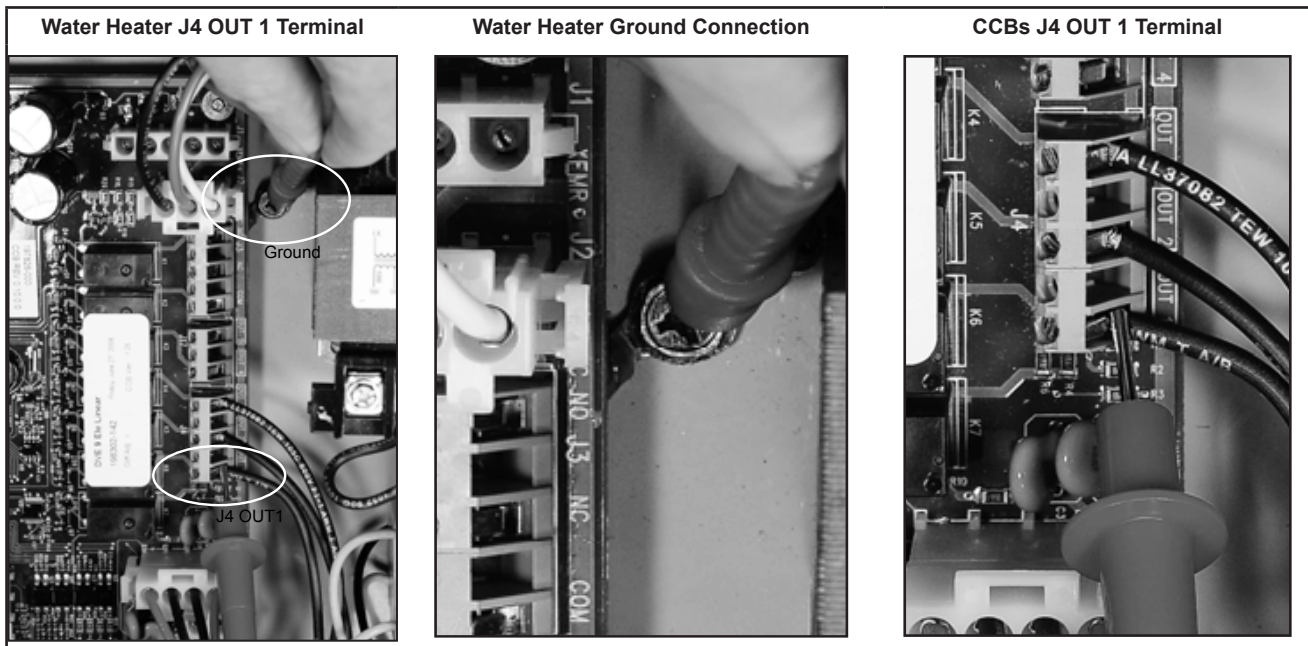


Figure 31. Checking Contactor Coil Voltage at the CCB's J4 & J17 Wiring Terminals

## TRANSFORMERS

This section of the manual provides information on how to test and ensure the multiple tap 120 VAC control-circuit transformer and the 24 VAC transformer is wired properly on electronic control models. This section will also provide test procedures for the 24 VAC transformer used by the electronic control system. See **Figure 2** (page 10) for location of the transformers on these models. Surface-mount control models are not equipped with transformers.

used by the electronic control system. See **Figure 1** (page 9) and **Figure 2** (page 10) for location of the transformers.

### 120 VAC CONTROL CIRCUIT TRANSFORMER WIRING

The 120 VAC Control Circuit transformer is a multiple or “multi” tap transformer that can accept 4 different input voltages to it’s primary winding. See **Figure 2** (page 10) for location. This transformer outputs 120 VAC power from it’s secondary winding which powers the CCB circuit board and the contactor coils. See **Central Control Board (CCB)** (page 43). The input power wiring to the primary winding of this transformer must be configured to match the power supplied to the water heater. Incorrect wiring can cause output voltage from the transformer’s secondary winding to be too low or too high. This can cause “contactor chatter” (contacts open and close rapidly) and may permanently damage the contactors and/or the CCB circuit board. The table and illustrations that follow show how to properly configure the input power wiring to the transformers primary winding.

1. Only one wire needs to be moved on the transformer’s primary winding terminals to configure for a different voltage. Do not move or change the wire connected to the H1 terminal on the primary winding. Do not move or change either wire at the secondary winding X1 or X2 connections. Remove the wire from the terminal marked H2 208, H3 240, H4 277 or H5 480 and attach it to the appropriate terminal that matches the water heater’s power supply voltage.

Table 4. Voltage and Primary Winding Connections	
Water Heater Power Supply Voltage	Primary Winding Connections
208 VAC	H1 Common & H2 (208)
240 VAC	H1 Common & H3 (240)
277 VAC	H1 Common & H4 (277)
480 VAC	H1 Common & H5 (480)

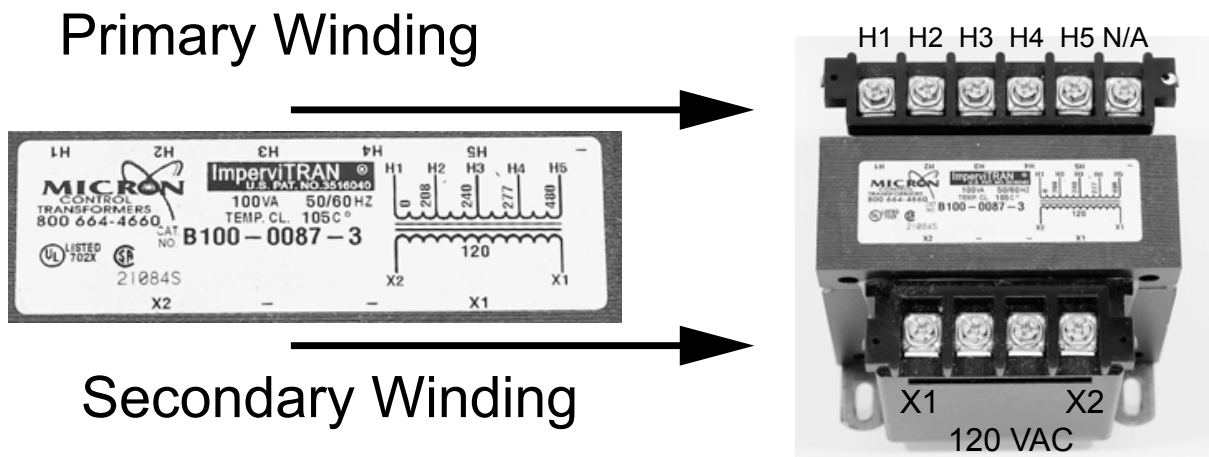


Figure 32. Transformer Wiring (208/240/277 Volt Models)

## 120 VAC CONTROL CIRCUIT TRANSFORMER TEST

1. Ensure the main breaker or disconnect switch is turned on.
2. Verify with an AC volt meter that proper voltage is present at the power distribution block. See *Figure 2* (page 10) and *Single- and Three-Phase Power* (page 13).
3. **Check Primary Winding Voltage:** Using an AC volt meter, set the volt meter to an AC voltage range above the expected voltage (600 VAC or higher range initially). Touch the two volt meter probes between the control circuit transformer's primary winding H1 common terminal and the other primary winding terminal with a power wired connected to it as shown in the "Primary Winding Voltage Test" image below. See *Transformers* (page 35). Voltage between these two terminals should match the water heater's power supply voltage. If the voltage at the primary winding terminals of the transformer matches the water heater's power supply voltage the primary winding is being powered correctly. If the voltage measured is zero volts or considerably less or more than the water heater's power supply voltage:
  - Check the wiring between the Control Circuit Transformer's primary winding and the Control Circuit Fuse Block. See *Figure 2* (page 10) for location. Ensure wiring is correct and connections are tight and making good contact.
  - Check the wiring between the Control Circuit Fuse Block and the Power Distribution Block. Ensure wiring is correct and connections are tight and making good contact.
  - Check the control circuit fuses. See *Figure 2* (page 10) for location and the *Fuses* test procedure (page 18).
  - Verify 120 VAC control-circuit transformer wiring is correct. See *Transformers* (page 35).
4. **Check Secondary Winding Voltage:** Using an AC volt meter, set the volt meter to an AC voltage range just above 120 VAC. Touch the two volt meter probes between the control-circuit transformer's secondary winding X1 and X2 terminals as shown in the "Secondary Winding Voltage Test" image below. There should be approximately 120 VAC present between these two terminals. If the voltage measured is approximately 120 VAC, the control-circuit transformer is operating properly. If the voltage measured is zero volts or considerably less or more ( $\pm 10\%$ ) than 120 VAC AND all steps above have been completed and the results were successful, replace the control-circuit transformer. When replacing the control-circuit transformer, check all wiring to and from the transformer for pinched or shorted wires. Repair or replace damaged wiring as necessary.

**Service Note:** A continuity test can also be performed on the control-circuit transformer primary and secondary windings to determine if either winding is an open circuit. Secure power to the water heater. Disconnect all wiring to the transformer. Using an ohmmeter check for continuity between the terminals on the primary and secondary windings checked in Steps 3 and 4 above.

Primary Winding Voltage Test



Secondary Winding Voltage Test

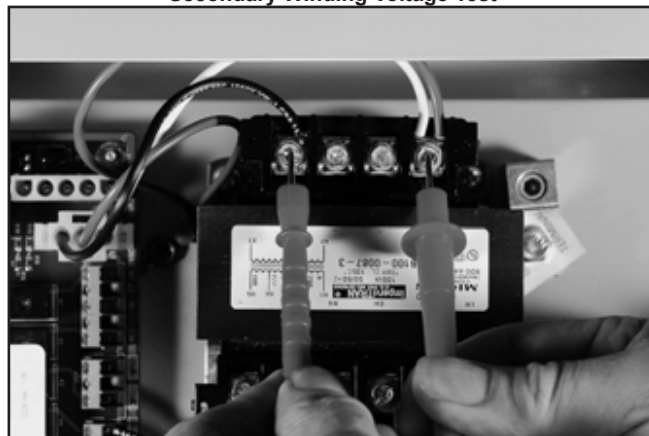


Figure 33. 120 VAC Control Circuit Winding Voltage Tests

## 24 VAC TRANSFORMER TEST

1. Ensure the main breaker or disconnect switch is turned on.
2. Verify with an AC volt meter that proper voltage is present at the power distribution block. See *Figure 2* (page 10) for the location and *Single- and Three-Phase Power (page 13)*.
3. **Check Primary Winding Voltage:** Using an AC volt meter, set the volt meter to an AC voltage range just above 120 VAC. With the J1 plug installed in the J1 socket on the *Central Control Board (CCB) (page 43)*, insert the two volt meter probes into pins 1 & 3 of the J1 plug as shown in the “Primary Winding Voltage Test” image below. Volt meter probes may have to be pressed firmly into the plug to make contact with the metal conductors inside. Voltage should be approximately 120 VAC. If the voltage measured is approximately 120 VAC the primary winding is being powered correctly. If the voltage measured is zero volts or considerably less or more ( $\pm 10\%$ ) than 120 VAC:
  - Check the J1 plug/socket connections on the CCB for wear or damage. Ensure they are mating properly and providing good contact. See *Central Control Board (CCB) (page 43)*.
  - Check the 120 VAC control-circuit transformer to ensure it is wired correctly and outputting the correct voltage. See *120 VAC Control Circuit Transformer Wiring (page 35)* and *120 VAC Control Circuit Transformer Test (page 36)*.
  - Ensure there is 120 VAC being supplied to the CCB. See *Checking Power and Ground to the CCB (page 47)*.
  - Call the toll free technical support phone number on the back cover of this manual for further assistance if all the procedures above have been performed and 120 VAC is still not present at pins 1 & 3 of the J1 socket/plug on the CCB.
4. **Check Secondary Winding Voltage:** Using an AC volt meter, set the volt meter to an AC voltage range just above 24 VAC. With the J1 plug installed in the J1 socket on the *Central Control Board (CCB) (page 43)*, insert the two volt meter probes into pins 4 & 5 of the J1 plug as shown in the “Secondary Winding Voltage Test” image below. Volt meter probes may have to be pressed firmly into the plug to make contact with the metal conductors inside. Voltage should be approximately 24 VAC. If the voltage measured is approximately 24 VAC, the transformer is operating properly. If the voltage measured is zero volts or considerably less or more ( $\pm 5\%$  expected) than 24 VAC:
  - Check the J1 plug/socket connections on the CCB for wear or damage. Ensure they are mating properly and providing good contact. See *Central Control Board (CCB) (page 43)*.
  - Check the wiring between pins 4 & 5 of the J1 plug and the 24 VAC transformer. See *Figure 2* (page 10) for the location of the transformer. Ensure wiring is not pinched or shorted and continuous to the 24 VAC secondary winding. Repair or replace damaged wiring as necessary.
  - If all the above procedures have been performed and there is still not 24 VAC present at pins 4 & 5 of the J1 plug, replace the 24 VAC transformer. When replacing the transformer, check all wiring to and from the transformer for pinched or shorted wires. Repair or replace damaged wiring as necessary.

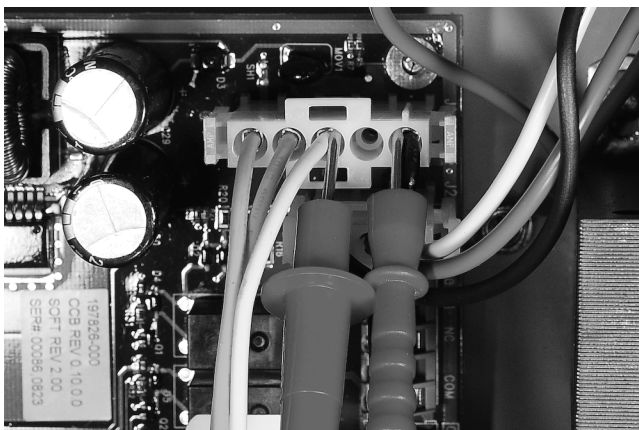


Figure 34. 24 VAC Transformer Primary Winding Voltage Test



Figure 35. 24 VAC Transformer Secondary Winding Voltage Test

## IMMERSION TEMPERATURE PROBE

This section of the manual provides information on how to test the immersion temperature probe. See **Figure 2** (page 10) for the location. The immersion temperature probe contains the ECO (energy cut out) and a Temperature Sensor. The immersion temperature probe plugs into the CCB circuit board at the J5 socket. See **Central Control Board (CCB)** (page 43) for location.



Figure 36. Immersion Temperature Probe

### ECO HIGH TEMPERATURE LIMIT SWITCH

The ECO (energy cut out) is a high temperature limit switch designed to protect against excessively high water temperatures inside the water heater. The ECO is a normally closed switch located inside the immersion temperature probe (two red wires). The ECO temperature setting is non adjustable. The contacts open at 202°F/94°C and will close at approximately 140°F/60°C.

The control system constantly monitors the state of the ECO switch contacts. If the ECO activates (contacts open) due to abnormally high water temperature the control system will lock out and display the fault message **“Energy Cut Out (ECO)” (Fault Condition)** (page 71) on the UIM.

Voltage to the contactor coils and heating elements is terminated to prevent further heating operation. See **Contactor Coil Voltage Test - At Contactor** (page 33) and **Contactor Coil Voltage Test - At CCB** (page 34).

Should the ECO activate, the water temperature must drop below 140°F/60°C before the control system can be reset. Once the water temperature has cooled below this point, the power supply to the water heater must be turned off and on again to reset the control system.

### TEMPERATURE SENSOR

The temperature sensor located inside the immersion temperature probe is a “thermistor” (two black wires). Thermistors are thermally sensitive resistors. As the water temperature rises the resistance (in ohms) of the sensor will decrease; as the temperature falls the resistance will increase. See **Table 5** (page 39). The control system interprets the changes in resistance as changes in water temperature.

The control system constantly monitors the temperature sensor (thermistor) for temperature. The control system is also programmed to declare a Fault condition if the resistance of the temperature sensor drops below 390 ohms (shorted) or above 56,000 ohms (open).

If the resistance of the temperature sensor is below 390 ohms, the control system will lock out and display the fault message **“Temp Probe Short” (Fault Condition)** (page 70) on the UIM. If the resistance of the temperature sensor is above 56,000 ohms the control system will lock out and display the fault message **“Temp Probe Open” (Fault Condition)** (page 70) displays on the UIM.

Voltage to the contactor coils and heating elements is terminated during lock out to prevent further heating operation. See **Contactor Coil Voltage Test - At Contactor** (page 33) and **Contactor Coil Voltage Test - At CCB** (page 34).

If the control system locks out, the condition that caused the lock out must be corrected before the control system can be reset by cycling power off and on again.

## TEMPERATURE SENSOR RESISTANCE TEST

1. Secure power to the water heater at the main breaker or disconnect switch.
2. Unplug the J5 plug from the CCB. See *Central Control Board (CCB) (page 43)* for the location.
3. Using an ohmmeter: set the ohmmeter range to a scale above 30,000 ohms initially.
4. Touch the ohmmeter probes between the two middle pins (black wires) of the J5 plug end as shown in the image below. Compare the measured resistance value (ohms) to the values given in the resistance data table below. Temperature probes are very reliable and should only be replaced when:
  - The resistance test indicates an “open” (infinite resistance) or a “direct short” (no resistance) circuit.
  - The nature of the service problem is temperature control and the resistance readings are considerably ( $\pm 25\%$ ) different than the values in the table here at the given temperature.

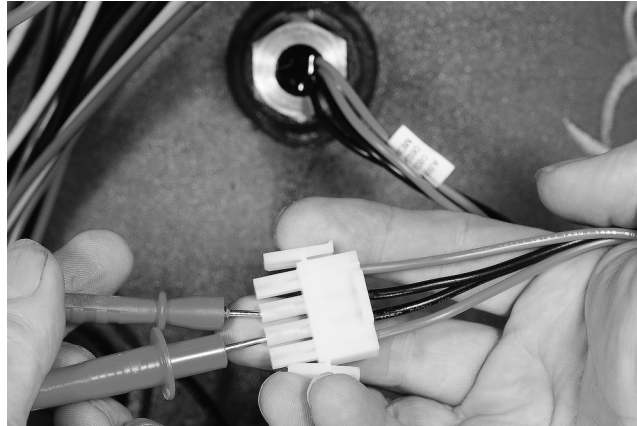


Figure 37. Checking Temperature Sensor Resistance

Table 5. Temperature Sensor Resistance Data		
WATER TEMPERATURE		RESISTANCE IN OHMS
Celsius	Fahrenheit	
3°	40°	26,435
21°	70°	11,974
38°	100°	5,862
49°	120°	3,780
55°	130°	3,066
60°	140°	2,503
71°	160°	1,698
82°	180°	1,177

## TEMPERATURE SENSOR DC VOLTAGE TEST

1. Ensure the main breaker or disconnect switch is turned on.
2. Verify the CCB circuit board has the correct input voltage at the J2 socket and is properly grounded. Perform the *Checking Power and Ground to the CCB (page 47)*.
3. Unplug the J5 plug from the CCB (note: the control system will lock out and display “Temp Probe Open” Fault message on the UIM when the J5 plug is removed. Cycle power off and reinstall J5 plug when tests are complete). Using a “DC” (direct current) volt meter, check for DC voltage between pins 2 & 3 of the J5 socket as shown in the “DC Voltage To Temperature Sensor” image below.
  - If the measured voltage is 5 VDC, the sensor is being powered correctly. If there is not 5 VDC, call the toll free Technical Support phone number listed on the back cover of this manual for further assistance.

## ECO CONTINUITY TEST

1. Secure power to the water heater at the main breaker or disconnect switch.
2. Unplug the J5 plug from the CCB. See *Central Control Board (CCB) (page 43)* for location.
3. Ensure tank temperature is less than 100°F/38°C. Dump water to lower tank temperature if necessary.
4. Using an ohmmeter, set the ohmmeter to it's lowest resistance range (< 200) or to an audible beep continuity test setting if so equipped.
5. Touch the ohmmeter probes between the two outside pins (red wires) of the J5 plug end as shown in the “Checking ECO Switch Continuity” image below.
  - If the ohmmeter shows continuity (closed circuit) between the two outside pins (red wires) of the J5 plug end the ECO switch has reset properly. If the control system continues to lock out displaying the “Energy Cut Out (ECO)” Fault message with continuity through the ECO present call the toll free Technical Support phone number listed on the back cover of this manual for further assistance.
  - If the ohmmeter shows no continuity (open circuit) between the two outside pins (red wires) of the J5 plug end and the tank temperature is known to be at or below 100°F/38°C, replace the immersion temperature probe. Secure power to the water heater and drain the water heater before replacing the probe. Follow the draining and filling instructions in the maintenance section of the instruction manual that came with the water heater.
  - If the control system continues to lock out, displaying the fault message “Energy Cut Out (ECO)” and the water temperature inside the water heater is becoming excessive (at or above 202°F/94°C), check contactors (*Contactors (page 30)*) to ensure they are not stuck closed. Check for voltage at all heating elements during standby mode. See *Heating Element Voltage Test (page 25)*. Check water system piping. Ensure heat is not being added by any other heating appliances or heat sources. If all these tests have been performed and the control system continues to lock out, displaying the “Energy Cut Out (ECO)” fault message, call the toll free Technical Support phone number listed on the back cover of this manual for further assistance.

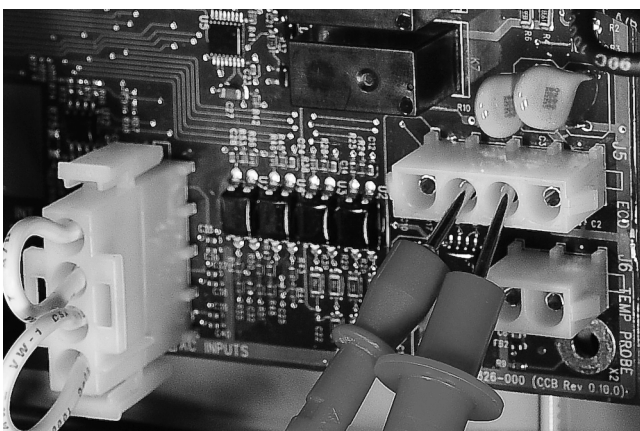


Figure 38. DC Voltage To Temperature Sensor

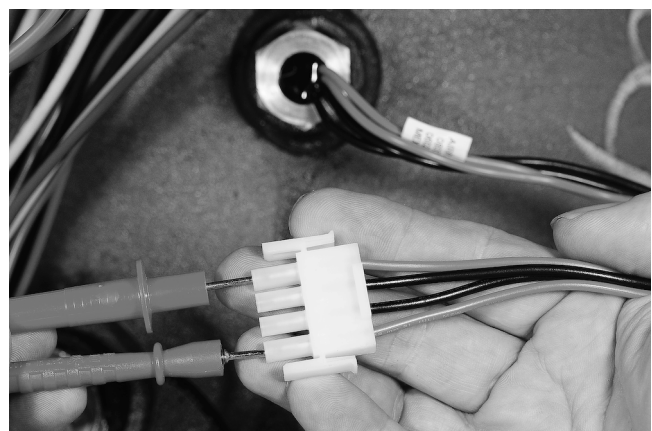


Figure 39. Checking ECO Switch Continuity



## ECO VOLTAGE TEST

1. Ensure the main breaker or disconnect switch is turned on.
2. Verify the CCB has the correct input voltage at the J2 socket and is properly grounded. Perform the *Checking Power and Ground to the CCB* test (page 47).
3. Using an AC volt meter; set the volt meter to an AC voltage range just above 120 VAC.
4. **Check for 120 VAC to the ECO:** With the J5 plug installed in the J5 socket on the *Central Control Board (CCB)* (page 43), insert one of the two volt meter probes into pin 1 of J5 plug as shown in the "120 VAC To ECO" image below. Volt meter probe may have to be pressed firmly into the plug to make contact with the metal conductor inside. Touch the other volt meter probe to the ground wire connection on the water heater as shown in the "Ground Connection" image below. The measured voltage should be approximately 120 VAC.
  - If the measured voltage is approximately 120 VAC proceed to Step 5.
  - If the measured voltage is zero or considerably less or more than 120 VAC and all steps above have been performed, call the toll free Technical Support phone number listed on the back cover of this manual for further assistance.
5. **Check for 120 VAC from the ECO:** With the J5 plug installed in the J5 socket on the *Central Control Board (CCB)* (page 43), insert one of the two volt meter probes into pin 4 of J5 plug as shown in the "120 VAC From ECO" image below. Volt meter probe may have to be pressed firmly into the plug to make contact with the metal conductor inside. Touch the other volt meter probe to the ground wire connection on the water heater. The measured voltage should be approximately 120 VAC.
  - If the measured voltage is approximately 120 VAC, the ECO switch is closed and the control system should not be declaring an ECO Fault condition. If the control system continues to lock out, displaying the "Energy Cut Out (ECO)" Fault message in this condition, call the toll free Technical Support phone number listed on the back cover of this manual for further assistance.
  - If the measured voltage is zero volts or considerably less than 120 VAC, perform the *ECO Continuity Test* (page 40).



Figure 40. 120 VAC To ECO

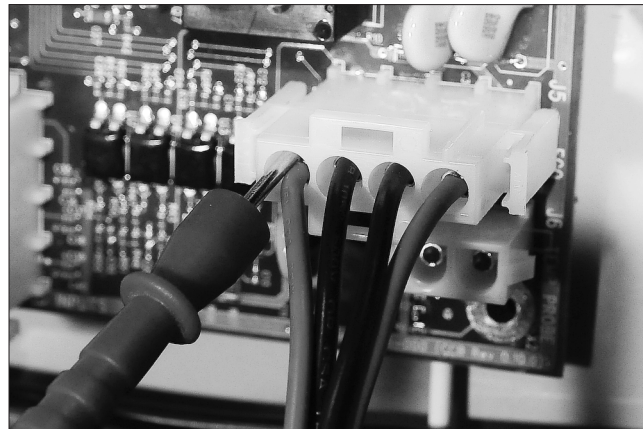


Figure 41. 120 VAC From ECO

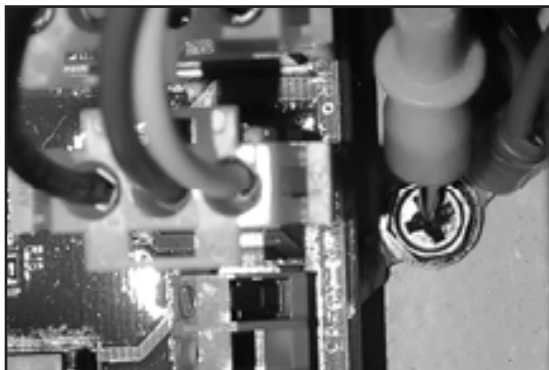


Figure 42. Ground Connection

# ELECTRONIC CONTROLS

This section covers the electronic control system used on Electronic Control Models. See *Figure 1* (page 9). The control system includes a CCB (Central Control Board) and a UIM (User Interface Module).

The CCB constantly monitors safety controls, heating elements, water temperature and other functions of the water heater. Operational information is continuously reported to the user through text and icons on the liquid crystal display (LCD) portion of the UIM. When there are operational problems Fault and Alert messages will also be displayed. Users can navigate through multiple control system menus to view operational information and change user settings. See the *Electronic Control System* (page 49).

Printed on 6/17/2020 12:05 PM CT

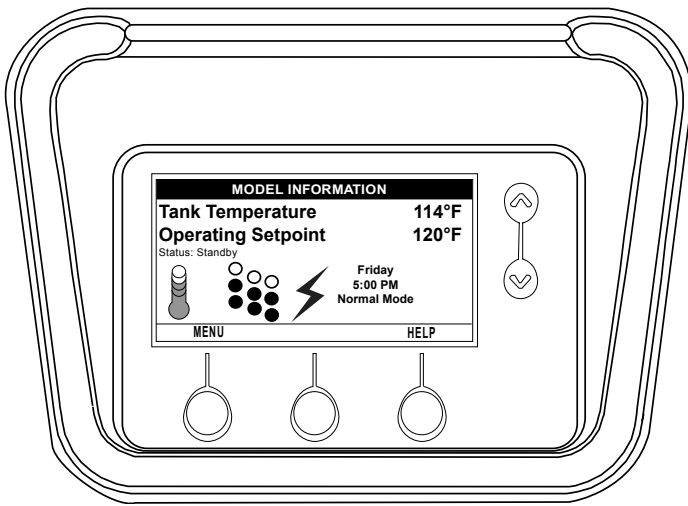


Figure 43. UIM (User Interface Module)


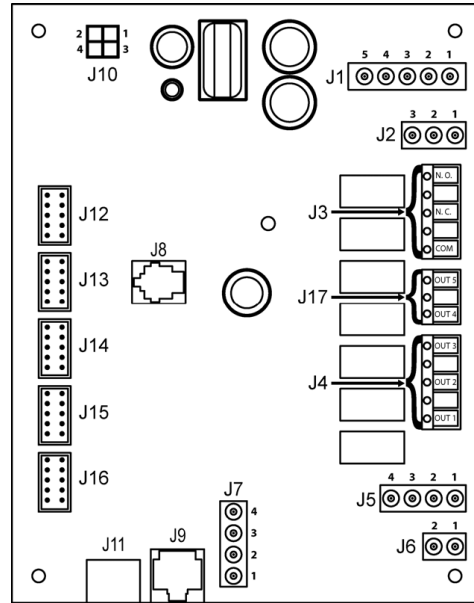


Figure 44. CCB (Central Control Board)

CENTRAL CONTROL BOARD (CCB)

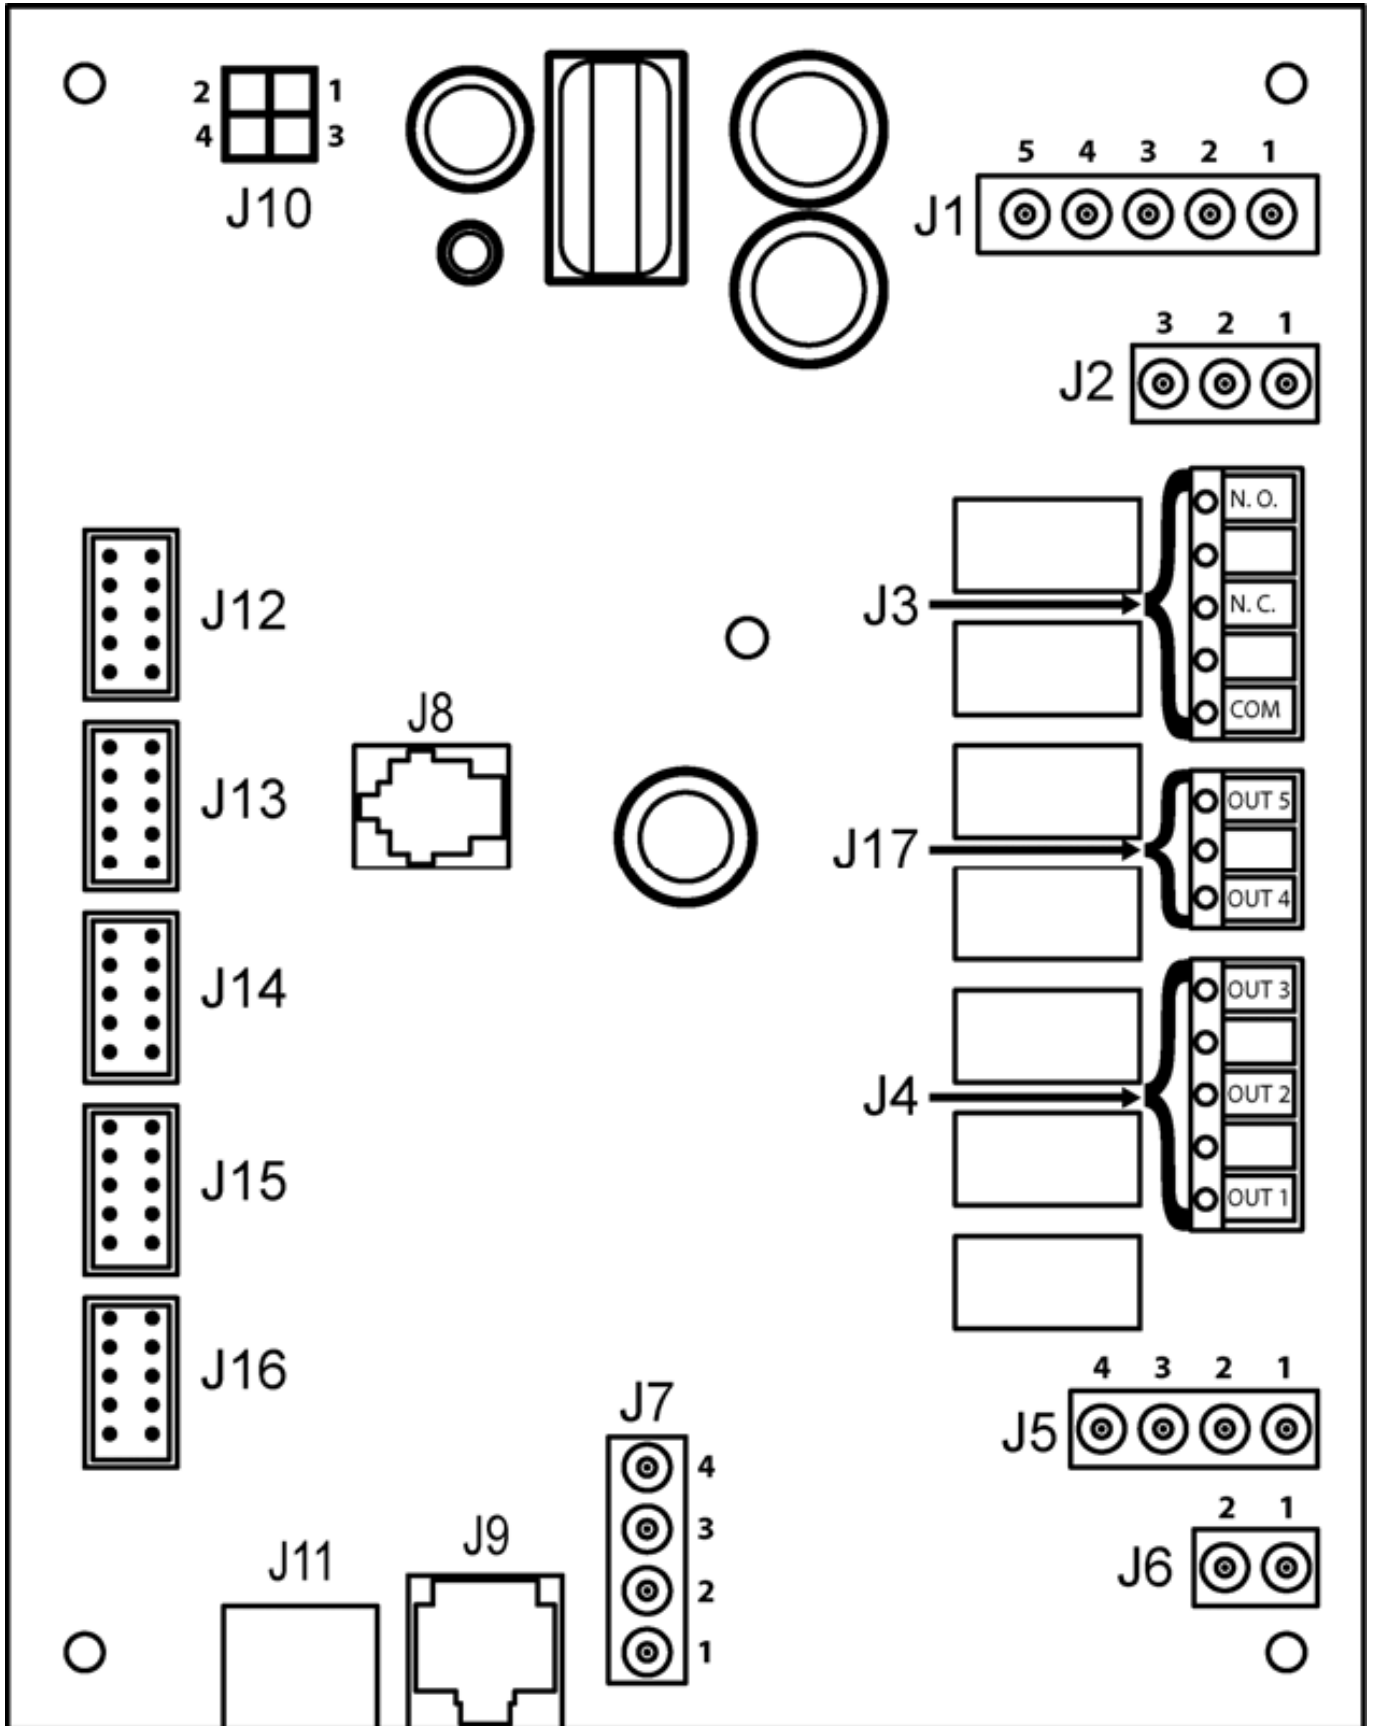All wiring connections and sockets will be identified in the following pages. The Troubleshooting section of this manual will refer to this illustration and information.



Printed on 6/17/2020 12:05 PM CT

## CCB SOCKET & WIRING TERMINAL IDENTIFICATION

Refer to the illustration (*page 43*) for physical location of the sockets and wiring terminals.

Table 6. J1 Socket - Transformer	
Pin #	Description
1	120 VAC hot to transformer
2	Not used
3	120 VAC neutral to transformer
4	24 VAC out from transformer
5	24 VAC out from transformer

Table 7. J2 Socket - 120 VAC Power Supply	
Pin #	Description
1	120 VAC hot
2	Earth Ground
3	120 VAC neutral

Table 8. J3 Wiring Terminals - Alarm Output Relay (see page 68)	
Terminal	Description
N. O.	Dry Contact Output - Normally Open Terminal Alarm Output Relay
N. C.	Dry Contact Output - Normally Closed Terminal Alarm Output Relay
COM	Dry Contact Output - Common Terminal Alarm Output Relay

Table 9. J4 Wiring Terminals - Contactor Coils	
Terminal	Description
OUT 1	120 VAC hot to Heating Element #1 Contactor Coil
OUT 2	120 VAC hot to Heating Element #2 Contactor Coil - if so equipped
OUT 3	120 VAC hot to Heating Element #3 Contactor Coil - if so equipped

Table 10. J5 Socket - Immersion Temperature Probe/ECO	
Pin #	Description
1	ECO (energy cut out) 120 VAC hot out (red wire)
2	Temperature probe (thermistor) +5.0 VDC (black wire)
3	Temperature probe (thermistor) -5.0 VDC (black wire)
4	ECO (energy cut out) 120 VAC return (red wire)

### J6 Socket - Not Used

Table 11. J7 Socket - Enable / Disable Circuits 1 & 2 (see pages 53 & 63)	
Pin #	Description
1	Enable/Disable circuit 1
2	Enable/Disable circuit 1
3	Enable/Disable circuit 2
4	Enable/Disable circuit 2

**J8 Socket - Not Used**

**J9 Socket - Not Used**

**J10 Socket - Not Used**

**J11 Port - Communication Port - UIM Display (user interface module)**

**J12 Socket - Heating Element #1 Sensors**

**J13 Socket - Heating Element #2 Sensors**

**J14 Socket - Heating Element #3 Sensors**

**J15 Socket - Heating Element #4 Sensors**

**J16 Socket - Heating Element #5 Sensors**

**J17 Wiring Terminals - Not Used**

## CCB ENABLE/DISABLE CIRCUIT(S) TEST

The electronic control system includes two enable/disable circuits (page 55) for use with field installed supervisory controls such as building EMS (Energy Management System). These two circuits are located at the CCB's four pin J7 Socket. Both of these enable/disable circuits must be closed to enable heating operation. If either circuit is open for any reason, heating operation will be disabled, even though the tank temperature may be well below the Operating Set Point. See *Heating Cycle Disabled (page 68)*.

There is a plug with two jumper wires installed from the factory in the CCB J7 socket to enable heating operation when external controls are not in use. If the plug is not present, or if one of the two jumper wires fails to close, either enable/disable circuit heating operation will be disabled. A simple continuity check is performed on the J7 Plug end to ensure heating should not be disabled as follows:

1. If either enable/disable circuit is in use (external wiring connected to J7 plug) by an external supervisory control, ensure that control's dry contacts are closed to enable heating operation. Check the supervisory control's settings/programming to ensure it is not disabling heating operation during occupied/peak demand periods.
2. If the J7 plug is missing or jumper wires are not installed in the J7 plug, call the toll free Technical Support phone number listed on the back cover of this manual for further assistance.
3. If there are no external supervisory controls wired to the J7 plug, secure power to the water heater. Unplug the J7 plug from the CCB. See *Central Control Board (CCB) (page 43)* for location.
4. Using an ohmmeter, set the ohmmeter to it's lowest resistance range (< 200), or to an audible beep continuity test setting if so equipped.
5. Touch the ohmmeter probes between pins 1 & 2 first and then between pins 3 & 4 of the J7 plug end as shown in the images below. There should be continuity present in both tests.
  - If the ohmmeter shows no continuity (open circuit) between pins 1 & 2 or between pins 3 & 4 of the J7 plug end, ensure that the two jumper wires are properly installed in the plug end and are not broken. Ensure the J7 plug/socket connection is mating properly and providing good contact. Repair/replace damaged plug connectors/wiring as necessary.
  - If the ohm meter shows continuity (closed circuit) between pins 1 & 2 and between pins 3 & 4 of the J7 plug end and heating operation will not activate with a cold tank of water call the toll free Technical Support phone number listed on the back cover of this manual for further assistance.

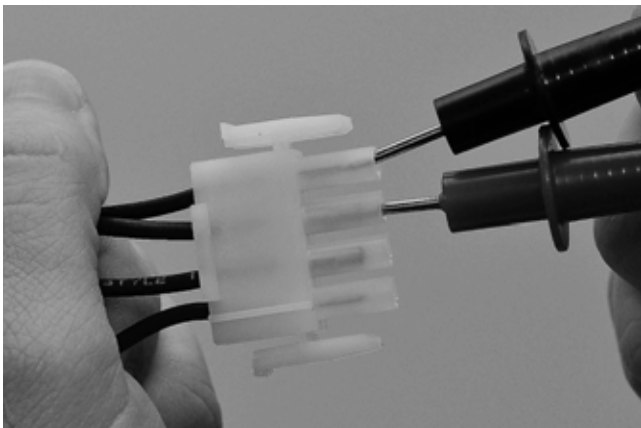


Figure 45. Testing for Continuity Between Pins 1 & 2

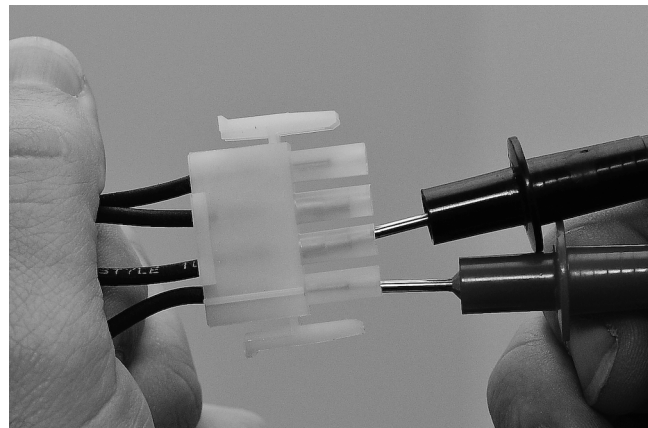


Figure 46. Testing for Continuity Between Pins 3 & 4

**Service Note:** If a supervisory control(s) is used to enable/disable heating operation, install field wiring between the J7 socket on the CCB and a set of "dry contacts" on the external control per all applicable building codes. This is a switching circuit only; **DO NOT** apply any external voltage or connect any load (IE: relay coil) to either circuit.

## CHECKING POWER AND GROUND TO THE CCB

The CCB is powered by the 120 VAC control-circuit transformer (page 36) at the J2 Socket, pins 1 & 3. See *Central Control Board (CCB) (page 43)*. This procedure is performed to ensure that the 120 VAC power is being supplied to the CCB.

1. Ensure the main breaker or disconnect switch is turned on.
2. Verify with an AC volt meter that proper voltage is present at the power distribution block. See *Figure 2* (page 10).
3. Using an AC volt meter, set the volt meter to an AC voltage range just above 120 VAC.
4. **Ensure 120 VAC power is supplied to the CCB.** With the J2 plug installed in the J2 socket on the *Central Control Board (CCB) (page 43)*, insert the two volt meter probes into pins 1 & 3 of the J2 plug as shown in the “Checking for 120 VAC” image below. Volt meter probes may have to be pressed firmly into the plug to make contact with the metal conductors inside. Voltage should be approximately 120 VAC.
5. If the measured voltage is approximately 120 VAC, the CCB is receiving the correct power.
6. If the measured voltage is zero volts or considerably less than 120 VAC, do the following:
  - Check the 120 VAC wiring between the CCB J2 socket and the 120 VAC control-circuit transformer. Ensure wiring is correct and connections are tight and making good contact.
  - Check the J2 plug/socket connections on the CCB for wear or damage. Ensure they are mating properly and providing good contact. See *Central Control Board (CCB) (page 43)*.
  - Check the 120 VAC control-circuit transformer to ensure it is wired correctly and outputting the correct voltage. See *Transformers* (page 35).
  - Check the Control Circuit fuses. See *Figure 2* (page 10) for location and the *Fuses* test procedure (page 18).
7. **Ensure earth ground is supplied to the CCB.** With the J2 plug installed in the J2 socket on the CCB (page 43), insert the two volt meter probes into pins 1 & 2 of the J2 plug as shown in the “Checking for Ground” image below. Volt meter probes may have to be pressed firmly into the plug to make contact with the metal conductors inside. If the measured voltage is approximately 120 VAC, the CCB is properly grounded.
8. If the measured voltage is zero volts or considerably less than 120 VAC:
  - Check the ground wiring between the CCB J2 socket and the water heater’s ground connection. Ensure wiring is correct and connections are tight and making good contact.
  - Ensure the water heater is properly grounded.



Figure 47. Checking for 120 VAC Power

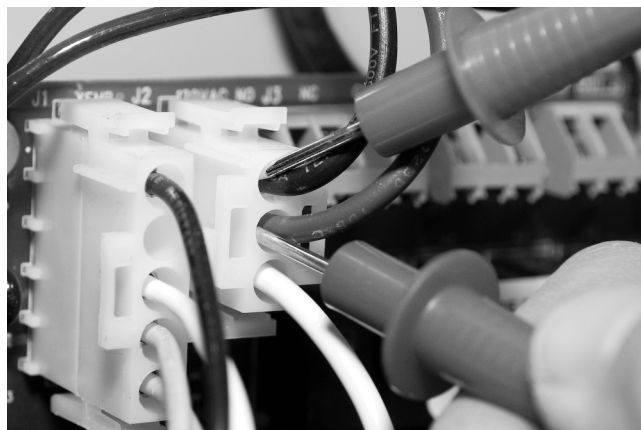


Figure 48. Checking for Ground

## User Interface Module (UIM)

### UIM Components

The UIM's major components include a Circuit Board with LCD display and a Button Pad Overlay which contains the five user input buttons.

**Service Note:** The Ribbon Cable that connects the Button Pad Overlay to the UIM Circuit Board must be plugged in exactly as shown in the images below; with the metal crimp connections visible on the plug end and the UIM Circuit Board back facing out. There are six pins on this Ribbon cable socket, Ensure all six pins are inserted into the Ribbon Cable plug whenever removing or installing the UIM or Button Pad Overlay.

Failure to connect this Ribbon cable exactly as shown when servicing will render the User Input Buttons inoperable. This should be checked whenever the nature of the service complaint is an inoperable or unresponsive controller or UIM.

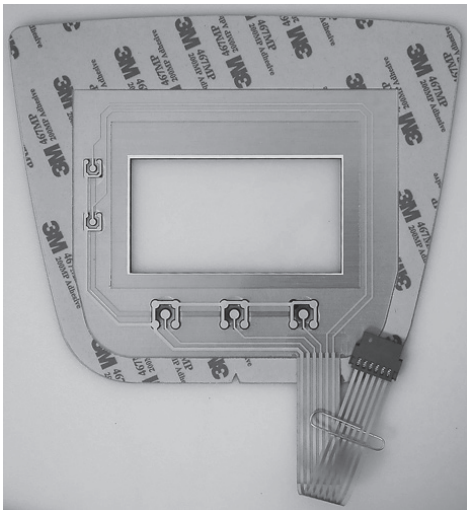


Figure 49. Button Pad Overlay

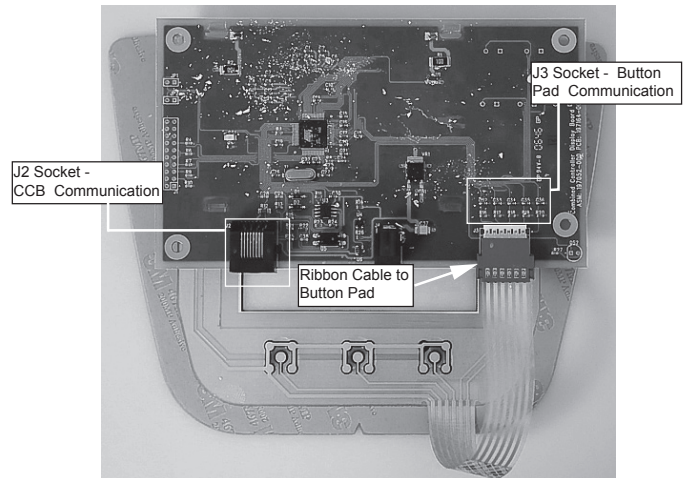


Figure 50. UIM Circuit Board Back

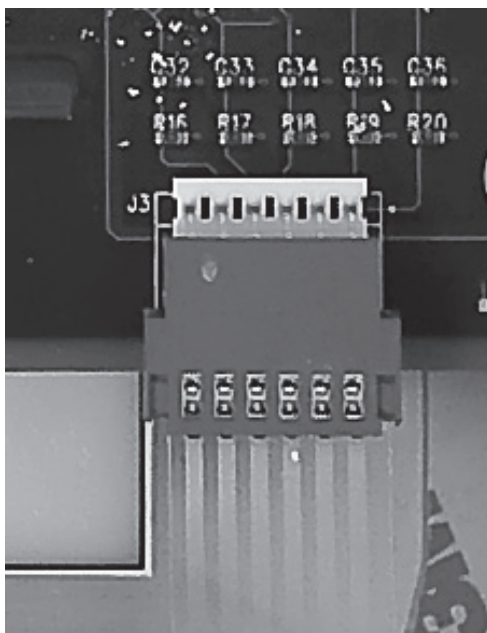


Figure 51. Ensure that the ribbon cable is installed exactly as shown.

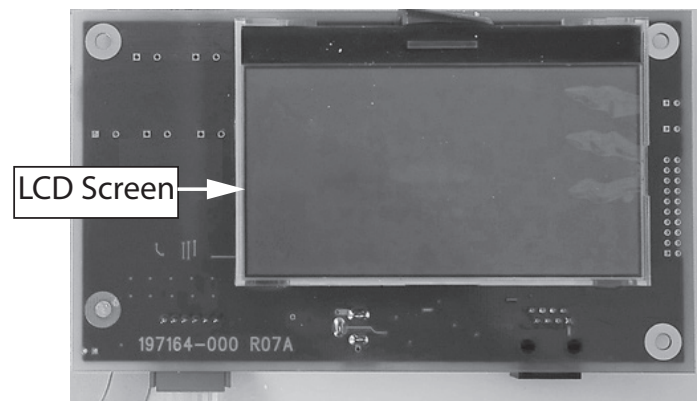


Figure 52. UIM Circuit Board Front



CONTROL SYSTEM FEATURES

Advanced Diagnostics

Plain English text and animated icons display detailed operational and diagnostic information. LCD screen on the front of the water heater displays the Sequence of Operation in real time. Fault or Alert messages are displayed when operational problems occur. An Advanced Service menu displays a list of possible causes for current fault and alert conditions to aid in servicing. See *Troubleshooting* (page 66).

Economy Mode Operation

The control system automatically lowers the Operating Set Point by a programmed value during user defined time periods. This helps reduce operating costs during unoccupied or peak demand periods. See *Economy Mode Setup Menu* (page 56) .

Linear Sequencing

First bank on is the last bank off. Banks of heating elements (3 elements per bank) are energized according to adjustable (1 to 20°) differential set points for each bank. See *Temperatures Menu* (page 53). Helps reduce operating costs during low/moderate loads.

CONTROL SYSTEM NAVIGATION

The User Interface Module (UIM) is located on the front cabinet of the the Electronic Control Model water heaters. All operational information and user settings are displayed and accessed using the UIM. The UIM includes five snap acting (momentary) user input buttons: Up and Down buttons and 3 Operational Buttons.

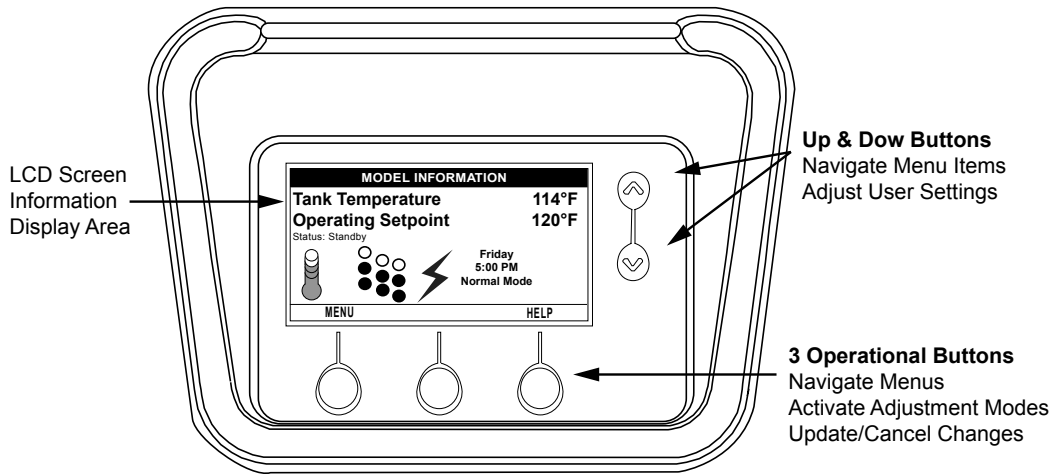


Figure 53. User Interface Module (UIM) Screen Components

Up & Down Buttons

Used to navigate (up and down) and to select (highlight) menu items. Also used to adjust or change (increase/decrease, on/off, set time) various user settings.

Operational Buttons

The three Operational Buttons are multifunctional. Their current function is defined by the text that appears directly above each button on the LCD screen. The function will change depending on what menu is currently displayed or what menu item is selected. When no text appears on the LCD screen above an Operational Button there is no function assigned.

Printed on 6/17/2020 12:05 PM CT

## THE DESKTOP SCREEN

The illustration below shows the control system “Desktop Screen.” This is the default screen. If there are no active Fault or Alert conditions and no user input for approximately 10 minutes the control system will return to this screen automatically.

**Model Information:** Model information and menu titles are shown in the black bar at the top of the Desktop Screen.

**Tank Temperature:** Current water temperature as sensed from the *Immersion Temperature Probe* (page 38).

**Operating Set Point:** Temperature at which the control system will maintain tank (water) temperature in the Normal Mode. This line of text will read *Economy Set Point* whenever the control system is operating in the Economy Mode. See *Temperatures Menu* (page 53) and *Economy Mode Setup Menu* (page 56).

**Status:** The Operating State of the control system is displayed beneath the Operating Set Point. See *Table 13* (page 52).

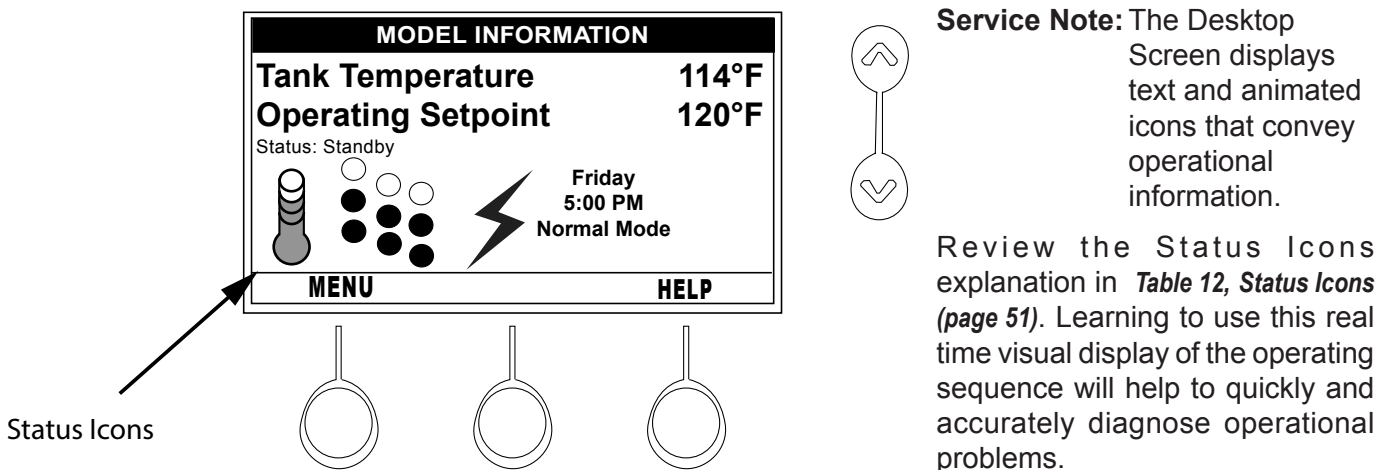


Figure 54. Status Icons on the Model Information Screen













**Day/Time/Operating Mode:** The current time and day are also displayed on the Desktop Screen. “Clock Not Set” will be displayed until the time clock has been initially set. Day and Time are adjusted in the Economy Mode settings. See *Economy Mode Setup Menu* (page 56). The current Operating Mode, either Normal Mode or Economy Mode, is displayed beneath the day and time.

**Menu:** The left Operational Button is pressed to enter the Main Menu where all control system menus are accessed. See *Table 14* (page 52) for a list of control system menus.

**Help:** The right Operational Button is pressed to access instructions and explanations for user settings, Operating States, Status Icons, manufacturer’s web address, the technical support phone number, and service agent contact information.

**Discreet Menu Contact Information:** From the Desktop Screen, press and hold down the middle (unmarked) Operational Button for 30 seconds and then release it. This will launch a discreet menu where personalized contact information can be entered. Installing contractors and/or service agents can enter their company name and telephone number. This contact information will be displayed with all Fault and Alert messages.

Table 12. Status Icons

Icon	Description
	Water temperature in the tank has fallen. Shaded area of the animated thermometer icon will rise and fall in response to water temperature in the storage tank as sensed from the immersion Temperature Probe.
	Water temperature in the tank has reached the Operating Set Point. Shaded area of the animated thermometer icon will rise and fall in response to water temperature in the storage tank as sensed from the immersion Temperature Probe.
	The control is unable to initiate a heating cycle. This will happen whenever a Fault condition is detected by the control system or when either of the two Enable/Disable circuits are open circuits. For more information on Enable/Disable circuits review <i>Heater Status Menu (page 55)</i> .
	The control system is in Heating Mode and has energized the electromagnetic contactor coils for at least one heating element. This animated icon DOES NOT indicate current has been sensed from the heating elements, only that there is a call for heat present and the control system has initiated heating element operation.
	Heating elements icon for a water heater equipped with 1 Bank of heating elements. Each circle represents one heating element. Each diagonal row of 3 elements = 1 Bank of elements. Open circles represent heating elements the control system has not energized and is not sensing electrical current from.
	Heating elements icon for a water heater equipped with 2 Banks of heating elements. Each circle represents one heating element. Each diagonal row of 3 elements = 1 Bank of elements. Open circles represent heating elements the control system has not energized and is not sensing electrical current from.
	Heating elements icon for a water heater equipped with 3 Banks of heating elements. Each circle represents one heating element. Each diagonal row of 3 elements = 1 Bank of elements. Open circles represent heating elements the control system has not energized and is not sensing electrical current from.
	Heating elements icon for a water heater equipped with 3 Banks of heating elements. Each circle represents one heating element. Each diagonal row of 3 elements = 1 Bank of elements. Filled circles represent heating elements the control system has energized AND is sensing electrical current from.
	Heating elements icon for a water heater equipped with 3 Banks of heating elements. Each circle represents one heating element. Each diagonal row of 3 elements = 1 Bank of elements. Open circles with an X represent heating elements the control system has energized that it IS NOT sensing electrical current from.
	Heating elements icon for a water heater equipped with 3 Banks of heating elements. In this example 2 Banks (6 elements) have been energized and 3 elements have not. The control system is sensing electrical current from 4 heating elements. The control system is reporting that it is not sensing electrical current from 2 elements that it should be sensing current from. The control system would declare an Alert Condition in this case.
	The control has detected/declared a Fault Condition. Fault message details can be viewed in the Current Fault menu. Heating operation is discontinued (locked out) until the condition that caused the Fault is corrected. Power to the water heater must be cycled off and on to reset the control system. Note; cycling power will not reset the control system if the condition that caused the Fault has not been corrected.
	The control has detected/declared an Alert Condition. The water heater will continue to operate during an Alert Condition but there is an operational condition that requires the attention of a Qualified Service Agent. Alert message details can be viewed in the Current Alert menu.

**Table 13. Operating States**

State	Description
Standby	The water heater is not in an active heating cycle. This usually indicates the temperature in the tank has reached the Operating Set Point and the control system has terminated the heating cycle.
Heating	The control system is in the Heating Mode. At least one heating element has been energized.
Alert	The control system has detected/declared an Alert Condition. The controls system will continue heating operation. However, a Qualified Service Agent should be contacted to check/service the water heater.
Fault	The control system has detected/declared a Fault Condition. The control system will discontinue heating operation and "lock out." Power to the water heater must be cycled off and on to reset the control system. Note; cycling power will not reset the control system until the condition that caused the Fault has been corrected.

**Table 14. Control System Menus**

Menu†	Description
Temperatures	Most commonly accessed menu. Operating Set Point, Differential settings, Tank Temperature and Tank Probe Offset are located in this menu.
Heater Status	Current Operating State/Mode (heating/standby etc) and status (open/closed - on/off - yes/no) of monitored water heater functions and components are displayed in this menu.
Economy Mode Setup	Seven day 24 hour time clock with temperature set back capability to reduce operating costs during unoccupied or reduced demand periods.
Alarm Output Setup	The control system's CCB (Central Control Board) ( <i>page 43</i> ) features on board SPDT (single pole double throw) relay contacts for building EMS (Energy Management System) notification of operational conditions such as Fault Conditions and heating mode status. This menu features a list of user definable conditions for relay activation.
Display Settings	Temperature units (°F or °C), appearance (brightness contrast) and backlight delay user adjustable settings are located in this menu.
Heater Information	Elapsed time of operation, total heating cycle time, heating cycle count, heating element bank(s) cycle count, and heating bank on time, along with UIM and CCB software revisions can be viewed in this menu.
Current Fault/Alert	Displays any current Alert or Fault messages.
Fault History	Retains 9 event history of Fault/Alert messages with time stamp. The Fault History is useful when dealing with intermittent operational problems or when the customer has reset the control system prior to a service agent's arrival.
Fault Occurrence	Total accumulated number each individual Fault condition has occurred is displayed in this menu. This running total of Fault Occurrences can be useful in determining which (if any) operational problems have been persistent.
Restore Factory Defaults	This control system feature allows the user to restore control system user settings to their factory default settings. Alarm Output Setup and Display Settings menu items ARE NOT changed when factory defaults are restored.
Help Menu	Accessible by pressing the corresponding Operational Button from most menus and screen displays. This menu provides access to instructions and explanations for user settings, Operating States, Status Icons, manufacturer's web address, technical support phone number and service agent contact information.

†. This table shows a list of the control system menus. These menus will be explained in greater detail in the pages that follow.

**TEMPERATURES MENU**

**Operating Set Point**

User adjustable setting 90°F to 190°F range; factory default is 120°F. When the water temperature sensed by the control system from the immersion Temperature Probe reaches the Operating Set Point the control system will end the heating cycle. A call for heat will be activated again when the water temperature drops below the Operating Set Point minus the 1st Differential Setting.

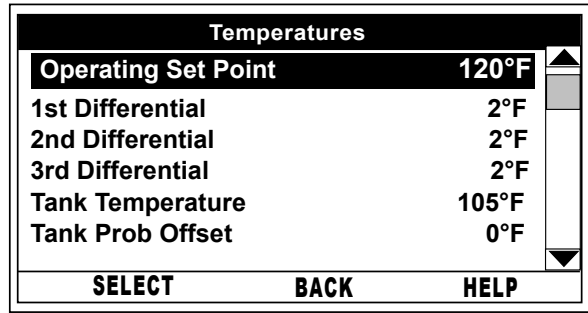


Figure 55. Temperatures Menu Screen

Example: Operating Set Point is 120°F, the 1st Differential Setting is 2°F. A call for heat will be activated when the sensed water temperature drops to 118°F.

**Differential Settings**

Adjustable user setting(s) 1°F to 20° range; factory default is 2°F. The water heaters covered in this manual will have 3, 6 or 9 heating elements. Each group of 3 heating elements is one “Bank” of heating elements. Heating elements are energized in Banks of 3. Each Bank of heating elements will have a Differential Setting associated with it. Differential Settings are located in the Temperatures Menu.

There is a 1st Differential Setting on all models. There will be one additional Differential Setting visible/adjustable for each additional Bank of (3) heating elements.

**Operating Sequence:** With an Operating Set Point of 120°F and all Differential settings at 2°F the On/Off sequencing of heating element Banks would be as follows:

Table 15. Element Temperature Settings			
Bank Number	Differential Setting	Turn On Temp	Turn Off Temp
Bank 1	2°F	118°F	120°F
Bank 2	2°F	116°F	118°F
Bank 3	2°F	114°F	116°F

**Tank Temperature**

Non adjustable information display. Current water temperature as sensed by the control system from the immersion Temperature Probe.

**Tank Probe Offset**






User adjustable setting -5°F to +5°F range; factory default is 0°F. If the current Tank Temperature is sensed (from the immersion Temperature Probe) at 120°F and the offset is adjusted to -5°F the control system would calibrate or “offset” the Tank Temperature to 115°F. Heating cycles would then start/stop based on the calibrated Tank Temperature.

Used to calibrate for slight differences in control system temperature sensing. This can improve the precision of temperature control in the storage tank and at points of use. This feature can also be used to compensate for building recirculation loops (hot water returning to the storage tank) that may cause the heating cycle to terminate prematurely.

## TEMPERATURE SETTINGS

The Operating Set Point and the Differential Settings are adjusted in the *Temperatures Menu* (page 53). The following instructions explain how to adjust these user settings and navigate the control system menus.

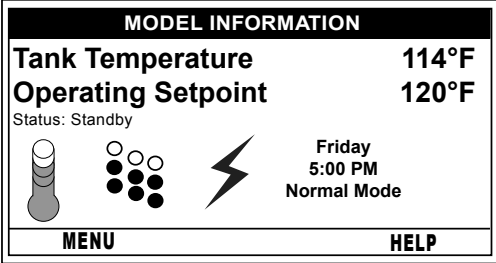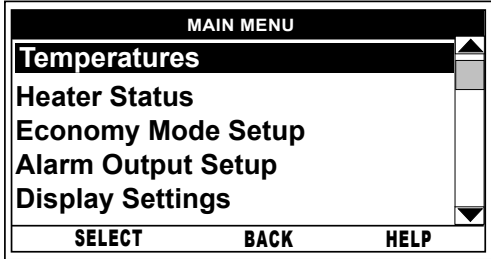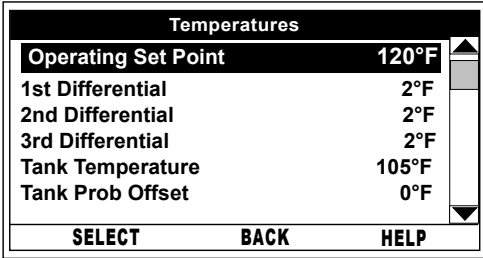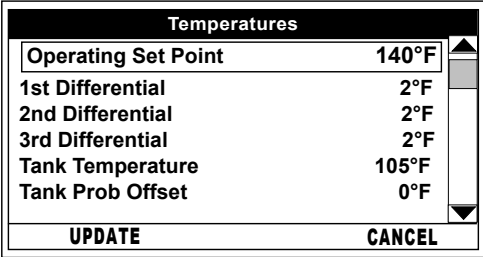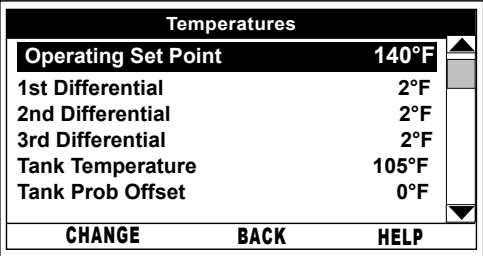Table 16. Temperature Settings Menu

Action	Display
<p>From the Desktop Screen, press the Operational Button underneath “MENU” to enter the Main Menu. See <i>Control System Navigation</i> (page 49).</p> <p>Notice how the text above the Operational Buttons on the display changes as you navigate through the various menus and screens.</p>	
<p>With Temperatures selected (highlight in black) in the Main Menu, press the Operational Button underneath “SELECT” to enter the Temperatures Menu.</p> <p>If Temperatures is not selected use the Up and Down buttons to select this menu item.</p>	
<p>With the Operating Set Point selected (highlight in black) in the Temperatures Menu, press the Operational Button underneath “CHANGE” to activate the adjustment mode for this menu item.</p>	
<p>Press the Up and Down buttons to adjust the Operating Set Point to the desired setting.</p> <p>Press the Operational Button underneath “UPDATE” to confirm the new setting. Press the Operational Button underneath “CANCEL” to discard the new setting and retain the previous setting.</p> <p>The new Operating Set Point value should now be displayed as the current value.</p> <p><b>Note:</b> Use this same procedure to adjust the Differential settings and the Tank Probe Offset in the Temperatures Menu.</p> <p>This same procedure is used to change user settings in other control system menus.</p>	 

## HEATER STATUS MENU

This menu displays non adjustable operational information. Use the Up & Down Buttons to navigate to the bottom and top of this menu.

### Status

Displays the current Operating State of the control system. For example, Heating, Standby, or Fault. See *Table 13* (page 52).

### Element Banks On #

Displays the current number of heating element Banks the control system has energized. Each Bank of elements contains 3 heating elements.

### ECO Contact

Displays the current state of the ECO high temperature limit switch contacts. The ECO switch is located inside the immersion Temperature Probe (two red wires).

### Enable / Disable 1 & 2

Displays the current state, open or closed, of the two Enable/Disable circuits (J7 socket on the CCB (page 43)) provided for external supervisory controls such as building EMS (Energy Management System). Both of these Enable/Disable circuits must be closed to “enable” heating operation. If either Enable/Disable circuit is open heating will be “disabled.” A plug with two jumper wires is installed from the factory in the CCB J7 socket to enable heating operation when external controls are not in use.

**Service Note:** If a supervisory control(s) is used to enable/disable heating operation, install field wiring between the J7 socket on the CCB and a set of “dry contacts” on the external control per all applicable building codes. This is a switching circuit only: **DO NOT** apply any external voltage or connect any load (IE: relay coil) to either circuit.

### Element Bank On

Displays the on/off status of each heating element. Yes = On, No = Off.

### Alarm Condition

Displays the status of the user definable Alarm Output function. See *Alarm Output Settings* (page 61). Yes = alarm condition has been met, No = alarm condition has not been met.

### Alarm Relay Output

Displays the state of the normally open contacts of the Alarm Output relay. This relay with J3 contacts on the CCB, is used for building EMS (Energy Management System) notification of operational conditions such as Fault conditions and heating mode status. See *Central Control Board (CCB)* (page 43)

Top Of Menu

Heater Status		
Status	Heating	▲
Elements On	1	
ECO Contact	Closed	
Enable / Disable 1	Closed	
Enable / Disable 2	Closed	
Element Bank 1 On	Yes	
Element Bank 2 On	No	▼
CHANGE      BACK      HELP		

Bottom Of Menu

Heater Status		
Enable / Disable 1	Closed	▲
Enable / Disable 2	Closed	
Element Bank 1 On	Yes	
Element Bank 2 On	No	
Element Bank 3 On	No	
Alarm Condition	No	
Alarm Relay Output	Open	▼
BACK      HELP		

## ECONOMY MODE SETUP MENU

This menu contains settings used to establish an “Economy Set Point” and “Economy Mode” operating periods. This control system feature can help reduce operating costs during unoccupied or low demand periods.

### Setpoint Adjustment

Adjustable user setting (2°F to 50°F - factory default is 20°F) the control system uses to calculate the “Economy Set Point.” The Economy Set Point = normal Operating Set Point minus the programmed Setpoint Adjustment value. The Economy Set Point is the water temperature the control system maintains during programmed Economy Mode time periods. “Economy Set Point” is displayed instead of “Operating Set Point” and “Economy Mode” appears beneath the current time on the Desktop Screen during Economy Mode time periods.

### Current Time

Seven Day 24 hr clock. Use this menu item to set the current time and day of the week.

Current day and time are not set from the factory. “Clock Not Set” will be displayed on the Desktop until the time/day has been initially set. Note: the time will not self adjust for Daylight Savings time.

### Heater In Economy Mode

Displays whether the control system is currently operating in Economy Mode or not.

### Daily Operating Mode (Sun - Mon - Tue - Wed - Thu - Fri - Sat)


Seven daily sub menus are listed at the bottom of the Economy Mode Setup menu. There are 3 Operating Modes available in each daily sub menu; “Normal Operation All Day” - “Economy Mode All Day” and “Normal Operation Between.” Only one Operating Mode can be active at a time, the factory default is Normal Operation All Day.

**Normal Operation All Day:** When this operating mode is active the normal Operating Set Point (*Temperatures Menu (page 53)*) is used for the entire day.

**Economy Mode All Day:** When this operating mode is active the Economy Set Point is used for the entire day. Economy Set Point = normal Operating Set Point minus the programmed Setpoint Adjustment value.

**Normal Operation Between:** When this operating mode is active there will also be start and stop times to program. The normal Operating Set Point is used between the programmed start and stop times and the Economy Set Point will be in effect during the rest of the day. There is one programmable start and stop time event per day.

Desktop Screen During Economy Mode

MODEL INFORMATION	
Tank Temperature	120°F
Operating Setpoint	100°F
Status: Standby	
	Friday 5:00 PM Normal Mode
MENU	HELP





Economy Mode Setup Menu

Economy Mode Setup	
Setpoint Adjustment	20
Current Time	Mon 5:00 PM
Heater In Economy Mode	No
Sun	Economy Mode All Day
Mon	Normal 7:30 AM to 8:00 PM
Tue	Normal All Day
Wed	Normal All Day
CHANGE	BACK HELP



**Economy Mode Settings Setpoint Adjustment Value**

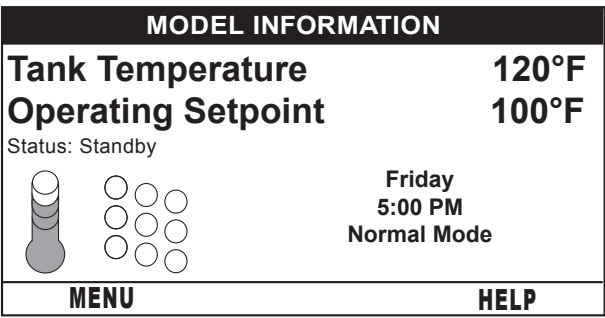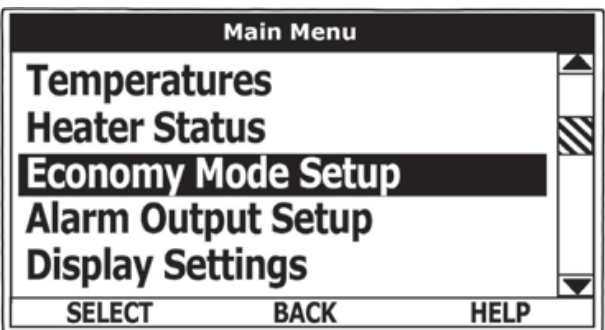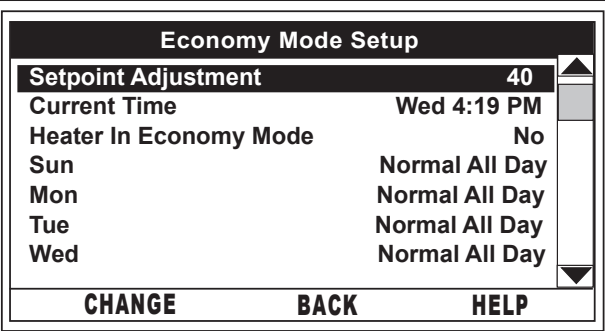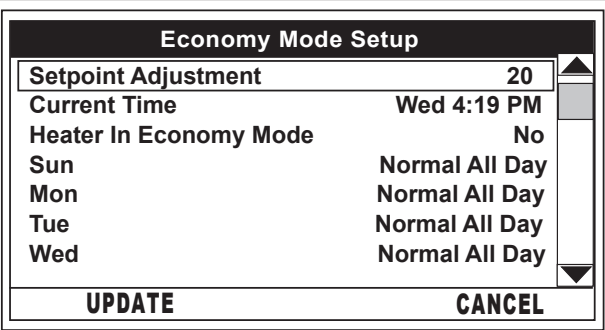**Table 17. Setpoint Adjustment Value**

Action	Display
<p>From the Desktop screen, press the Operational Button underneath “MENU” to enter the Main Menu. See <i>Control System Navigation (page 49)</i>.</p> <p>Notice how the text above the Operational Buttons on the display changes as you navigate through the various menus and screens.</p>	
<p>Use the Up/Down buttons to select (highlight in black) the Economy Mode Setup menu from the Main Menu. Press the Operational Button underneath “SELECT” to enter the Economy Mode Setup menu.</p>	
<p>Use the Up/Down buttons to select (highlight in black) Setpoint Adjustment. Press the Operational Button underneath “CHANGE” to activate the adjustment mode for the Setpoint Adjustment value.</p>	
<p>Use the Up/Down buttons to change the Setpoint Adjustment to the desired value. The Setpoint Adjustment value is adjustable from 2°F to 50°F. The factory default is 20°F.</p> <p>Notice how the text above the Operational Buttons on the display changes to “UPDATE” &amp; “CANCEL” when the adjustment mode is activated and how the current value is outlined rather than highlighted in black.</p> <p>Press the Operational Button underneath “UPDATE” to enter and confirm the new value. Pressing the Operational Button underneath “CANCEL” would discard the new value and retain the previous value.</p>	

Printed on 6/17/2020 12:05 PM CT

Table 17. Setpoint Adjustment Value

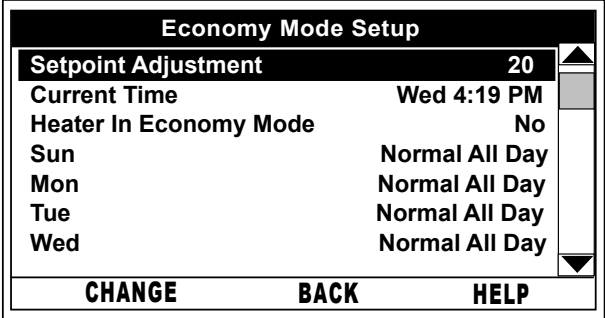
Action	Display
<p>The new Setpoint Adjustment value should now be displayed as the current value.</p>	

Table 18. Time Clock Settings

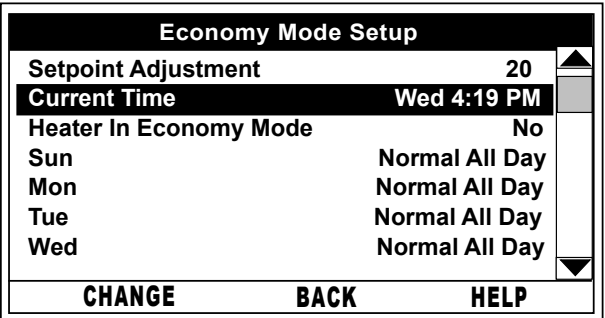
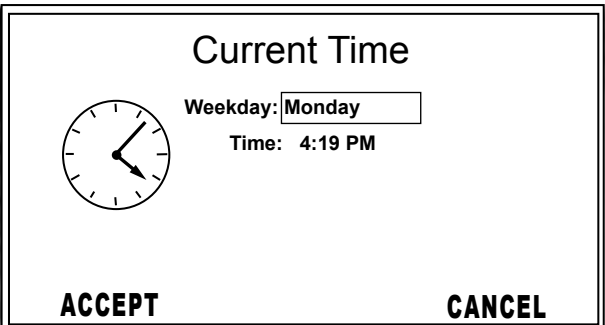
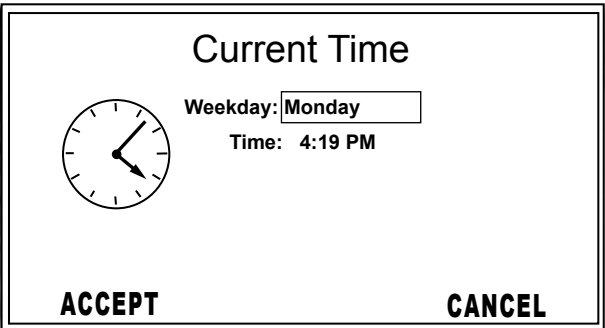
Action	Display
<p>From the Desktop Screen navigate to the Economy Mode Setup menu - see page 65 for instructions.</p> <p>Use the Up/Down buttons to select (highlight in black) Current Time sub menu. Press the Operational Button underneath "CHANGE" to enter the Current Time sub menu.</p>	
<p>Use the Up/Down buttons to select the "Weekday" setting.</p> <p>Press the Operational Button underneath "CHANGE" to activate the adjustment mode for this setting.</p>	
<p>Press the Up and Down buttons to adjust the Weekday setting to the current day.</p> <p>Notice how the text above the Operational Buttons on the display changes to "ACCEPT" &amp; "CANCEL" when the adjustment mode is activated and how the current setting is outlined rather than highlighted in black.</p> <p>Press the Operational Button underneath "ACCEPT" to enter and confirm the new setting. Pressing the Operational Button underneath "CANCEL" would discard the new setting and retain the previous setting.</p>	

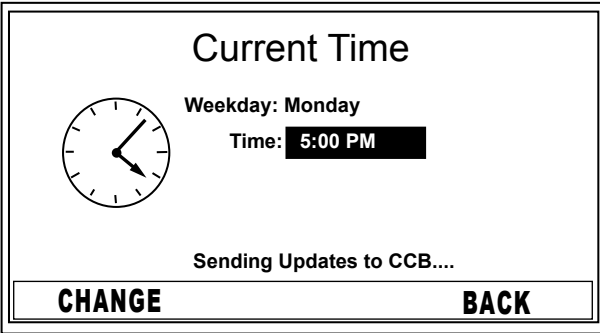
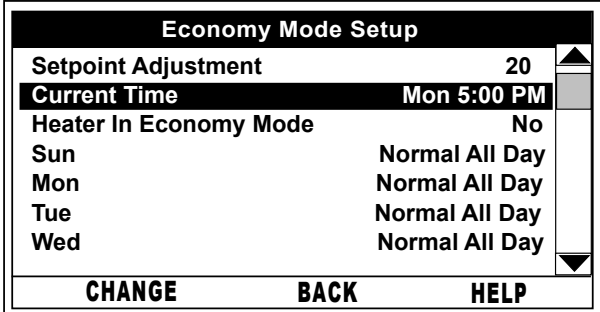
Table 18. Time Clock Settings	
Action	Display
<p>Use the Up/Down and the CHANGE/ACCEPT Operational Buttons to individually select and change the remaining time settings (Hour, Minutes, AM/PM) to the current time in the same way as outlined above.</p> <p>When finished making changes press the Operational Button underneath "BACK" to confirm all new settings and update the control system. The display will automatically return to the Economy Mode Setup menu.</p>	
<p>The new settings should be displayed as the Current Time.</p>	

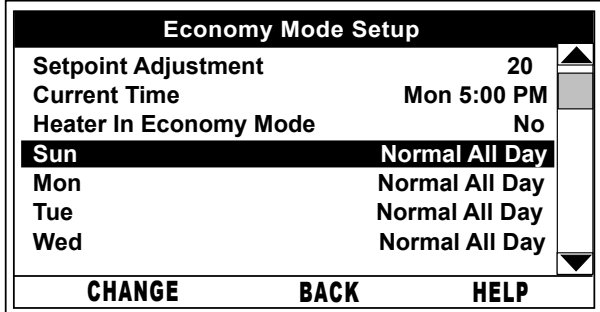
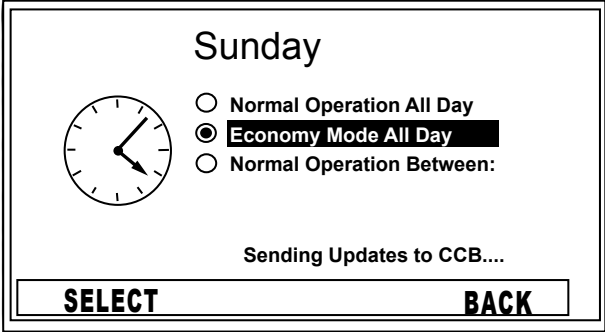
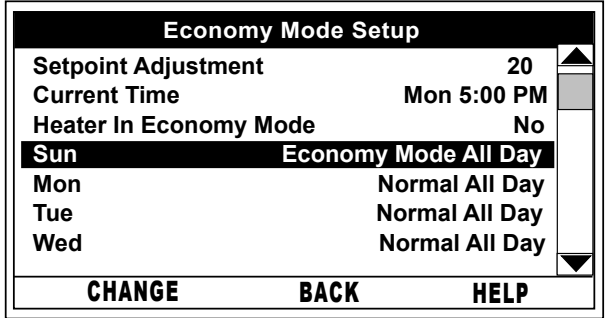
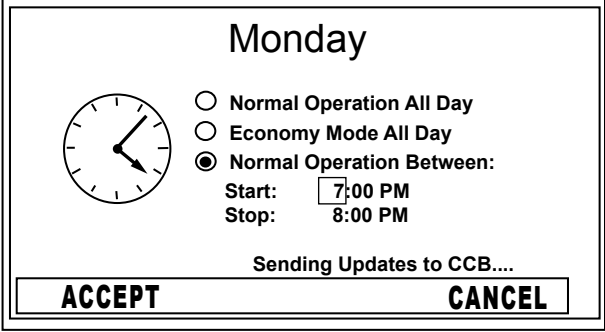
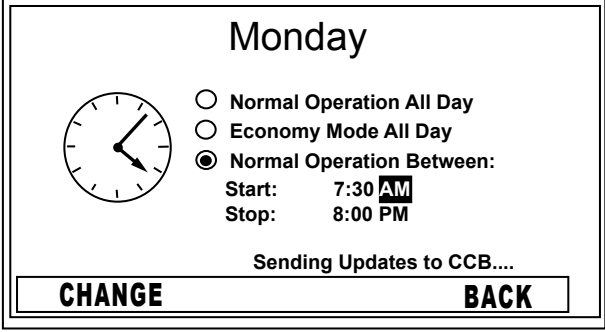
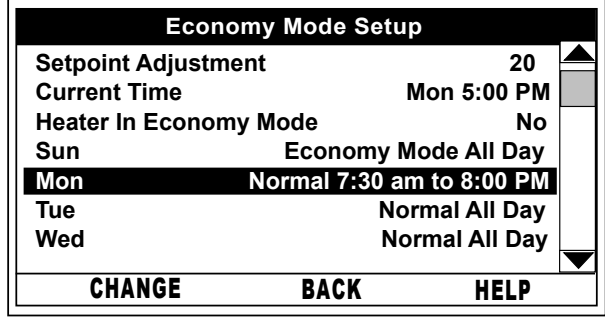
Table 19. Daily Operating Mode Setting	
ACTION	DISPLAY
<p><b>Economy Mode All Day:</b></p> <p>From the Economy Mode Setup menu use the Up/Down buttons to select (highlight in black) the Daily sub menu for "Sun." Press the Operational Button underneath "CHANGE" to enter this menu.</p> <p>See "Time Clock" settings <i>Economy Mode Setup Menu (page 56)</i> for instructions on navigating to the Economy Mode Setup menu.</p>	

Table 19. Daily Operating Mode Setting

ACTION	DISPLAY
<p>Use the Up/Down buttons to select (highlight in black) the “Economy Mode All Day” setting.</p> <p>Press the Operational Button underneath “SELECT” to change from the factory default Normal Operation All Day setting to the Economy Mode All Day setting.</p> <p>Press the Operational Button underneath “BACK” to confirm the new setting and update the control system. You will be returned to the Economy Mode Setup menu. The new setting should now be displayed for Sun.</p>	 <p><b>Sunday</b></p> <p><input type="radio"/> Normal Operation All Day  <input checked="" type="radio"/> <b>Economy Mode All Day</b>  <input type="radio"/> Normal Operation Between:</p> <p>Sending Updates to CCB....</p> <p><b>SELECT</b> <b>BACK</b></p>  <p><b>Economy Mode Setup</b></p> <p>Setpoint Adjustment 20  Current Time Mon 5:00 PM  Heater In Economy Mode No  <b>Sun Economy Mode All Day</b>  Mon Normal All Day  Tue Normal All Day  Wed Normal All Day</p> <p><b>CHANGE</b> <b>BACK</b> <b>HELP</b></p>
<p><b>Normal Operation Between:</b></p> <p>From the Economy Mode Setup menu Use the Up/Down and CHANGE buttons to enter the Mon sub menu as described above.</p> <p>Use the Up/Down buttons to select (highlight in black) the “Normal Operation Between” setting. Press the Operational Button underneath “SELECT” to change the operating mode for Monday to Normal Operation Between. Note that when this setting is selected Start and Stop time user settings appear on the display.</p> <p>Use the Up/Down buttons to navigate between the Start and Stop time Hour, Minutes and AM/PM settings.</p> <p>With each item selected press the Operational Button underneath “CHANGE” to activate the adjustment mode for each setting. Use the Up/Down buttons to change the value to the desired setting.</p> <p>Press the Operational Button underneath “ACCEPT” to enter the new setting or “CANCEL” to discard the new setting and retain the previous setting.</p> <p>Press the Operational Button underneath “BACK” when finished to confirm the new settings and update the control system. The display will return to the Economy Mode Setup menu with the new settings shown for Mon.</p>	 <p><b>Monday</b></p> <p><input type="radio"/> Normal Operation All Day  <input type="radio"/> Economy Mode All Day  <input checked="" type="radio"/> <b>Normal Operation Between:</b>  Start: 7:00 PM  Stop: 8:00 PM</p> <p>Sending Updates to CCB....</p> <p><b>ACCEPT</b> <b>CANCEL</b></p>  <p><b>Monday</b></p> <p><input type="radio"/> Normal Operation All Day  <input type="radio"/> Economy Mode All Day  <input checked="" type="radio"/> <b>Normal Operation Between:</b>  Start: 7:30 <b>AM</b>  Stop: 8:00 PM</p> <p>Sending Updates to CCB....</p> <p><b>CHANGE</b> <b>BACK</b></p>  <p><b>Economy Mode Setup</b></p> <p>Setpoint Adjustment 20  Current Time Mon 5:00 PM  Heater In Economy Mode No  Sun Economy Mode All Day  <b>Mon Normal 7:30 am to 8:00 PM</b>  Tue Normal All Day  Wed Normal All Day</p> <p><b>CHANGE</b> <b>BACK</b> <b>HELP</b></p>

Printed on 6/17/2020 12:05 PM CT

## ALARM OUTPUT SETUP MENU

Permits user to set the condition (from a list of options) for when the CCB's integral alarm output relay will be energized. Alarm relay connections (common, normally open, normally closed) are located on the J3 terminal strip on the CCB (page 43). Alarm output relay contacts are capable of switching **1 amp maximum at 120 VAC**.

The alarm relay operates in the background according to the settings in this menu and is not capable of disabling water heater operation. The alarm relay is used for external notification/ verification of various operational conditions such as Fault conditions and heating mode status. This relay can be used with building EMS (Energy Management System) and other external supervisory controls.

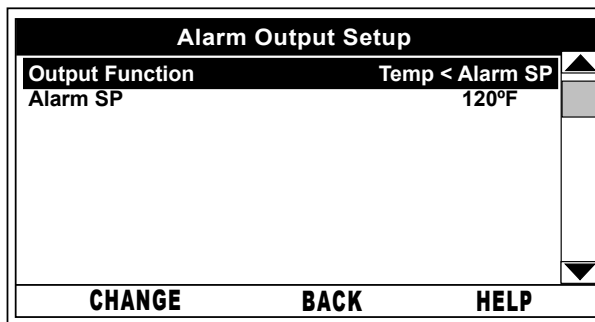
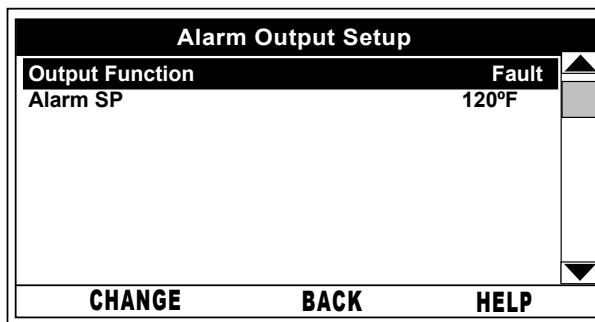
### Output Function

Adjustable user setting. Available options for the Alarm Output Function setting are:

**Heating Mode:** Used for heating mode on/off status notification.

**Enable / Disable Closed:** Used for notification or verification of the enable/ disable circuits open/closed status. There are two enable/disable circuits available for external supervisory control(s) at the J7 socket. See *Central Control Board (CCB)* (page 43). Enable/disable circuit(s) status can be viewed in *Heater Status Menu* (page 55).

**Temp < Heater SP:** Used for external notification when current tank temperature drops below Operating Set Point.



**Temp < Alarm SP:** Used for external notification when current tank temperature drops below the programmable Alarm SP.

**Fault or Alert:** Used for external notification whenever a Fault or Alert condition is active.

**Fault:** Used for notification whenever a Fault condition is active.

**Disabled:** Disables the Alarm Relay Output Function - this is the factory default setting.

### Alarm SP - (Alarm Set Point)

Adjustable user setting (90°F to 190°F) the control system uses for the "Temp < Alarm SP" function described above. This setting has no effect with any other Alarm Output functions.

### Alarm Output Settings

Changing the user settings in this menu is done using the same method outlined in *Temperature Settings* (page 54).

**Service Note:** Adjustable user settings in the Alarm Output Setup menu are unaffected by the Restore Factory Defaults function. See *Restore Factory Defaults Menu* (page 65).

## DISPLAY SETTINGS MENU

Permits user to set display options for viewing information on the UIM's LCD screen.

### Temperature Units

Adjustable user setting that changes temperature units display to Celsius °C or Fahrenheit °F.

### Backlight Delay

Adjustable user setting that determines how long the UIM's LCD backlight remains illuminated after a key has been pressed.

Available settings are; Always Off, 10, 30 or 60 seconds and Always On.

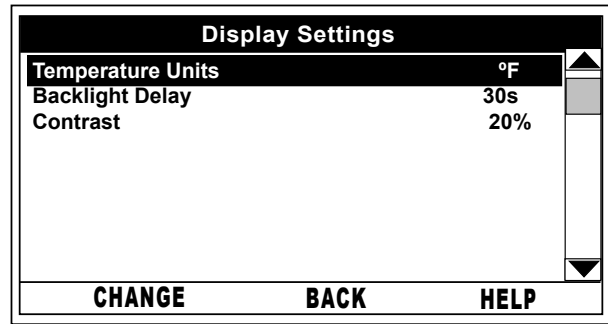
### Contrast

Adjustable user setting to adjust the UIM's LCD screen contrast between text and background.

### Display Settings

Changing the user settings in this menu is done using the same methods outlined in *Commercial Electric water heaters (page 54)*.

**Service Note:** Adjustable user settings in the Display Settings menu are unaffected by *Restore Factory Defaults Menu (page 65)*.



## HEATER INFORMATION MENU

This menu displays non adjustable operational information.

### Elapsed Time

Total accumulated time the control system (water heater) has been energized.

### Total Heating Time

Total accumulated time the control system has been in the heating mode. IE: any heating element(s) has been energized.

### Bank # Cycles

Total accumulated count of heating cycles for each bank of heating elements.

### Bank # On Time

Total accumulated heating on time for each bank of heating elements.

### CCB Version

Software version for Central Control Board. See *Central Control Board (CCB)* (page 43).

### UIM Version

Software version for User Interface Module.

Top Of Menu

Heater Information	
Elapsed Time	7 days 18 hrs 35 mins
Total Heating Time	2 days 46 mins
Cycle Count	00000042
Element 1 Cycles	00000035
Element 1 On Time	
BACK HELP	

Bottom Of Menu

Heater Information	
Element 2 On Time	1 days 4 hrs 44 mins
Element 3 Cycles	00000025
Element 3 On Time	8 hrs 30 mins
CCB Version	0.00
UIM Version	0.00
BACK HELP	

## CURRENT FAULT / ALERT MENU

This menu displays non adjustable operational information. With the Fault History sub menu selected in Main Menu, press the Operational Button underneath "SELECT" to display the current Fault or Alert message. If there is not a Fault or Alert condition currently active, "(none)" is displayed to the right of this menu.

### Fault History Menu

This menu displays non adjustable operational information. The control system records and stores the last 9 Fault and Alert messages in chronological order in this menu. The most recent will be at the top of the list. A time stamp is displayed below each listed Fault and Alert message showing when the Fault or Alert condition occurred.

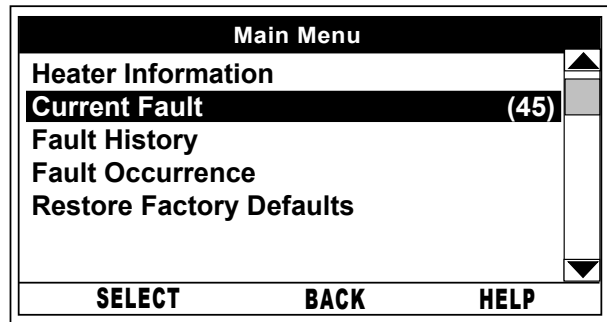
The Fault History is useful when dealing with intermittent operational problems or when the customer has reset the control system prior to a service agent's arrival.

With a Fault or Alert item selected, press the Operational Button underneath "VIEW" to display the details for the Fault or Alert message. The Fault/Alert message screen displays a brief description of the condition, contact information, and access to the Advanced Service information sub menu.


### Fault Occurrence Menu

The total accumulated number of each individual Fault condition that has occurred is displayed in this menu. This running total of Fault Occurrences can be useful in determining which (if any) operational problems have been persistent.


Main Menu - Current Fault Selected




Fault History Menu

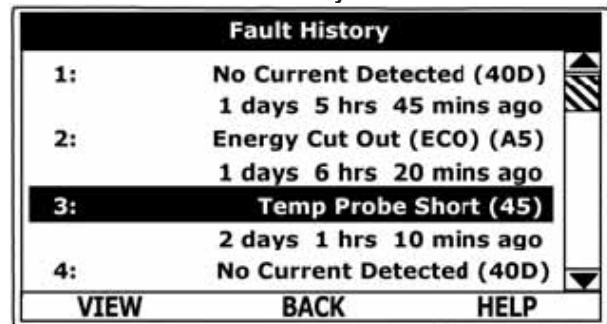

Current / History Fault Message

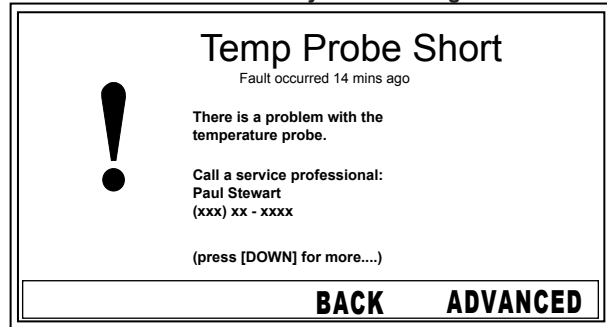

Fault Occurrence Menu

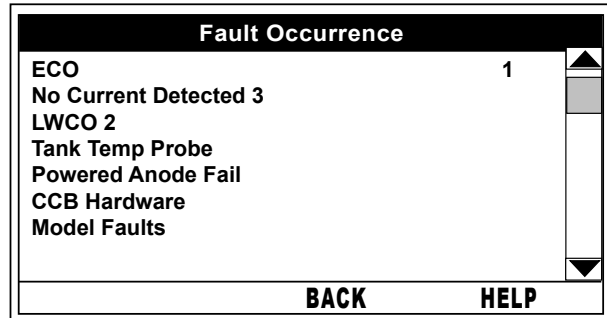



## RESTORE FACTORY DEFAULTS MENU

This control system menu allows the user to restore most of the control system's user settings to their factory default settings. **User settings in the Alarm Output Setup and Display Settings menus are unaffected by executing Restore Factory Defaults.**

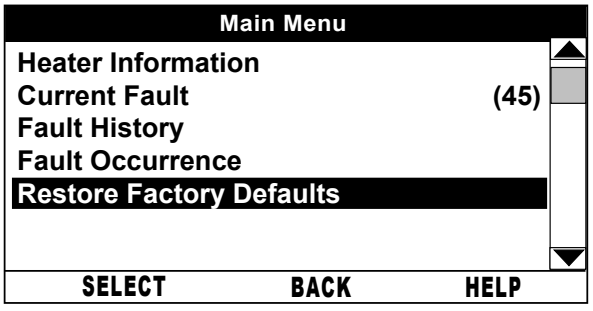
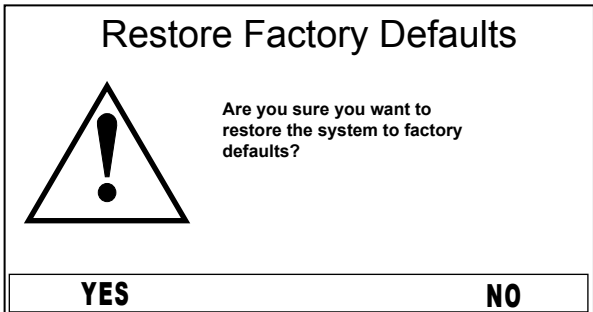
Table 20. Restore Factory Defaults	
ACTION	DISPLAY
<p>From the Main Menu, use the Up/Down buttons to select (highlight in black) the "Restore Factory Defaults" menu.</p> <p>Press the Operational Button underneath "SELECT." The Restore Factory Defaults menu will be displayed.</p>	
<p>From the Restore Factory Defaults menu, press the Operational Button underneath "YES." The display will show text confirming the factory default settings have been restored.</p> <p>Press the Operational Button underneath "BACK" to exit the Restore Factory Defaults menu.</p>	

Table 21. Factory Default User Settings		
TEMPERATURES MENU	DEFAULT SETTING	ADJUSTABLE RANGE
Operating Set Point	120°F (49°C)	90°F to 190°F (32°C to 88°C)
Differential Settings	2°F (1°C)	1°F to 20°F (1°C to 11°C)
Tank Probe Offset	0°F (0°C)	-5°F to +5°F (-3°C to +3°C)
ECONOMY MODE SETUP MENU	DEFAULT SETTING	ADJUSTABLE RANGE
Setpoint Adjustment	20°F (11°C)	2°F to 50°F (1°C to 28°C)
Daily Operating Mode	Normal Operation All Day	See <i>Economy Mode Setup Menu</i> (page 56).
ALARM OUTPUT SETUP MENU	DEFAULT SETTING	ADJUSTABLE RANGE
Alarm Output Function	Disabled	See <i>Alarm Output Setup Menu</i> (page 61).
Alarm SP	100 (38°C)	90°F to 190°F (32°C to 88°C)
DISPLAY SETTINGS MENU	DEFAULT SETTING	ADJUSTABLE RANGE
Temperature Units	°Fahrenheit	°Fahrenheit or °Celsius
Backlight Delay	10 Seconds	Always off/on, 10, 30, 60 Sec
Contrast	30%	20% to 100%

---

# TROUBLESHOOTING

## COMMON SERVICE PROBLEMS

---

### NO HOT WATER

1. Hot water supply valve to fixtures turned off; cold water supply valve to water heater turned off.
2. Check power to the water heater. See *Single- and Three-Phase Power (page 13)*.
3. Check thermostat/ECO controls on Surface Mount Control Models. See *Fuses (page 18)* and *Surface Mount Thermostats (page 19)*.
4. Check *Operating Set Point (page 53)* and *Differential Settings (page 53)*.
5. Check all fuses - see *Fuses (page 18)*.
6. Check heating elements. See *Heating Elements (page 21)*.
7. Ensure both enable/disable circuits at the CCB's J7 plug/socket connection are closed circuits. See *CCB Enable/Disable Circuit(s) Test (page 46)* and *Heater Status Menu (page 55)*.

### NOT ENOUGH HOT WATER

1. Water heater may be undersized.
2. Check thermostat/ECO controls on surface mount control models. See *Surface Mount Control Models (page 8)* and *Thermostat & ECO Test (page 20)*.
3. Check *Operating Set Point (page 53)* and *Differential Settings (page 53)*.
4. On electronic control models, ensure the time is set correctly (daylight savings etc) and ensure that the water heater is not in the Economy Mode during peak demand periods. See *Economy Mode Setup Menu (page 56)*.
5. Ensure the power supply matches the listed voltage on the water heater rating plate. See *Single- and Three-Phase Power (page 13)*.
6. Check hot water supply piping for leaks or restrictions: lime/scale - valve partially closed.
7. Check all fuses - see *Fuses (page 18)*.
8. Check heating elements. See *Heating Elements (page 21)*.
9. Check contactors on electronic control models. See *Contactors (page 30)*.
10. Check both enable/disable circuits at the CCB's J7 socket on Electronic Control Models. If either/both circuits are being used by a supervisory control(s) check that control's settings to ensure it is not disabling heating operation during occupied/normal demand periods. See *CCB Enable/Disable Circuit(s) Test (page 46)* and *Heater Status Menu (page 55)*.

## WATER HEATER TRIPS BREAKER

1. Ensure the power supply breaker/fusing to the water heater meets the minimum required fuse/wire/breaker sizing. See the listed voltage and amperage on the water heater rating plate. See *Single- and Three-Phase Power (page 13)*.
2. Ensure the internal power supply phase wiring is configured correctly. See *Phase Conversions - Surface Mount Control Models (page 16)* and *Phase Conversions - Electronic Control Models (page 17)*.
3. Check for grounded heating elements. See *Heating Element Ground Test (page 27)*.
4. Check for pinched/shorted wiring - internal wiring or power supply wiring.

## CONTACTOR CHATTER

Condition: contactors opening and closing rapidly.

1. Ensure the 120 VAC control-circuit transformer is properly configured to match the power supply to the water heater. See *Transformers (page 35)*.
2. Ensure the power supply to the water heater matches the listed voltage on the water heater rating plate. See *Single- and Three-Phase Power (page 13)*.
3. Ensure wiring connections at 120 VAC contactor coil(s) are secure and in good condition. See *Contactor Coil Voltage Test - At Contactor (page 33)*.

## SURFACE-MOUNT CONTROL MODELS

---

See the Common Service Problems above.

## ELECTRONIC CONTROL MODELS

---

The remainder of the Troubleshooting section covers Electronic Control Models only.

## FAULT CONDITIONS

When the control system declares a Fault condition it will display a Fault message on the UIM and lock out. Voltage to the contactor coils and heating elements is terminated to prevent further heating operation.

## ALERT CONDITIONS

When the control system declares an Alert condition it will continue heating but will display an Alert message on the UIM notifying the user that the water heater requires servicing.

## RESETTING CONTROL SYSTEM

Turn the power supply to the water heater off for approximately 20 seconds and then back on. If the operational problem that caused the control system to declare a Fault or Alert condition has not been corrected the control system will continue to display the Alert or Fault message and lock out.

Table 22. Control System Unresponsive

DISPLAYED MESSAGE CONDITION/INDICATES	CHECK/REPAIR
<p><b>UIM Display Is Blank</b></p> <p>UIM is not energized - LCD display is blank.</p> <p>Possible Causes:</p> <ul style="list-style-type: none"> <li>• No power to water heater</li> <li>• Blown control circuit transformer fuses</li> <li>• 120 VAC power problems</li> <li>• 24 VAC power problems</li> <li>• Defective transformer(s)</li> <li>• Wiring or plug/socket connection problems</li> <li>• UIM communication cable problems</li> </ul> <p><b>Important Service Reminder:</b></p> <p>When performing any troubleshooting steps outlined in this service manual always consider the wiring and connectors between components. Perform a close visual inspection of all wiring and connectors to a given component before replacement.</p> <p>Ensure wires were stripped before being crimped in a wire connector, ensure wires are crimped tightly in their connectors. Ensure pins inside plugs/sockets are not damaged or worn, ensure plugs/sockets are mating properly &amp; providing good contact.</p>	<ul style="list-style-type: none"> <li>• Check/restore power supply to the water heater at power distribution block. See <i>Single- and Three-Phase Power (page 13)</i>.</li> <li>• Check control circuit transformer fuses see <i>Figure 2 (page 10)</i> and check <i>Fuses (page 18)</i>.</li> <li>• Check communication cable connections at UIM's J2 Socket (page 55) and the CCB's J11 Port. See <i>Central Control Board (CCB) (page 43)</i>.</li> <li>• Install a new communication cable between UIM's J2 Socket and the CCB's J11 Port - use standard Cat 5 network cable.</li> <li>• Closely inspect communication ports on the CCB and UIM to ensure they are mating properly and providing good contact (pages 50 &amp; 55).</li> <li>• Ensure 120 VAC power/ground is supplied to CCB's J2 Socket; follow procedure <i>Checking Power and Ground to the CCB (page 47)</i>.</li> <li>• Check J1 and J2 plug/socket connections on the CCB - ensure they are mating properly and providing good contact. See <i>Central Control Board (CCB) (page 43)</i>.</li> <li>• Check 24 VAC transformer: follow procedure <i>24 VAC Transformer Test (page 37)</i>.</li> <li>• Call the technical support phone number on the back cover of this manual for further assistance if the problem has not been corrected after performing the procedure outlined here.</li> </ul>
<p><b>UIM is Inoperable</b></p> <p>UIM does not respond to any user input using the operational and/or Up and Down buttons.</p>	<ul style="list-style-type: none"> <li>• Ensure Ribbon Cable from the Button overlay is inserted correctly in UIM J3 Socket. See <i>User Interface Module (UIM) (page 48)</i>.</li> <li>• Call the technical support phone number on the back cover of this manual for further assistance if the problem has not been corrected after performing the procedure outlined here.</li> </ul>
<p><b>Heating Cycle Disabled</b></p> <p>Control System not activating call for heat with cold tank of water.</p> <div data-bbox="381 1522 500 1690" style="text-align: center;"> </div> <p>Thermometer Icon on Desktop Screen (see page 58) appears with diagonal line as shown here.</p> <p><b>Possible Causes:</b></p> <ul style="list-style-type: none"> <li>• Fault condition active</li> <li>• Enable/disable circuit(s) open</li> </ul>	<ul style="list-style-type: none"> <li>• Check for and correct any active Fault condition. See <i>Current Fault / Alert Menu (page 64)</i>.</li> <li>• Check enable/disable circuits - ensure both circuits are closed; follow procedure outlined in <i>Central Control Board (CCB) (page 43)</i>.</li> <li>• Call the technical support phone number on the back cover of this manual for further assistance if the problem has not been corrected after performing the procedure outlined here.</li> </ul>

**FAULT AND ALERT MESSAGES**

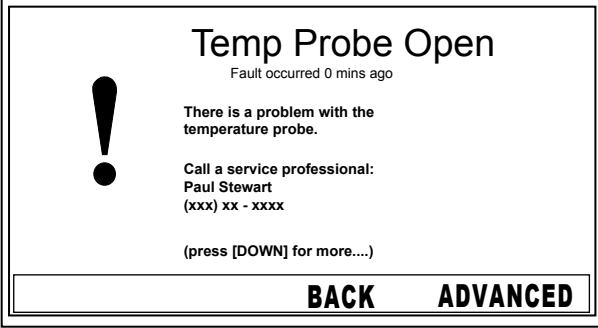
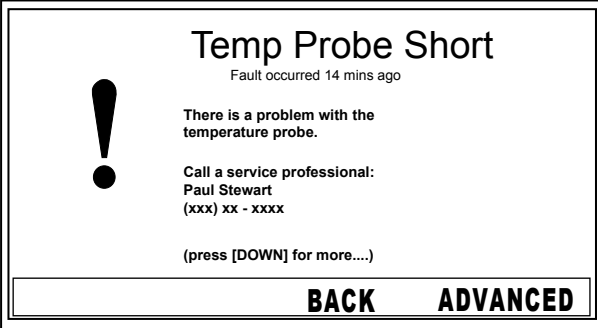
Troubleshooting procedures for the most common Fault and Alert messages are covered in this section. In the tables that follow the first column shows the Fault or Alert message as displayed by the UIM along with an explanation. The second column details things to check or repair and references test procedures detailed in *Operation & Service* (page 11).

**Table 23. FAULT AND ALERT MESSAGES**

Displayed Message Condition/Indicates	Check/Repair
<p><b>“No Current Detected” (Alert Condition)</b></p> <p>The control system has not detected current in one or more heating elements when expected.</p> <p><b>Possible Causes:</b></p> <ul style="list-style-type: none"> <li>• Power supply problem (dead leg on three-phase supply)</li> <li>• Blown power circuit fuses</li> <li>• Defective heating element(s)</li> <li>• Defective contactor(s) Plug/socket connection problems</li> <li>• Defective Element Sensor</li> <li>• Wiring connection problems</li> </ul> <div data-bbox="165 892 764 1220" style="border: 1px solid black; padding: 10px; margin-top: 10px;"> <p style="text-align: center;">Alert:</p> <h2 style="text-align: center;">No Current Detected</h2> <p style="text-align: center; font-size: small;">Alert occurred 14 mins ago</p> <div style="display: flex; align-items: center;"> <div style="font-size: small;"> <p>No current detected in one or more heating circuit(s).</p> <p>Note this is an alert. The unit will continue to heat water in (press [DOWN] for more....)</p> </div> </div> <div style="text-align: center; margin-top: 10px;"> <span style="border: 1px solid black; padding: 2px 10px;"><b>BACK</b></span> <span style="border: 1px solid black; padding: 2px 10px;"><b>ADVANCED</b></span> </div> </div>	<ul style="list-style-type: none"> <li>• Ensure the power supply to the water heater matches the listed voltage on the water heater rating plate. Ensure there is not a dead leg of power on 3Ø models. See <i>Single- and Three-Phase Power</i> (page 13).</li> <li>• Check power circuit fuses - see <i>Fuses</i> (page 18).</li> <li>• Check heating elements. See <i>Heating Elements</i> (page 21).</li> <li>• Check contactors. See <i>Contactors</i> (page 30).</li> <li>• Check power circuit wiring to heating elements from power distribution block (or contactor on single element models), to fuse blocks, to contactors, to heating elements. See the wiring diagram on water heater and <i>Contactor Configurations</i> illustrations (page 31). Correct any miswiring. Repair or replace damaged wiring as necessary.</li> <li>• Check the element sensor J12, J13, and J14 plug/socket connections at the CCB for wear or damage. See (page 28). Ensure they are mating properly and providing good contact. See <i>Central Control Board (CCB)</i> (page 43) for location.</li> <li>• Check element sensors. See <i>Element Sensors</i> (page 28). Replace any element sensors determined to be defective.</li> <li>• Call the toll free technical support phone number on the back cover of this manual for further assistance if the problem has not been corrected after performing the procedures outlined here.</li> </ul>


Printed on 6/17/2020 12:05 PM CT

Table 23. FAULT AND ALERT MESSAGES

Displayed Message Condition/Indicates	Check/Repair
<p><b>“Temp Probe Open” (Fault Condition)</b></p> <p>The control system has detected an open circuit from the temperature sensor. The control system will declare this Fault condition if it senses a resistance above 56,000 ohms from the temperature sensor.</p> <p><b>Possible Causes:</b></p> <ul style="list-style-type: none"> <li>• Plug/socket connection problems Wiring connection problems</li> <li>• Defective immersion temperature probe</li> </ul> <div data-bbox="118 590 712 915" style="border: 1px solid black; padding: 10px;">  <p>The alert screen for 'Temp Probe Open' features a large exclamation mark icon on the left. The text reads: 'Temp Probe Open', 'Fault occurred 0 mins ago', 'There is a problem with the temperature probe.', 'Call a service professional: Paul Stewart (xxx) xx - xxxx', and '(press [DOWN] for more....)'. At the bottom, there are two buttons labeled 'BACK' and 'ADVANCED'.</p> </div>	<ul style="list-style-type: none"> <li>• Check the J5 plug/socket connections at the CCB ensure they are mating properly and providing good contact. Check the pins inside the J5 plug/socket for wear or damage. See <b>Central Control Board (CCB) (page 43)</b>. Replace damaged plug connectors/wiring harness as necessary.</li> <li>• Check for pinched or broken wiring between the immersion temperature probe and the J5 plug/socket connection on the CCB. Repair or replace damaged wiring as necessary. See CCB illustration and socket identification <b>Central Control Board (CCB) (page 43)</b>.</li> <li>• Check the resistance of the temperature sensor inside the immersion temperature probe. See <b>Immersion Temperature Probe</b> (page 38). Replace the Immersion Temperature Probe if measured resistance is above 56,000 ohms.</li> <li>• Call the toll free technical support phone number on the back cover of this manual for further assistance if the problem has not been corrected after performing the procedures outlined here.</li> </ul>
<p><b>“Temp Probe Short” (Fault Condition)</b></p> <p>The control system has detected a shorted circuit in the temperature sensor. The control system will declare this Fault condition if it senses a resistance below 390 ohms from the temperature sensor.</p> <p><b>Possible Causes:</b></p> <ul style="list-style-type: none"> <li>• Shorted wiring</li> <li>• Defective immersion temperature probe</li> </ul> <div data-bbox="118 1367 712 1692" style="border: 1px solid black; padding: 10px;">  <p>The alert screen for 'Temp Probe Short' features a large exclamation mark icon on the left. The text reads: 'Temp Probe Short', 'Fault occurred 14 mins ago', 'There is a problem with the temperature probe.', 'Call a service professional: Paul Stewart (xxx) xx - xxxx', and '(press [DOWN] for more....)'. At the bottom, there are two buttons labeled 'BACK' and 'ADVANCED'.</p> </div>	<ul style="list-style-type: none"> <li>• Check for pinched or shorted wires between the J5 plug/socket connection on the CCB and the immersion temperature probe. Repair or replace damaged wiring as necessary. See CCB illustration and socket identification in <b>Central Control Board (CCB) (page 43)</b>.</li> <li>• Check the resistance of the temperature sensor inside the immersion temperature probe. See <b>Immersion Temperature Probe</b> (page 38). Replace the Immersion Temperature Probe if measured resistance is below 390 ohms.</li> <li>• Call the toll free technical support phone number on the back cover of this manual for further assistance if the problem has not been corrected after performing the procedures outlined here.</li> </ul>


Printed on 6/17/2020 12:05 PM CT

Table 23. FAULT AND ALERT MESSAGES

Displayed Message Condition/Indicates	Check/Repair
<p><b>“Energy Cut Out (ECO)” (Fault Condition)</b></p> <p>The control system has detected excessive water temperature inside the water heater. The ECO high temperature limit switch activates at 202°F/94°C. See <i>ECO High Temperature Limit Switch (page 38)</i>.</p> <p>Possible Causes:</p> <ul style="list-style-type: none"> <li>• Plug/socket connection problems Wiring connection problems Contactor(s) stuck closed</li> <li>• Contactor coils being energized in standby mode Defective immersion temperature probe</li> <li>• Water piping problems</li> </ul> <div data-bbox="165 682 755 1008" style="border: 1px solid black; padding: 10px; margin: 10px 0;"> <div style="text-align: center;">  <h3 style="margin: 0;">Energy Cut Out (ECO)</h3> <p style="font-size: small; margin: 0;">Fault occurred 0 mins ago</p> <p style="font-size: x-small; margin: 0;">Tank temperature is excessive. The water heater has been disabled.</p> <p style="font-size: x-small; margin: 0;">Call a service professional: Paul Stewart (xxx) xx - xxxx</p> <p style="font-size: x-small; margin: 0;">(press [DOWN] for more....)</p> <div style="display: flex; justify-content: space-around; border-top: 1px solid black; padding-top: 5px;"> <span><b>BACK</b></span> <span><b>ADVANCED</b></span> </div> </div> </div>	<ul style="list-style-type: none"> <li>• Check the J5 plug/socket connection at the CCB ensure they are mating properly and providing good contact. Check the pins inside the J5 plug/socket for wear or damage. See CCB illustration and socket identification <i>Central Control Board (CCB) (page 43)</i>. Replace damaged plug connectors/wiring harness as necessary.</li> <li>• Check for pinched or broken wiring between the immersion temperature probe and the J5 plug/ socket connection on the CCB. Repair or replace damaged wiring as necessary. See <i>Central Control Board (CCB) (page 43)</i>.</li> <li>• Check ECO continuity and for 120 VAC to and from the ECO. See <i>ECO Continuity Test (page 40)</i>. Replace immersion temperature probe if ECO switch contacts remain open at normal operating temperatures.</li> <li>• Ensure the contactors are not stuck closed. See <i>Contactors (page 30)</i>.</li> <li>• Ensure the contactor coils are not being energized during standby mode. See <i>Contactor Coil Voltage Test - At Contactor (page 33)</i> and <i>Contactor Coil Voltage Test - At CCB (page 34)</i>.</li> <li>• Check water system piping. Ensure heat is not being added to the water heater being serviced by any other heating appliances or heat sources.</li> <li>• Call the toll free technical support phone number on the back cover of this manual for further assistance if the problem has not been corrected after performing the procedures outlined here.</li> </ul>

Printed on 6/17/2020 12:05 PM CT

Table 23. FAULT AND ALERT MESSAGES

Displayed Message Condition/Indicates	Check/Repair
<p><b>“LWCO Fault” (Fault Condition)</b></p> <p>The control system has detected a low water condition in the water heater’s storage tank - see page 47.</p> <p>Possible Causes:</p> <ul style="list-style-type: none"> <li>• No water or low water in tank</li> <li>• Water heater/CCB not properly grounded Plug/socket/wiring connection problems LWCO probe wiring shorted to ground</li> <li>• Heavy calcium/lime accumulation on LWCO probe Defective LWCO probe</li> </ul> <div data-bbox="107 636 706 961" style="border: 1px solid black; padding: 10px; margin: 10px 0;"> <div style="text-align: center;"> <h3>LWCO Fault</h3> <p>Fault occurred 14 mins ago</p>  <p>The low water cut off is sensing a low water condition.</p> <p>Call a service professional: Paul Stewart (xxx) xxx-xxxx</p> <p>(press [DOWN] for more....)</p> <div style="text-align: right; border-top: 1px solid black; padding-top: 5px;"> <span style="margin-right: 20px;"><b>BACK</b></span> <span><b>ADVANCED</b></span> </div> </div> </div>	<ul style="list-style-type: none"> <li>• Ensure the water heater is full of water. Follow the filling instructions in the maintenance section of instruction manual that came with the water heater.</li> <li>• Ensure the water heater is properly grounded - see grounding instructions in the instruction manual that came with the water heater and <b>Grounding</b> instructions (<i>page 6</i>) in this manual.</li> <li>• Ensure the CCB is properly grounded - see the <b>Checking Power and Ground to the CCB</b> (<i>page 47</i>). Ensure the ground wire leading from pin 2 of the J2 plug on the CCB is securely connected to ground and the wire was properly stripped and crimped in its connector. See <b>Central Control Board (CCB)</b> (<i>page 43</i>).</li> <li>• Check the J10 plug/socket connection at the CCB ensure they are mating properly and providing good contact. See CCB illustration and socket identification on pages 50 - 52.</li> <li>• Check for pinched/broken/shorted wiring between the LWCO probe and the J10 plug/ socket connection on the CCB - repair or replace damaged wiring as necessary. See CCB illustration and socket identification on pages 50 - 52.</li> <li>• Remove the LWCO probe and inspect for damage and/or heavy calcium/lime accumulation clean and/or replace the LWCO probe as necessary - see page 47.</li> <li>• Call the toll free technical support phone number on the back cover of this manual for further assistance if the problem has not been corrected after performing the procedures outlined here.</li> </ul>

Printed on 6/17/2020 12:05 PM CT



Table 23. FAULT AND ALERT MESSAGES

Displayed Message Condition/Indicates	Check/Repair
<p> <b>“No Anode Current”</b>  <b>“Low Anode Protection”</b>  <b>“No Anode Voltage” (Alert Condition)</b> </p> <p>The control system has detected one of three potential problems with the powered anode rod (on models so equipped) - see page 48.</p> <p>Possible Causes:</p> <ul style="list-style-type: none"> <li>No water or low water in tank</li> <li>Water heater/CCB not properly grounded Plug/socket/wiring connection problems Powered anode rod/wiring shorted to ground Heavy calcium/lime accumulation on anode Defective powered anode rod.</li> </ul> <div data-bbox="165 709 764 1041" style="border: 1px solid black; padding: 10px; margin-bottom: 10px;"> <p style="text-align: center;">Alert: <b>No Anode Current</b></p> <p style="text-align: center; font-size: small;">Alert occurred 14 mins ago</p> <div style="display: flex; align-items: center;"> <div> <p style="font-size: small;">The power anode(s) are not drawing any current.</p> <p style="font-size: x-small;">Note this is an alert. The unit will continue to heat water in (press [DOWN] for more....)</p> </div> </div> <p style="text-align: center; font-weight: bold; margin-top: 10px;">BACK    ADVANCED</p> </div> <div data-bbox="165 1075 764 1407" style="border: 1px solid black; padding: 10px;"> <p style="text-align: center;">Alert: <b>Low Anode Protection</b></p> <p style="text-align: center; font-size: small;">Alert occurred 14 mins ago</p> <div style="display: flex; align-items: center;"> <div> <p style="font-size: small;">The power anode(s) are providing lower than anticipated protection.</p> <p style="font-size: x-small;">Note this is an alert. The unit will continue to heat water in (press [DOWN] for more....)</p> </div> </div> <p style="text-align: center; font-weight: bold; margin-top: 10px;">BACK    ADVANCED</p> </div>	<ul style="list-style-type: none"> <li>Ensure the water heater is full of water. Follow the filling instructions in the maintenance section of instruction manual that came with the water heater.</li> <li>Ensure the water heater is properly grounded - see grounding instructions in the instruction manual that came with the water heater and <b>Grounding</b> instructions (page 6) in this manual.</li> <li>Ensure the CCB is properly grounded - see the <b>Checking Power and Ground to the CCB (page 47)</b>. Ensure the ground wire leading from pin 2 of the J2 plug on the CCB is securely connected to ground and the wire was properly stripped and crimped in its connector. See <b>Central Control Board (CCB) (page 43)</b>.</li> <li>Check the J10 plug/socket connection at the CCB ensure they are mating properly and providing good contact. See <b>Central Control Board (CCB) (page 43)</b> for the location. Check for pinched/broken/shorted wiring between the Powered Anode Rod and the J10 plug/socket connection on the CCB - repair or replace damaged wiring as necessary. See <b>Central Control Board (CCB) (page 43)</b> for the location.</li> <li>Remove the powered anode and inspect for damage and/or heavy calcium/lime accumulation clean and/or replace anode as necessary - see page 48.</li> <li>Call the toll free technical support phone number on the back cover of this manual for further assistance if the problem has not been corrected after performing the procedures outlined here.</li> </ul>

Printed on 6/17/2020 12:05 PM CT

# ERROR/FAULT CODES

**Table 24. Error/Fault Codes**

Fault Code	Fault Name	Basic Fault Description/Troubleshooting	Advanced Fault Explanation/Troubleshooting
007, 00E, 00F, 010, 011, 015, 016, 018, 019, 01A, 01F, 020-023, 028-02B, 02D, 030, 031, 033, 036, 037, 039-03C, 043, 044, 04D, 04F, 056, 057, 059-05D, 06C, 06D, 098-09A, 0AF, 0B0, 0B5, 0BB, 0BC, 0C1, 0C3, 0C6, 0C9, 0CE, 0CF, 0D1, 0D4, 0D8, 0DA, 0DC, 1AF, 1B0	Hardware Failure	Internal control failures have been detected. Cycle power to water heater.	Cycle power to the water heater. If the problem persists, replace central control board (CCB).
00D	AC Wires Reversed	The power supply wires have reverse polarity (black and white wires are reversed).	The black power supply wire should measure ~ 120V to ground and the white power supply wire should measure ~0 V to ground. The fault code can also mean poor grounding or other power supply problems.
031, 032, 033, 034, 035, 036, 037, 038	Power Supply Fail	Control has detected a problem with the power supply.	The control has detected a problem with the incoming power supply as seen on 24VAC transformer. Error Code 38-2 indicates low supply voltage. Minimum supply voltage is 102 VAC. Error Code 34-1 indicates high supply voltage. Maximum supply voltage is 132VAC.
045	Upper Temp Probe (Short)	The indicated temperature Probe may be shorted or open. Check connector and resistance of Probe.	The indicated temperature probe appears to be shorted (very low resistance) or is open (very high resistance). This fault code often means the connector has been corroded by cleaning chemicals or other substances.
046	Lower Temp Probe (Short)		
047	Upper Temp Probe (Open)		
048	Lower Temp Probe (Open)		
049	Recirc Temp Probe Short		
04A	Recirc Temp Probe Open		
04B	Flue Gas Temp Probe Short		
04C	Flue Gas Temp Probe Open		
050	Recirc Temp High Limit	The recirculation temperature exceeds high limit setpoint	The recirculation temperature as measured in the recirculation loop probe exceeds the temperature high limit. This will auto clear when temperature drops.
051	Flue Gas Temp High Limit	Temperature exceeds flue high limit setpoint	The temperature as measured in the flue gas probe exceeds the temperature high limit. This will auto clear when temperature drops.
057, 058	Flame Sensor (Short)	Flame Sensor rod may be grounded or water present in combustion chamber.	The Flame Sensor rod appears to be grounded (touching the burner) or water may be present in combustion chamber. Check for continuity between Flame Sensor and ground (tank). This fault code can also mean the Flame Sensor is too close to the burner. If flame sensor is touching the burner, loosen the screw and adjust the sensor's position.
054	Temp High Limit	The primary temperature exceeds high limit setpoint	The temperature as measured in the primary probe (upper if two probes) exceeds the temperature high limit setpoint. This will auto clear when temperature drops below high limit setpoint - high limit differential
41B	Slave Comm Failure	Communication between the CCB and one or more slave modules has been lost.	To distinguish which slave module(s) has lost communication open the electrical cabinet. Each module has a green status LED. This LED will start to blink rapidly if communication has been lost. Cycle the system power, check the communication cables or replace the module.

Printed on 6/17/2020 12:05 PM CT

**Table 24. Error/Fault Codes**

<b>Fault Code</b>	<b>Fault Name</b>	<b>Basic Fault Description/Troubleshooting</b>	<b>Advanced Fault Explanation/Troubleshooting</b>
0A5	High Temp Limit Exceeded	Energy Cut Off has shut off water heater due to high tank temperature.	The Energy Cut Off (ECO) has shut down the water heater because very high tank temperatures may have occurred. This is usually an ECO fault and not an actual high temperature problem. Check the ECO for proper operation. The ECO is located in the Upper Temperature Probe. Check the two red wires on the Upper Temperature Probe (ECO) for continuity. If the tank temperature is below 160°F (70°) and the ECO is open (high resistance/no continuity) replace Upper Temperature Probe. If tank temperature actually reaches/exceeds 201°F, replace the gas valve and verify correct operation. Heavy scale on Upper Temperature Probe may sometimes cause this fault code.
0A3	Flue ECO Open	Energy Cut Off has shut off water heater due to high flue temperature.	The Flue Energy Cut Off (ECO) has shut down the water heater because very high flue temperatures may have occurred. This is usually an ECO fault and not an actual high temperature problem. Check the ECO for proper operation. The ECO is located in the Flue Temperature Probe. Check the two red wires on the Upper Temperature Probe (ECO) for continuity. If the tank temperature is below 140°F (60°) and the ECO is open (high resistance/no continuity) replace Upper Temperature Probe. If flue temperature actually reaches/exceeds 140°F, replace the gas valve and/or burner may need to be replaced and verify correct operation.
0A6	Low Gas Pressure	Gas pressure is below minimum required to operate this unit. Check gas pressure and switch.	The Low Gas Pressure Switch is detecting gas pressure below the value required for proper operation. Check Low Gas Pressure Switch wiring and connectors. Connectors must be clean and tight. Determine proper minimum gas pressure from data plate. Use manometer or gauge to check gas pressure during all stages of operation with all other appliances firing. If pressure falls below data plate requirement, supply pipe may be too small for application or supply regulator may be operating improperly. If pressure remains above minimum requirement, replace Low Gas Pressure Switch.
A07	Blocked Air Intake	Restriction in air intake. Check intake pipe and termination for blockage.	The Blocked Air Intake Switch has detected a possible restriction in the air intake pipe. Check pipe for restriction or excessive equivalent length. See Installation Manual for pipe size, length and maximum number of elbows. Check actual pipe pressure with a manometer during blower operation. If air pressure is not below switch activation point but switch is open, replace switch.
0A8	Blocked Exhaust	Restriction in exhaust pipe. Check exhaust pipe and termination for blockage.	The Blocked Exhaust Switch has detected a possible restriction in the exhaust pipe. Check pipe for restriction or excessive equivalent length. See Installation Manual for pipe size, length and maximum number of elbows. Check actual pipe pressure with a manometer during blower operation. If air pressure is not above switch activation point but switch is open, replace switch.
0A9	Flame Sensor(error)	Flame Sensor rod detected flame when gas valve should be off. Shut off gas until repaired.	The Flame Sensor rod has detected flame when the gas valve is supposed to be off. Look through sight glass. If flame is present, shut the main gas supply off. If flame is not present, cycle unit off and on. If fault code returns, replace CCB.
0AC	Blower Operation Error	Blower Prover Pressure Switch may have failed closed. Check/replace pressure switch.	The Blower Prover Pressure Switch was detected closed before blower operation. This switch is normally open and is used to prove blower operation. This switch should be open when blower is not running. Check continuity of pressure switch. If closed, replace switch.
1AD	Ext Prv Detect	There is a problem with the external control circuit.	The external control circuit is enabled but open. Verify settings and check the external device.

**Table 24. Error/Fault Codes**

<b>Fault Code</b>	<b>Fault Name</b>	<b>Basic Fault Description/Troubleshooting</b>	<b>Advanced Fault Explanation/Troubleshooting</b>
1AC	Blower Prover Open	The blower prover switch remains open after the blower has been energized.	The control has detected an open blower prover pressure switch during operation. The blower prover pressure switch will close its contacts on a pressure rise.  Possible Causes: 1. Blower prover pressure switch sensing tube disconnected or kinked 2. Loose or open wiring connections to blower prover pressure switch 3. Blower not running when expected 4. Reduced blower performance 5. Blower prover pressure switch out of calibration (replace blower prover switch)
0AE	Igniter Current Error	Igniter current has been detected out of sequence. Cycle power to water heater.	Cycle power to the water heater. If the problem persists, replace central control board (CCB).
1AE	Low Igniter Current	Igniter current is low.	The control has detected low current to hot surface igniter.  This fault occurs when igniter current is low. Possible Causes: 1. Damaged or worn igniter. 2. Loose or open wiring connections to igniter.
0B2	Ignition Failure	Flame not detected. Clean flame rod. Check gas supply.	The control system did not detect flame. Recycle unit off and on and when gas valve icon appears on display, look through the sight glass for a brief blue flame. If flame is present, check flame sense rod. Make sure connector is clean and tight. Remove flame rod and clean with steel wool. Check insulator for soot or damage and replace if necessary. If a brief blue flame was not seen through the sight glass when the gas valve icon was displayed, make sure gas valve connections are clean and tight and gas valve is switched on. Check gas manifold pressure when gas valve icon appears on display. No flame usually means a gas supply or gas valve problem. Also check for restrictions in the heat exchanger. (condensation)
1A9, 0B3	Ignition Failure		
0BD	Auto Test Complete/ Passed	A five second dry fire auto test cycle is complete and has passed. This will only occur on the first complete heating cycle	Recycle power to resume normal operation.
081	Water Leak Detected	A water leak or other water present condition has been detected. Check for leak or other water problem at the water sensor.	Normal operation will continue even though water is detected.
0A4	Condensate Tube Blocked	A blockage of the condensate tube has been detected. Check for blockage and proper drainage.	Recycle power to resume normal operation.
0BE	No Blower Speed Feedback	No signal from the blower speed feedback sensor was detected.	Check to make sure the sensor is connected correctly connector pins seated properly.
0D9	Anode Shorted	The Powered Anode is shorted to earth ground or the tank.	The controller has detected a low resistance or short to earth ground or the tank Possible Causes: 1. Bent anode shorting to tank or element 2. Contamination (solder, loctite, WD40, Etc.) between anode top and surrounding metal 3. Power anode shorted to ground at wire connection
0D6	No Water	No water detected by Powered Anode.	The controller has not detected a voltage potential of water in the tank  Possible Causes: 1. No water or low water in tank 2. Loose or open wiring connections to power anode(s) 3. Power anode shorted to ground at wire connection
FFFF	Undefined Fault	An unknown fault has been encountered by the controller.	Cycle power to the water heater. If the problem persists, replace central control board (CCB) and user interface board (UIM).

**Table 24. Error/Fault Codes**

<b>Fault Code</b>	<b>Fault Name</b>	<b>Basic Fault Description/Troubleshooting</b>	<b>Advanced Fault Explanation/Troubleshooting</b>
4F0	UIM External Flash Memory Fault	The User Interface Module (UIM) has detected a fault with its external flash memory.	Reset power to the unit. If this fault prevails the UIM should be replaced.
4F1	Communication Failure	Communications between the user interface module and the central control board could not be established. Check communication cable	Check communication cable between the user interface module (UIM) and the central control board (CCB). The cable should be connected to J16 on the CCB.
01C	Module disconnected	CCB is expecting a module attached to AIN communications and is not present	Check module power connection. Check for loose connection or damaged communication cable. Replace module or module power supply.
074	Flow Switch Stuck Closed	Flow switch should be open when heater is in Standby state. Warning will persist until detected open in Standby state.	Check for proper installation of flow switch; flow indication arrow must be pointed upward. Check for shorts in the wiring. Replace switch if necessary.
175	Flow Not Detected	Flow was not detected when in Heating state	Check for proper installation of flow switch; flow indication arrow must be pointed upward. Check the wiring that there are no loose connections. Check that pump is running in heating mode, if not check pump wiring and applied 120 VAC in heating state. Replace if not working.
082	Leak Sensor Disconnected	The leak sensor is no longer detected by the controller.	Ensure connection is good at screw terminals J17 pin3 and 4 are good. Check the sensor and wire for damage or corrosion.

Printed on 6/17/2020 12:05 PM CT

**NOTES**

Printed on 6/17/2020 12:05 PM CT

# NOTES

Printed on 6/17/2020 12:05 PM CT

Technical Support: 800-527-1953 • Parts: 800-433-2545 • Fax: 800-644-9306  
[www.hotwater.com](http://www.hotwater.com)

Copyright © 2019. All rights reserved.