


LEGEND

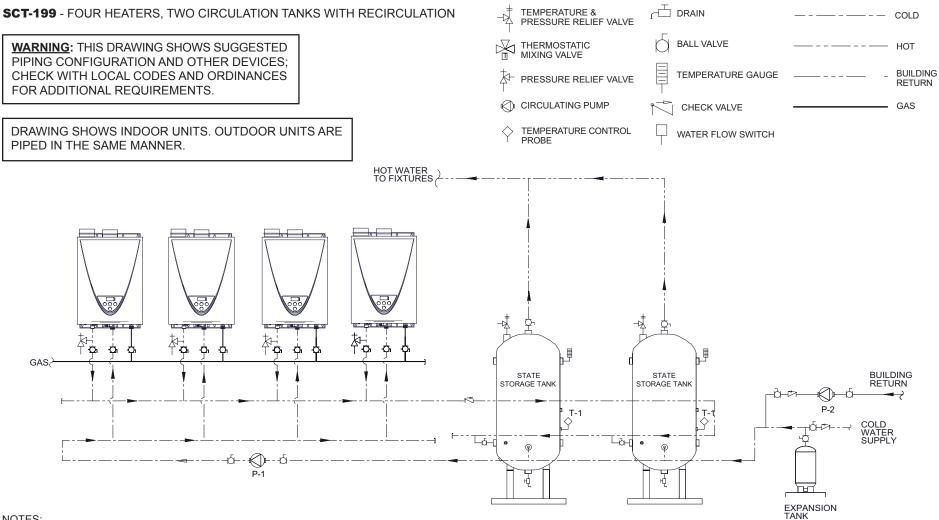

NOTES:

- 1. The tank pump, P-1, should provide 5 GPM per heater at 25' TDH for best capacity and efficiency (losses for piping not included). The pump should be controlled by an aquastat, T-1, having an adjustable differential set to a minimum of 15 F. The best efficiency will be achieved by using the largest differential that delivers acceptable storage temperature in the tank.
- 2. Building recirculation pump, P-2, to be sized, installed, and controlled by the installer.
- Installation of a device to minimize scale deposits, such as the Product Preservers®, water softener, etc. should be considered. Refer to the heater's installation manual for additional information 3 and/or consult with a local water quality expert.
- 4. Gas supply line shall be sized per the heater's installation manual and the current edition of ANSI Z223.1/NFPA 54.
- 5. Automatic air vent should be installed at the highest point in the system for all installations using a circulation pump.
- 6. Drawing shows indoor units. Outdoor units are piped in the same manner.
- 7. If more tanks are necessary, continue to pipe using the reverse return method.

For Technical Information call 800-265-0024 or visit http://www.statewaterheaters.com.

100318928 2000572989 Rev A | PAGE 1 of 1

State Water Heaters reserves the right to make product changes or improvements without prior notice